 
 
 


Insert

for VOLKSWAGEN OWNER'S MANUAL
USA Edition August 1972



— All 1973 VW Models —



Volkswagenwerk Aktiengesellschaft - Wolfsburg

Please note the following changes or additions to the Volkswagen Diagnosis and Maintenance:

All Models

Fuel cap, tank and connections are visually checked at 600 miles, and then every 2000 miles.

The activated charcoal filter, the distributor cap and rotor should be visually checked every 12,000 miles.

Ignition wires, the distributor cap and rotor should be checked every 24,000 miles, and replaced if necessary.

The activated charcoal filter should be replaced every 48,000 miles.

Type 1,3

The oil strainer should be cleaned at 600 miles, and then every 3,000 miles.

Type 2,4

The oil strainer should be cleaned every 18,000 miles.

Automatic Stick Shift and Type 2

The timing vacuum hose should be visually checked every 12,000 miles.

Type 2

The air injection hoses should be visually checked every 24,000 miles.

©1972 Volkswagenwerk Aktiengesellschaft

May not be reproduced or translated in whole or in part without the written consent of Volkswagenwerk AG.
Specifications subject to alteration without notice.

2.02560.043.23 - Printed in Germany 11. 72