


VOLKSWAGEN

4TMV SERIES

MOTOROLA

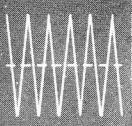

service manual

## GENERAL INFORMATION

This supplement covers changes in the 4TMV series of radios to improve overall performance.

These changes include a revised plated chassis board as well as some resistor and capacitor value changes


(see Supplementary Schematic Diagram and Supplementary Replacement Parts List).

Radios having serial numbers higher than 50,000 will incorporate these changes.

## SUPPLEMENTARY REPLACEMENT PARTS LIST


| Ref. No.           | Part Number | Description   | Ref. No. | Part Number  | Description                                |
|--------------------|-------------|---|----------|--------------|--|
|                    |             | ELECTRICAL PARTS  |          |              |  |
| CAPACITORS - NOTE: |             | The capacitors in this list are recommended replacement types for the original equipment; all are ceramic disc type unless otherwise specified. | R12      | 6R127532     | 33K 10% 1/2W                               |
| C10                | 8C40906A17  | .1mf 100V (USE 8C40906A05)  | R13      | 6R127534     | 820 10% 1/2W                               |
| C11                | 8C40906A06  | .1mf 100V (USE 8C40906A05)  | R20      | 6R127534     | 820 10% 1/2W                               |
| RESISTORS - NOTE:  |             | All resistors are insulated composition type unless otherwise specified.  |          |              | TRANSISTORS                                |
| R8                 | 6R127005    | 5600 10% 1/2W   | V4       | 48R134667    | M54 (GE 2N2712) NPN silicon transistor     |
| R10                | 6R124507    | 68K 10% 1/2W  | V5       | 48R134667    | M54 (GE 2N2712) NPN silicon transistor     |
| R11                | 6R125535    | 39K 10% 1/2W  |          |              | MECHANICAL PARTS                           |
|                    |             |   |          | *84D42590A03 | BOARD, plated chassis: less all components |

\* DENOTES NEW ITEMS APPEARING IN ANY LIST FOR FIRST TIME.

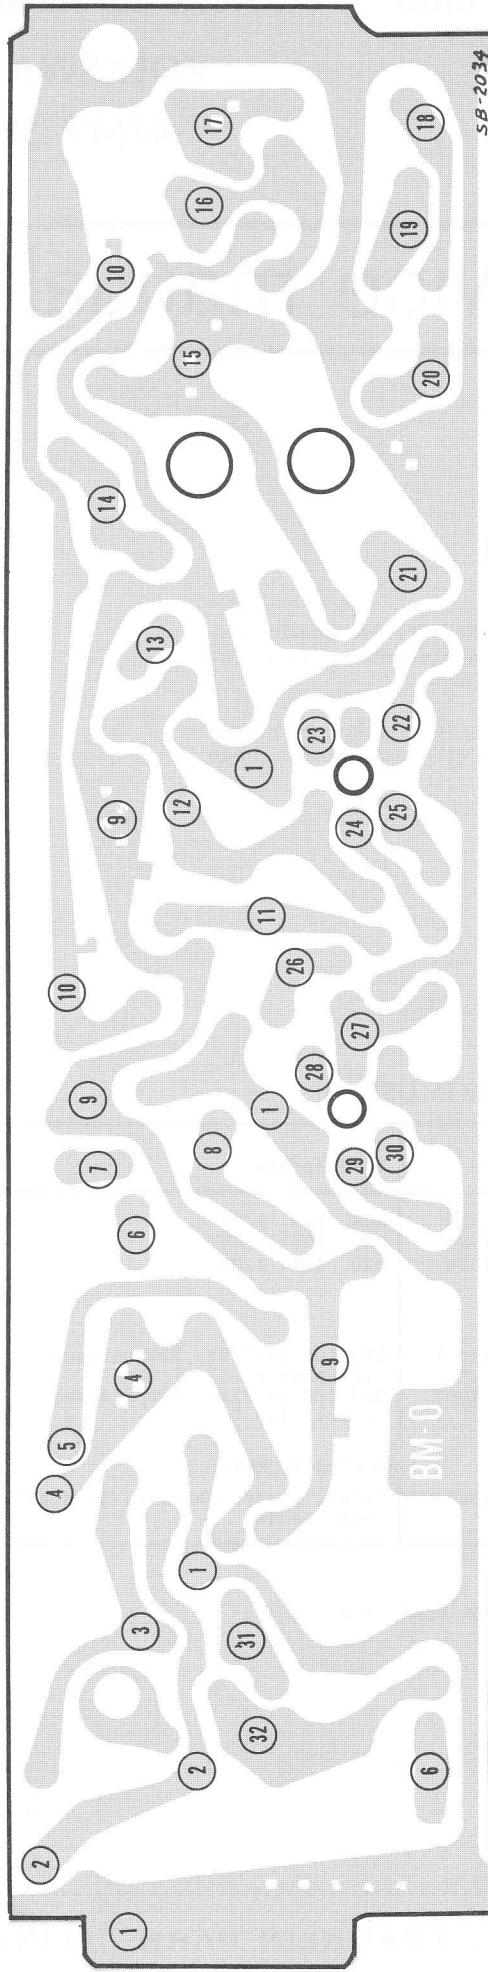

PLATED CHASSIS REFERENCE POINTS FOR SETS USING 84D42590A03 PLATED BOARD  
(BOTTOM VIEW)

SB-2034

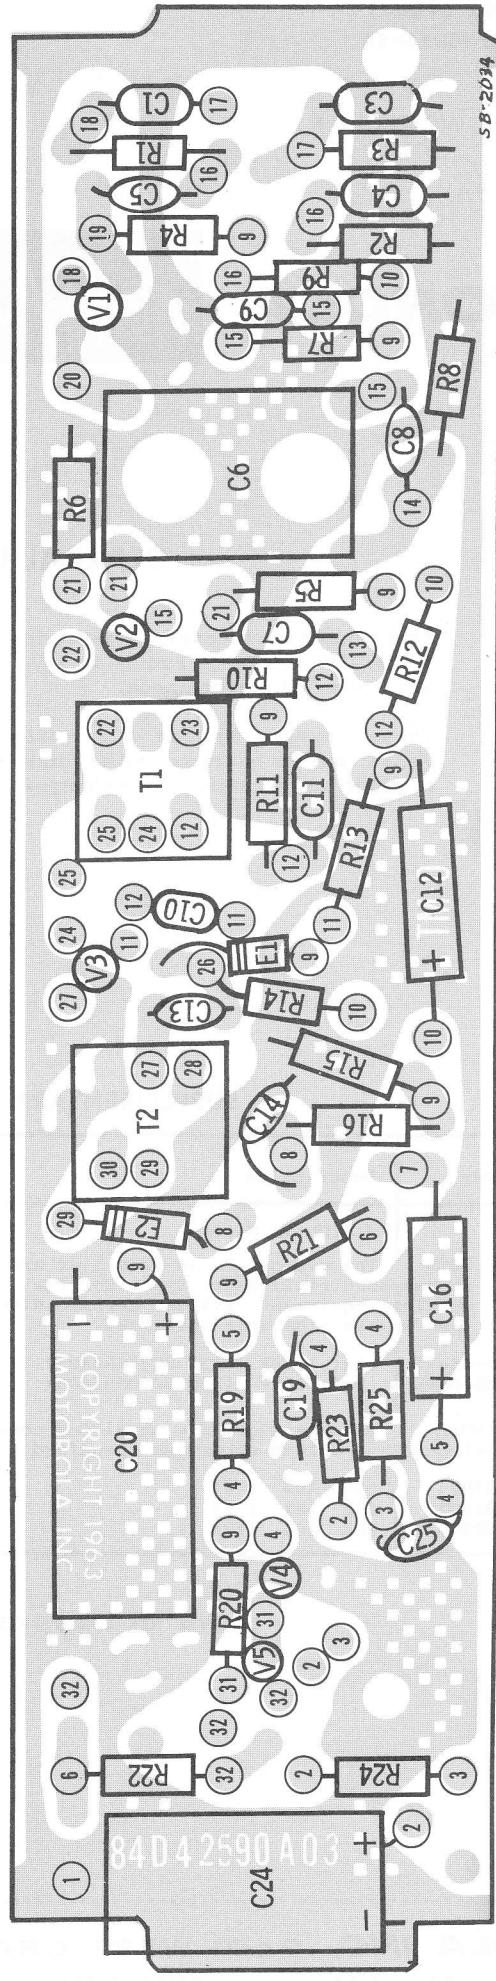

PLATED CHASSIS REFERENCE POINTS FOR SETS USING 84D42590A03 PLATED BOARD  
(TOP VIEW)

SB-2034

## PLATED CHASSIS REFERENCE SYSTEM

All service points accessible on the bottom of the plated chassis have been cross-referenced to the schematic by the circled reference numbers. To check the voltage at the base of the driver transistor, 1) locate the driver transistor base on schematic, 2) check reference number on schematic, 3) locate reference number on bottom view of plated chassis. To locate any specific part of the plated chassis, use the TOP VIEW.

