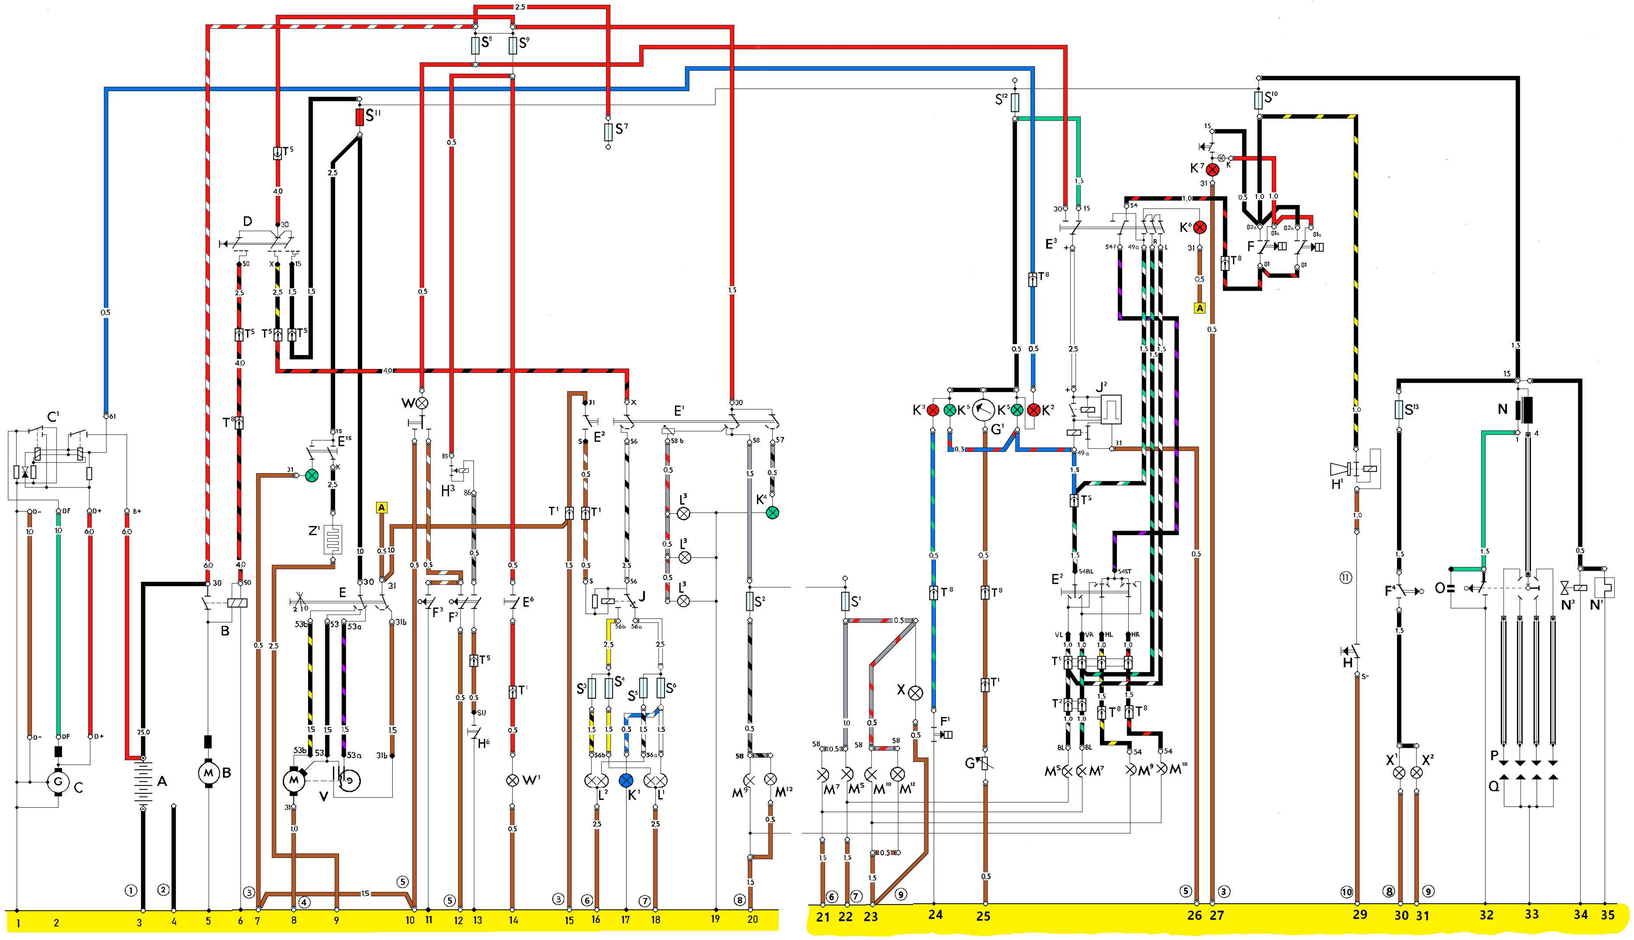

Designation	In current track
A – Battery	3
B – Starter	5-6
C – Generator	1-2
C¹ – Regulator	1-2
D – Ignition / starter switch	6-8
E – Windshield wiper switch	8-10
E¹ – Lighting switch	17-20
E² – Turn signal and headlight dimmer switch	16
E³ – Emergency flasher switch	25-26
E⁶ – Switch for interior light, rear	14
E¹⁵ – Rear window defogger switch	9
F – Brake light switches	27-28
F¹ – Oil pressure switch	24
F² – Door contact switch, left	12-13
F³ – Door contact switch, right	11
F⁴ – Back-up light switch	29
G – Fuel gauge sender unit	25
G¹ – Fuel gauge	25
H – Horn button	28
H¹ – Horn	28
H³ – Ignition key warning buzzer	12-13
H⁶ – Buzzer alarm contact, ignition switch	13
J – Headlight dimmer relay	16-18
J² – Flasher/turn signal relay	15-26
K¹ – High beam warning lamp	17
K² – Generator charging warning lamp	25-26
K³ – Oil pressure warning lamp	24
K⁴ – Parking light warning lamp	20-21
K⁵ – Turn signal warning lamp	24-26
K⁶ – Emergency flasher warning light	26
K⁷ – Brake system warning light	27
K¹⁰ – Rear window defogger warning light	8
L¹ – Headlight, left	18
L² – Headlight, right	16
L³ – Instrument panel light	18-19
M⁵ – Turn signal/parking light, front, left	22
M⁷ – Turn signal/parking light, front, right	21
M⁹ – Tail-, brake-, turn signal light, left, rear	20
M¹⁰ – Tail-, brake-, turn signal light, right, rear	23
M¹² – Sidemarker light, rear	20, 23-24

Designation	In current track
N – Ignition coil	32
N¹ – Automatic choke	34
N³ – Electro-magnetic cut-off valve	33
O – Distributor	30-31
P – Plug connector	31-33
Q – Spark plug	31-33
S¹ to S¹² – Fuses in fuse box	
S¹³ – Separate fuse for reversing lights	29
T¹ – Cable connector, single	
T² – Cable connector, double	
T⁵ – Cable connector, 5 pin	
T⁸ – Cable connector, 8 pin	
V – Wiper motor	8-9
W – Interior light, front	10-11
W¹ – Interior light, rear	14
X – License plate light	23-24
X¹ – Back-up light, left	29
X² – Back-up light, right	30
Z¹ – Rear window defogger heating element	9

① – Ground strap, battery to body
② – Ground strap, transmission to frame
③ -- Grounding tabs, instrument panel insert
④ – Body ground tab, in front of wiper motor
⑤ – Grounding tabs, behind dashboard, left side
⑥ – Ground screw, right headlight bucket
⑦ – Ground screw, left headlight bucket
⑧ – Ground screw, left engine hatch buttress
⑨ – Ground screw, right engine hatch buttress
⑩ – Ground wire, horn button to steering coupling
⑪ – Steering column, tube, & wheel