

DE
BERATER



THE SPARE PARTS ADVISER

LE MAGASINIER-CONSEIL

EL CONSULTOR DE REPUESTOS

INFORMATION FOR THE VW PARTS SERVICE • NO. 24 • DECEMBER 1960

ATTN: PARTS MANAGER

Window Winders

Window Lift Channels

Window Winder Handles

VW Passenger Cars

- 4 Window Winders
- 7 Door Window Lift Channels
- 9 Window Winder Handles

VW Karmann Ghia






- 10 Window Winders
- 11 Window Winder Handles
- 11 Guide Rails with Window Lift Channels
- 12 Door Window Lift Channels

In this list you will find all window winders,
door window lift channels and window winder handles compiled
in numerical order.

The parts are listed under VW Passenger Cars and VW Karmann
Ghia to assist you when selecting parts.

The details are correct as at 1st December 1960.


Will you please make all amendments as they occur.

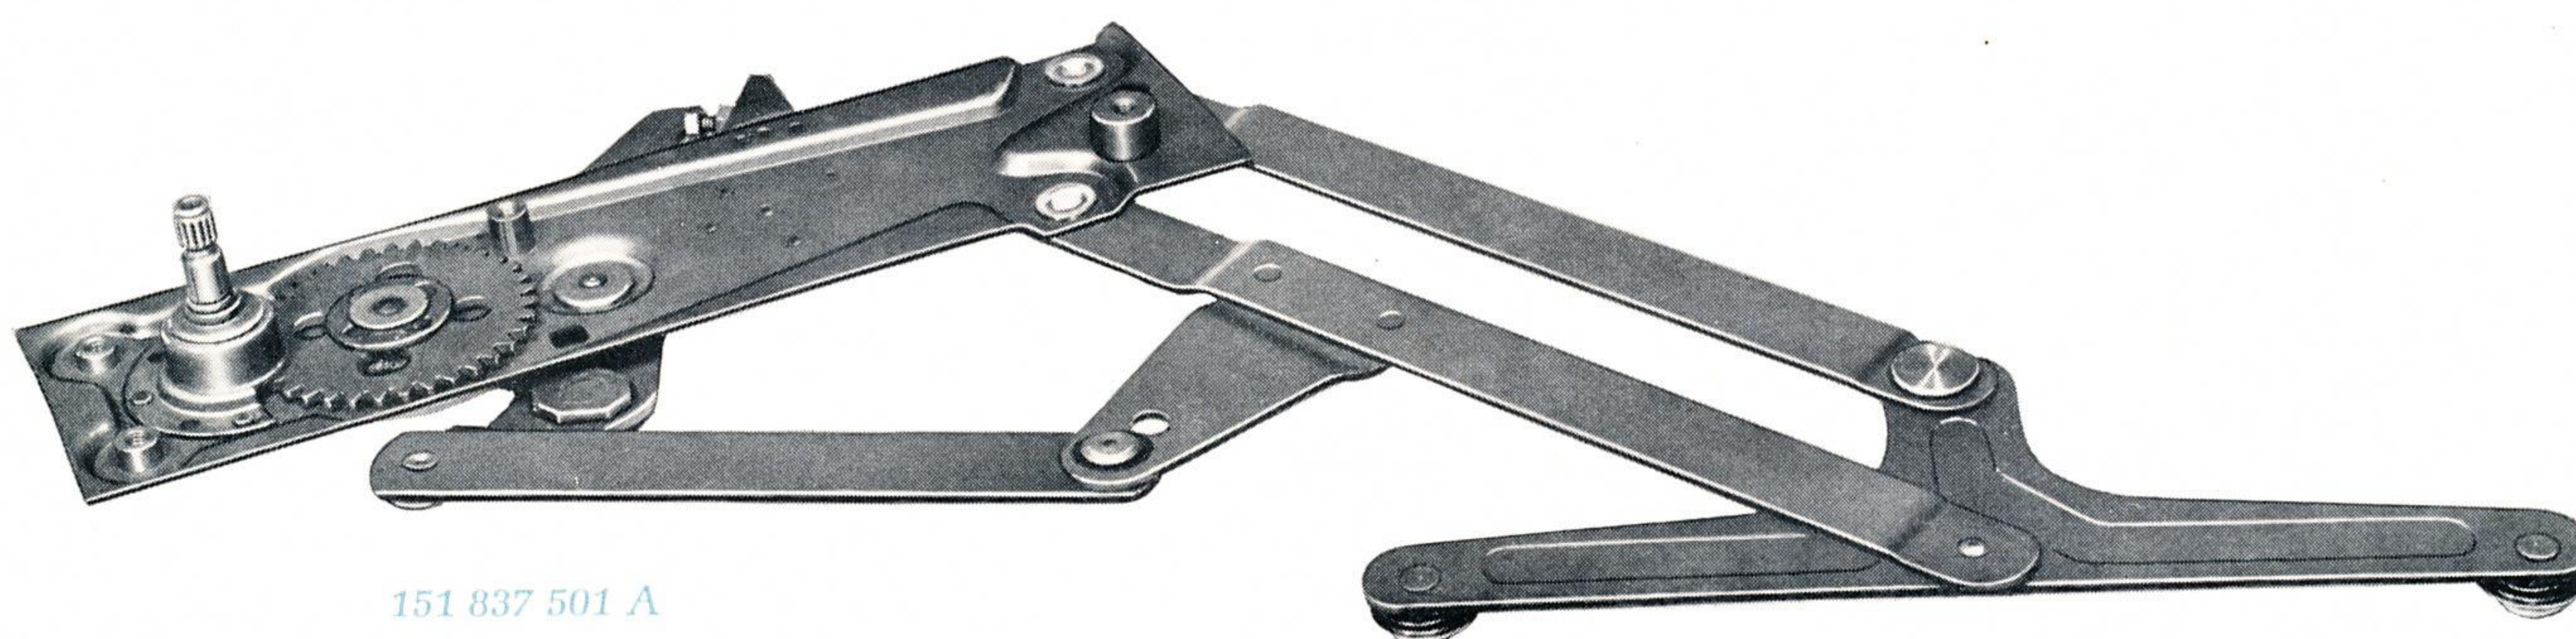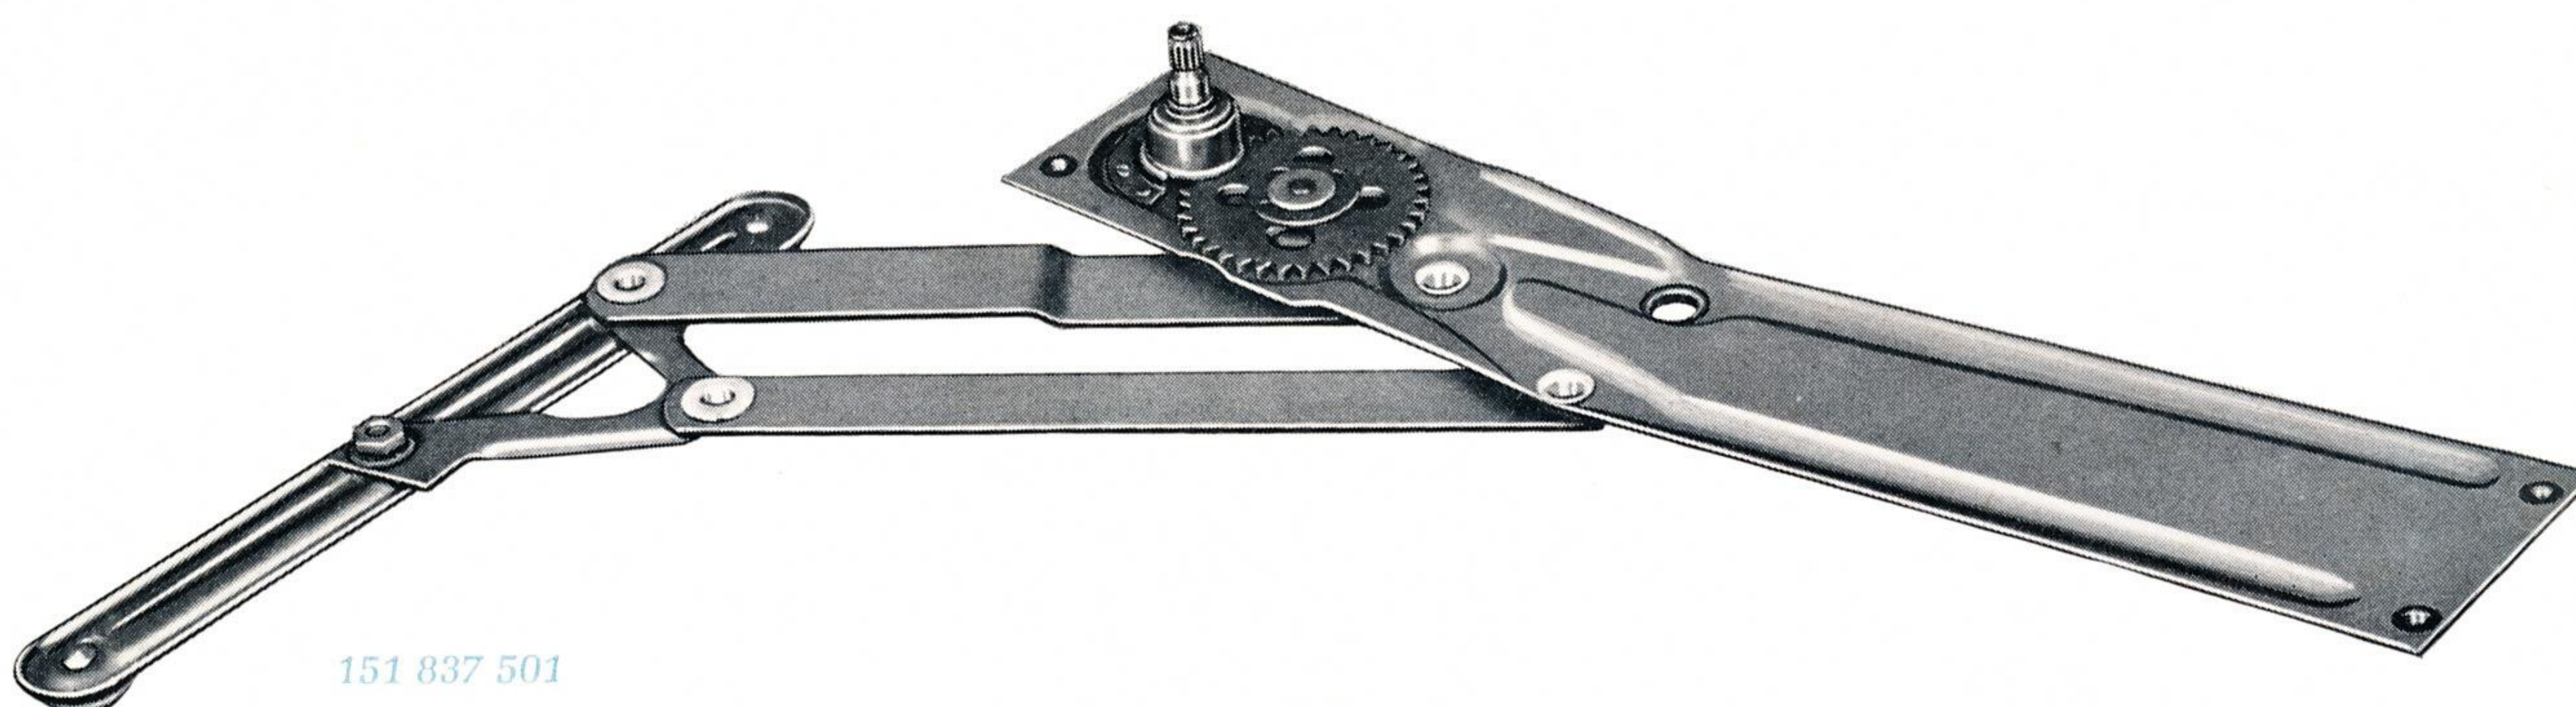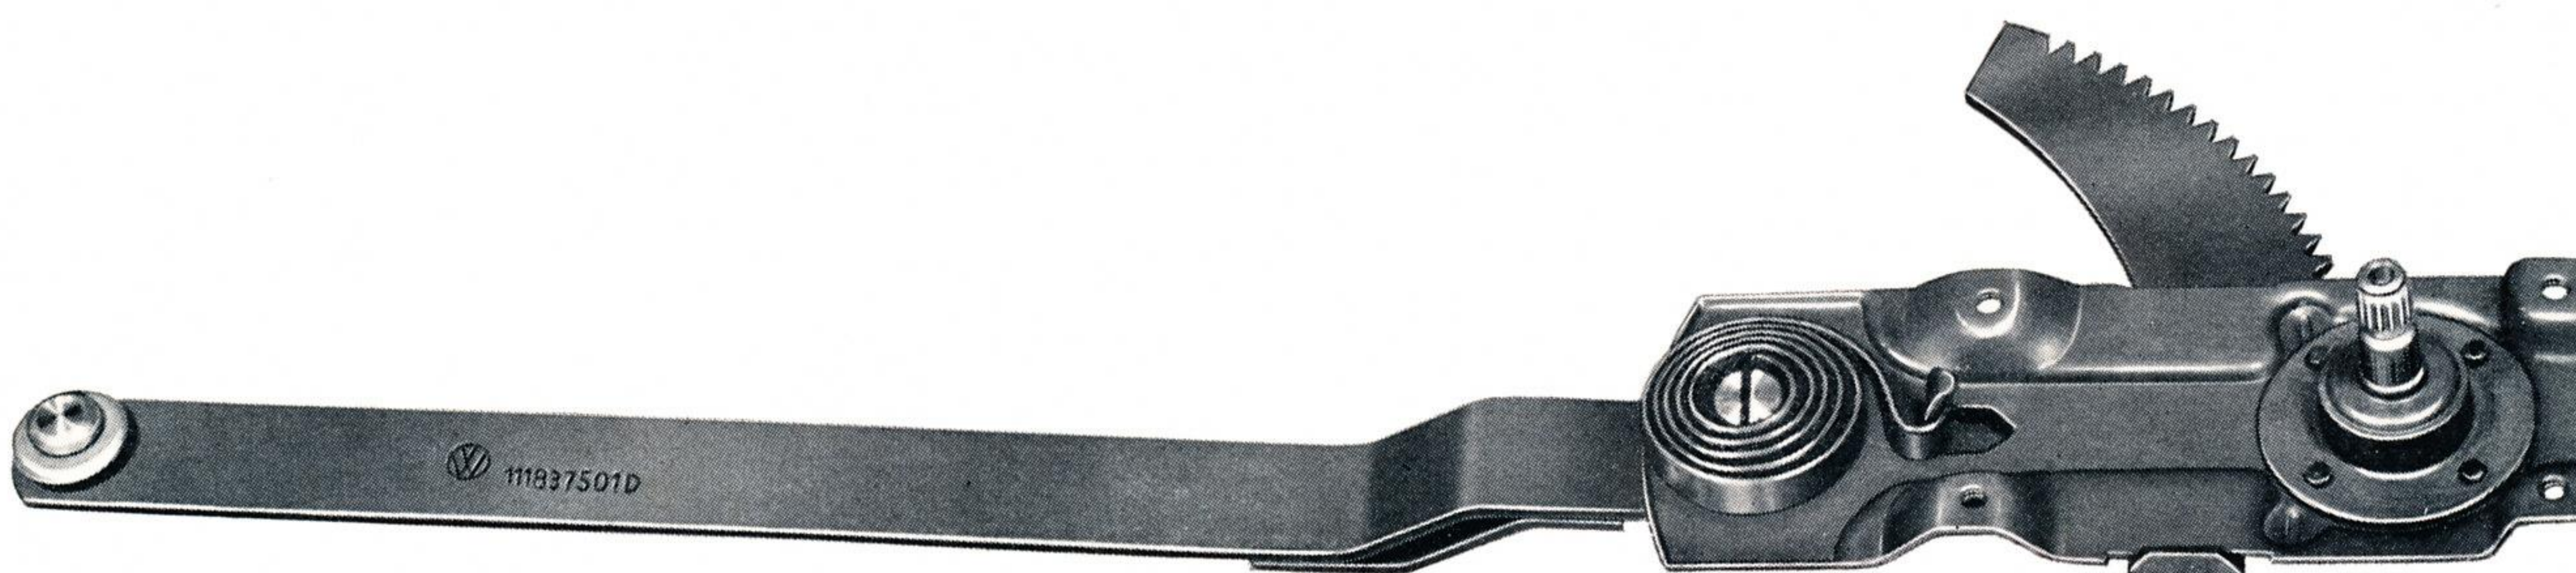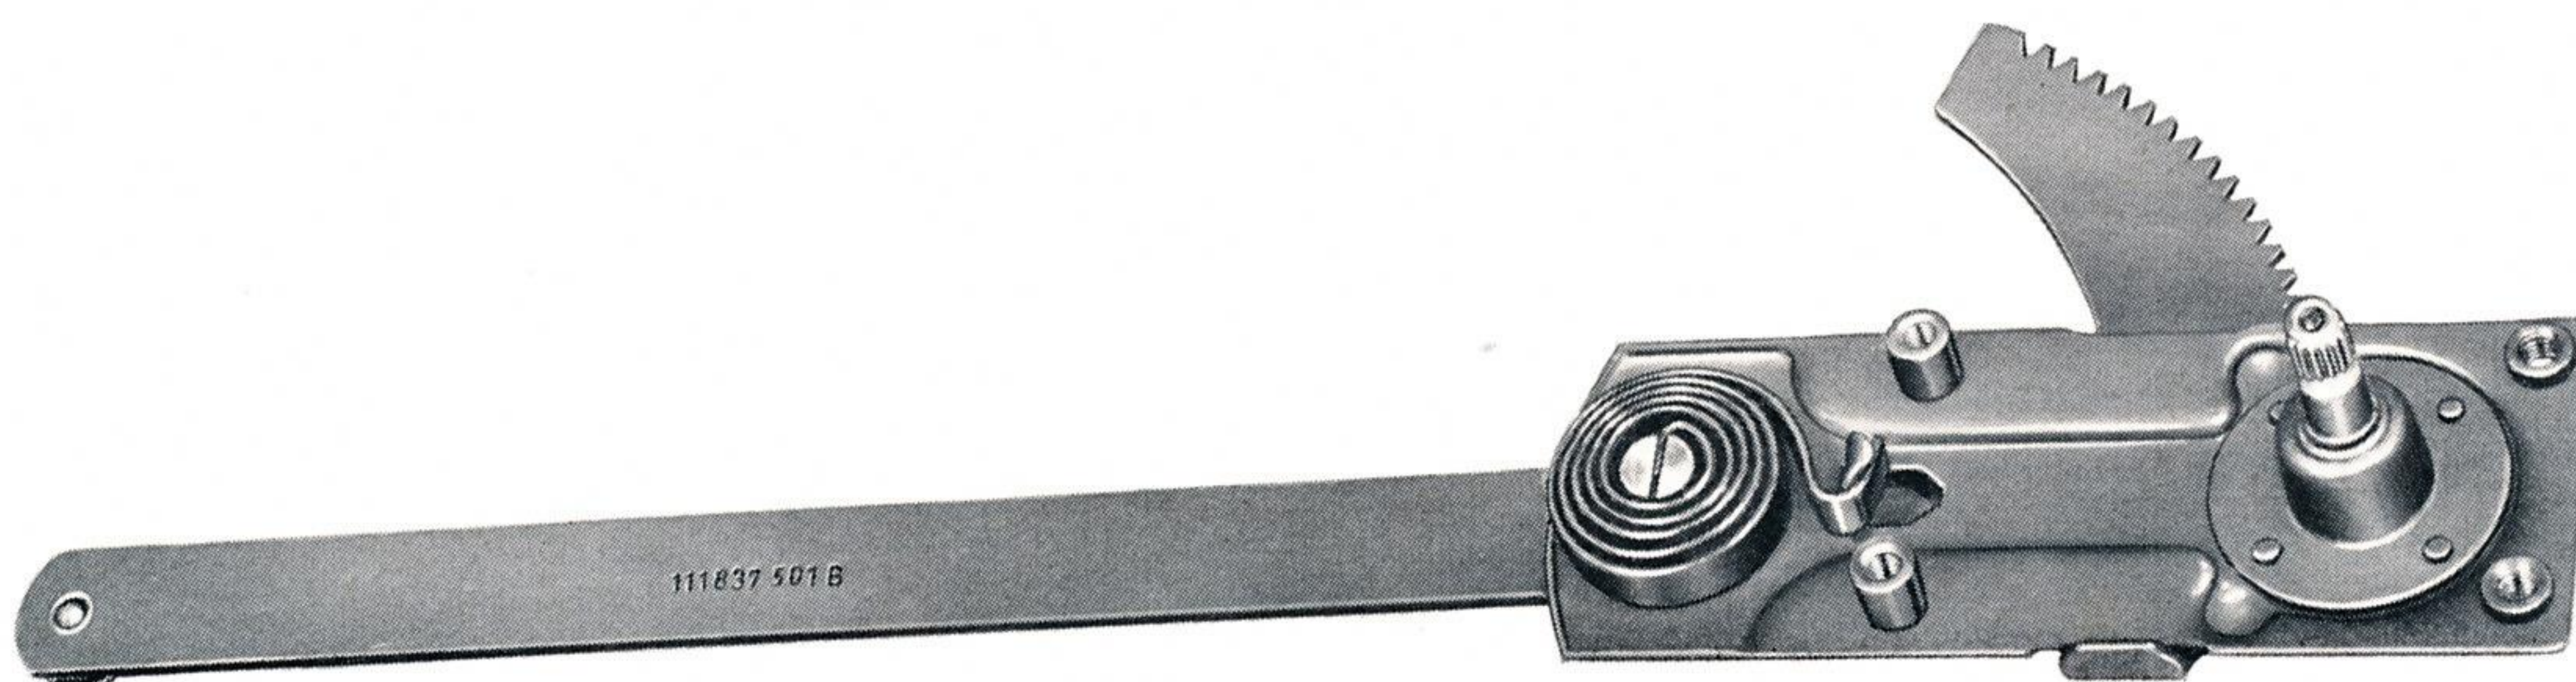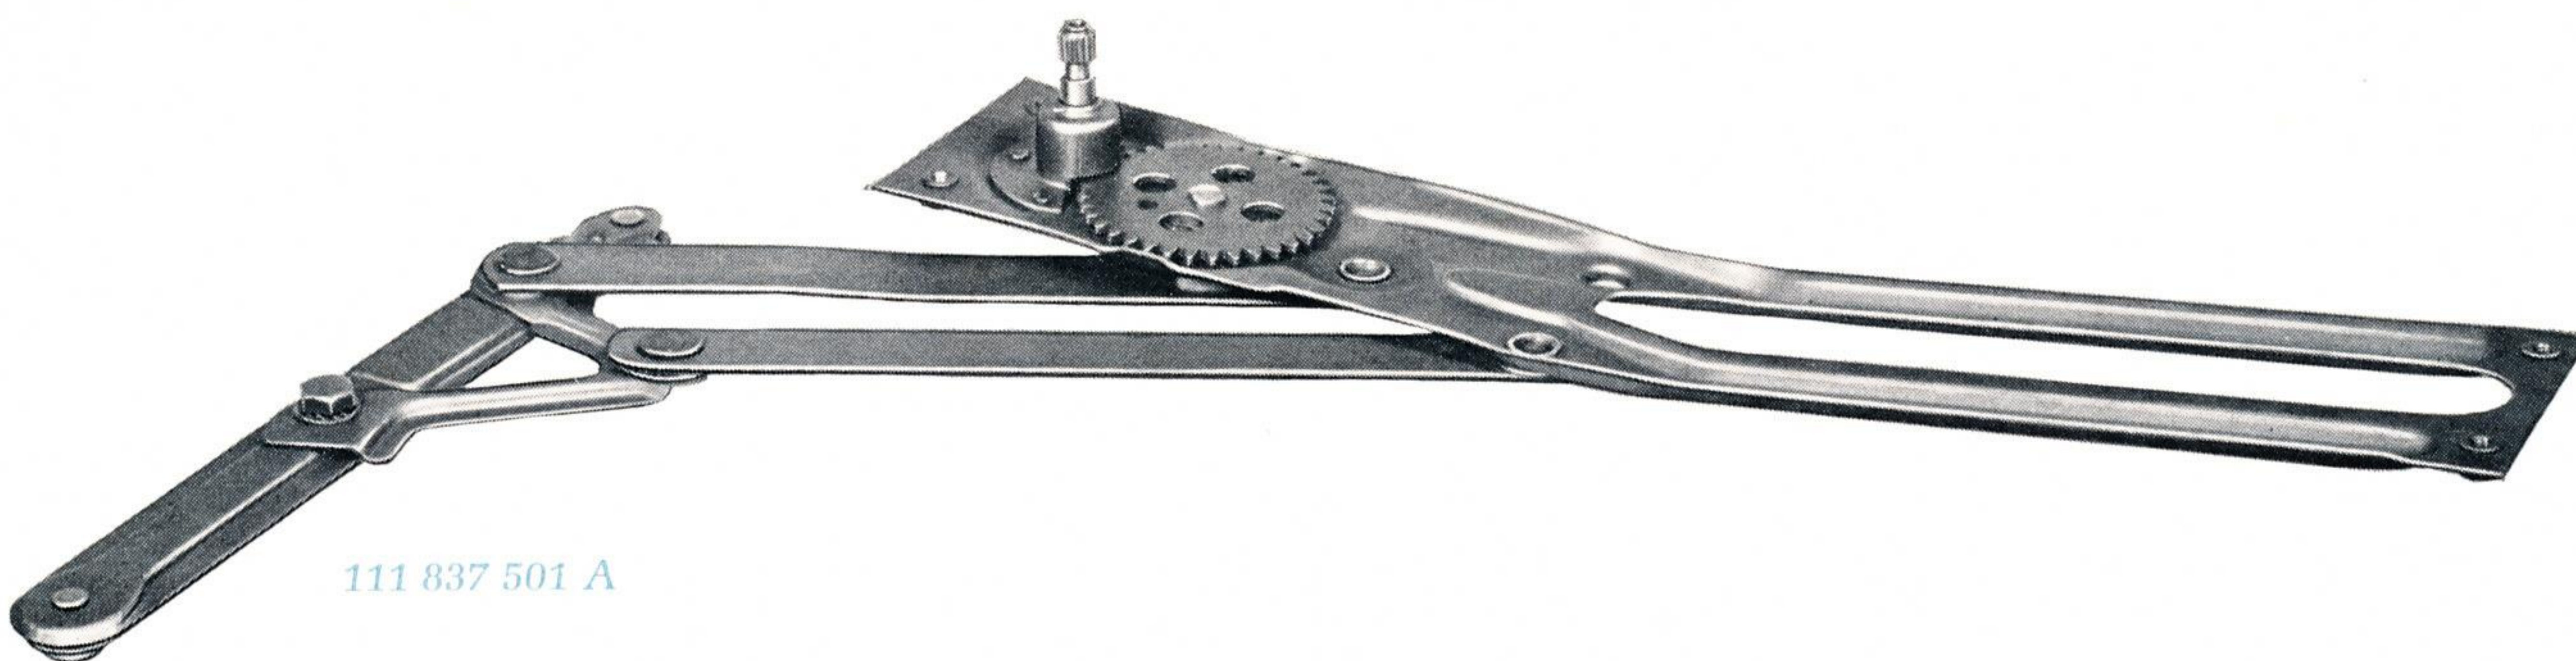


VW Passenger Cars

Window Winders

Part No.	Designation	Model	Used from Chassis No.	up to Chassis No.	Remarks
111 837 501 A	Winder — Door Window, left	111–118		1–397 022	
111 837 501 B	Winder — Door Window, left	111–118	1–397 023	1–929 745	
111 837 501 D	Winder — Door Window, left	111–118	1–929 746		
151 837 501	Winder — Door Window, left	151, 152		1–397 022	
151 837 501 A	Winder — Door Window, left	151, 152	1–397 023	1–929 745	
151 837 501 B	Winder — Door Window, left	151, 152	1–929 746		
111 837 502 A	Winder — Door Window, right	111–118		1–397 022	

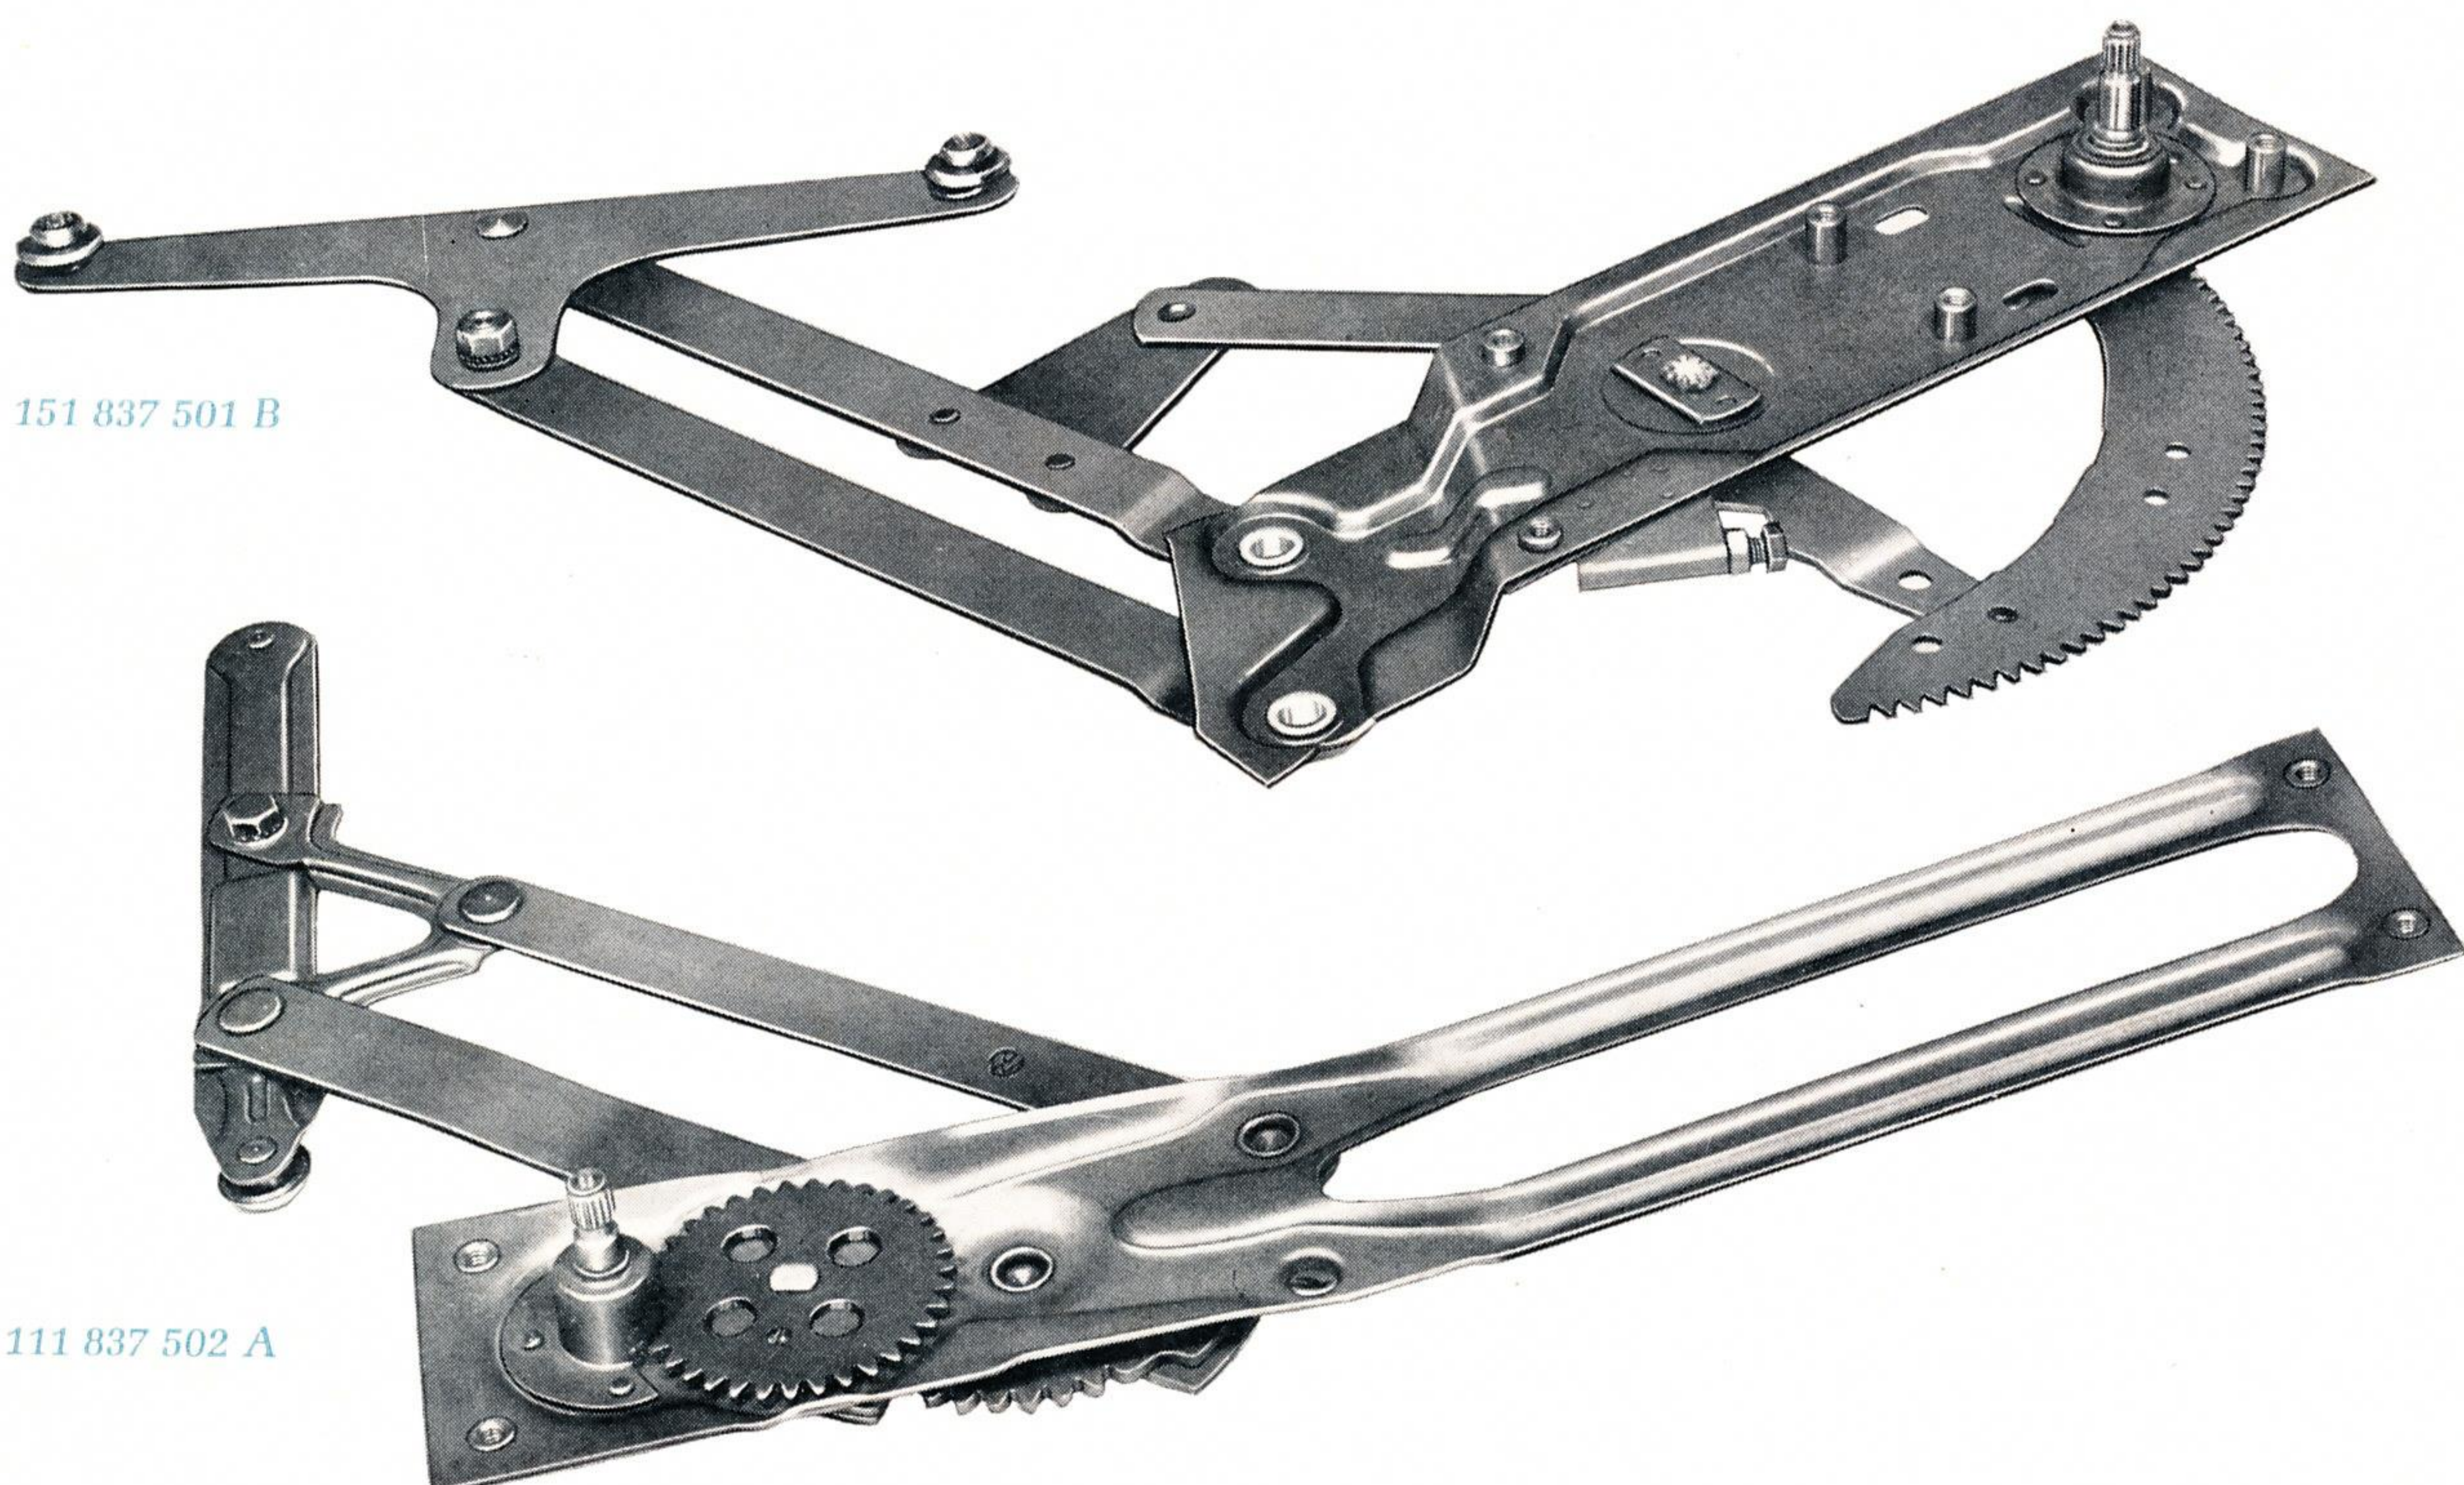


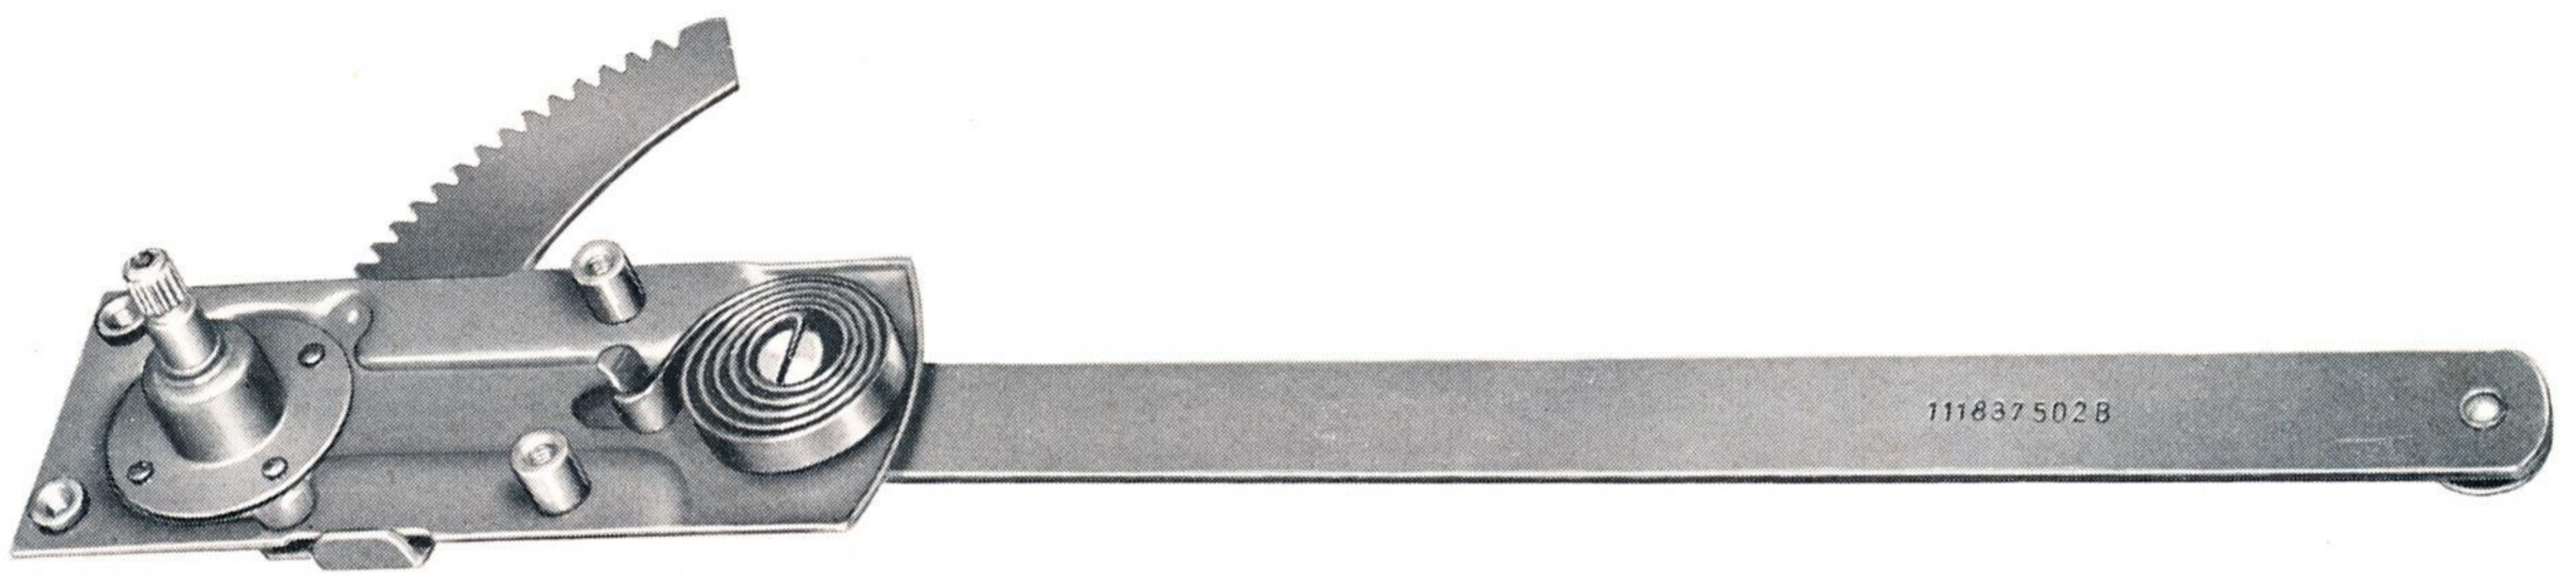


111 837 502 B




111 837 502 D

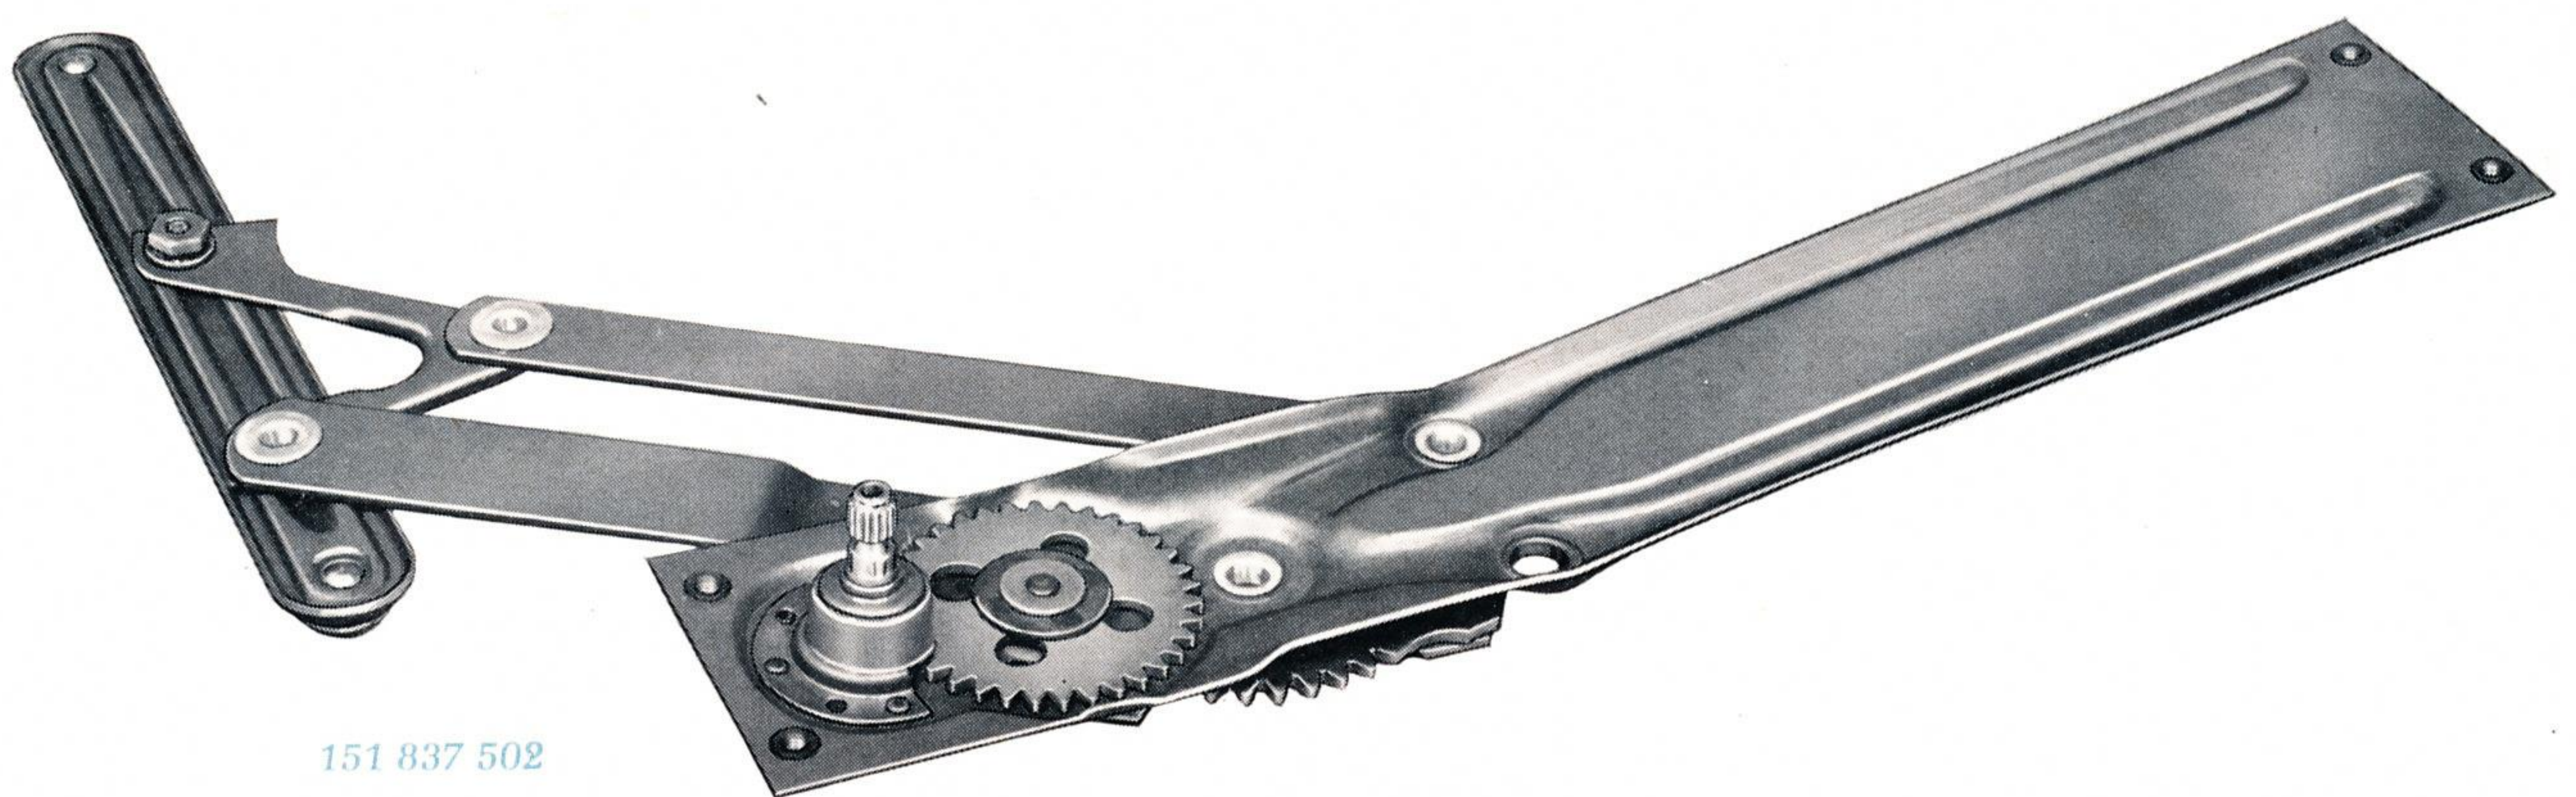

151 837 502

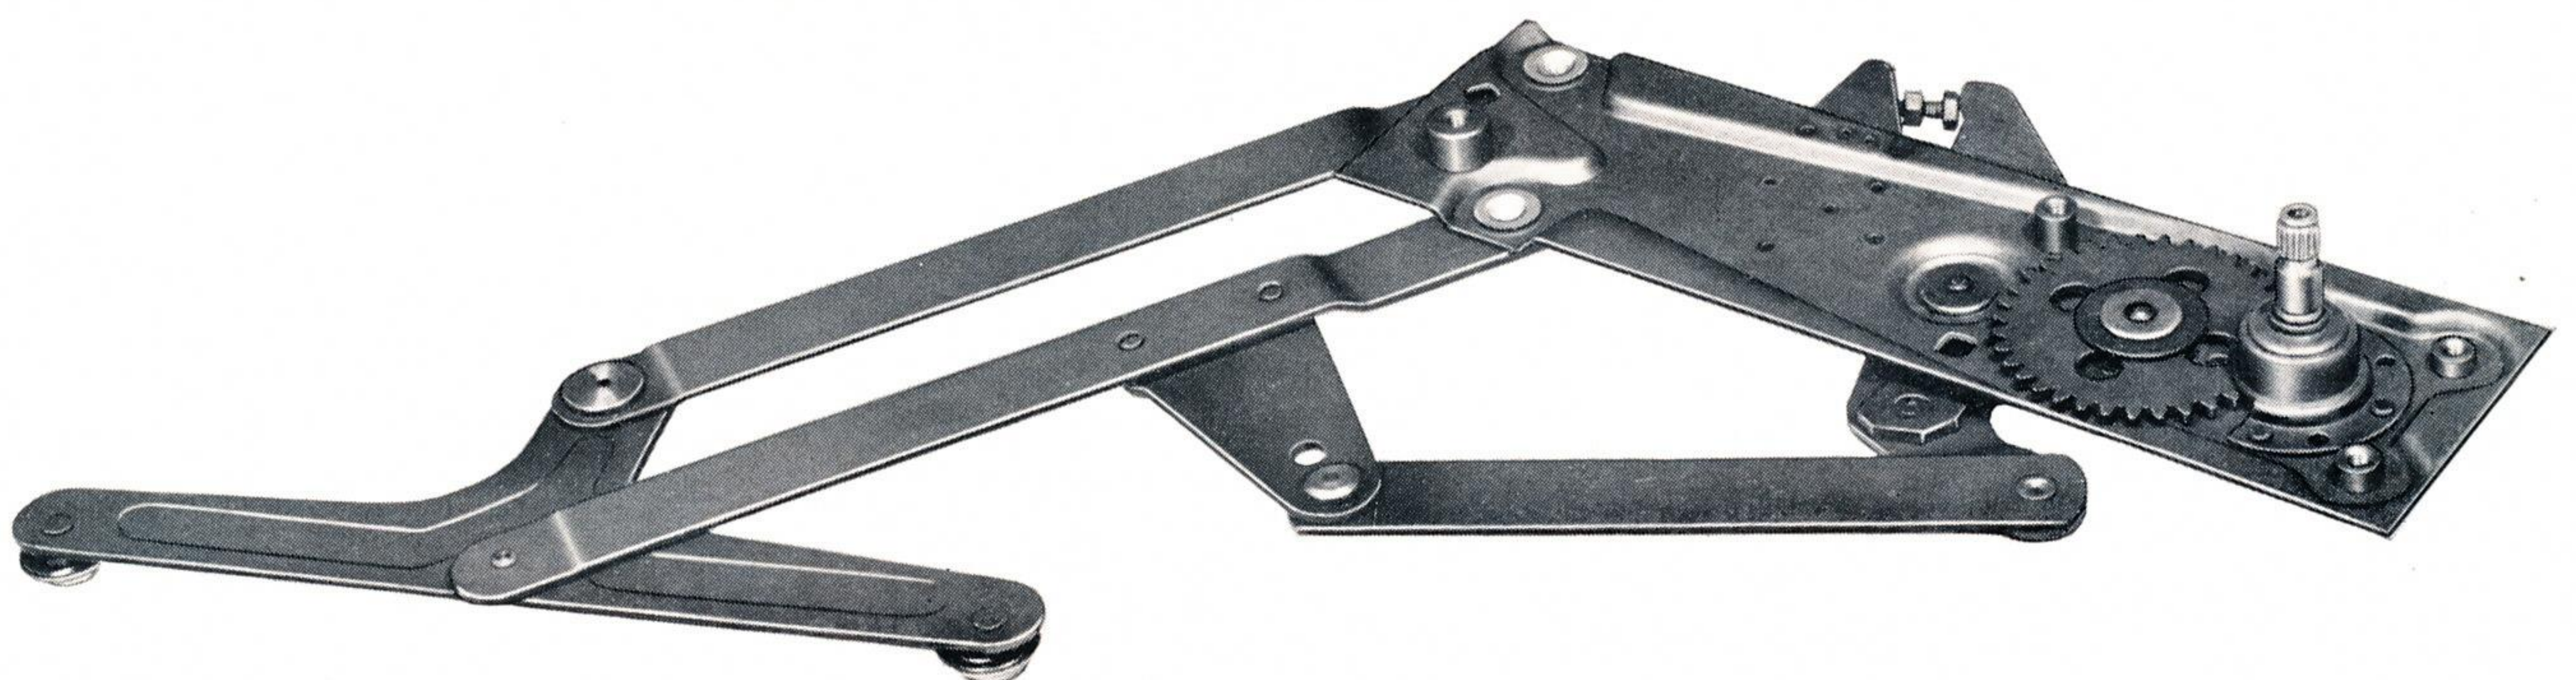

151 837 502 A

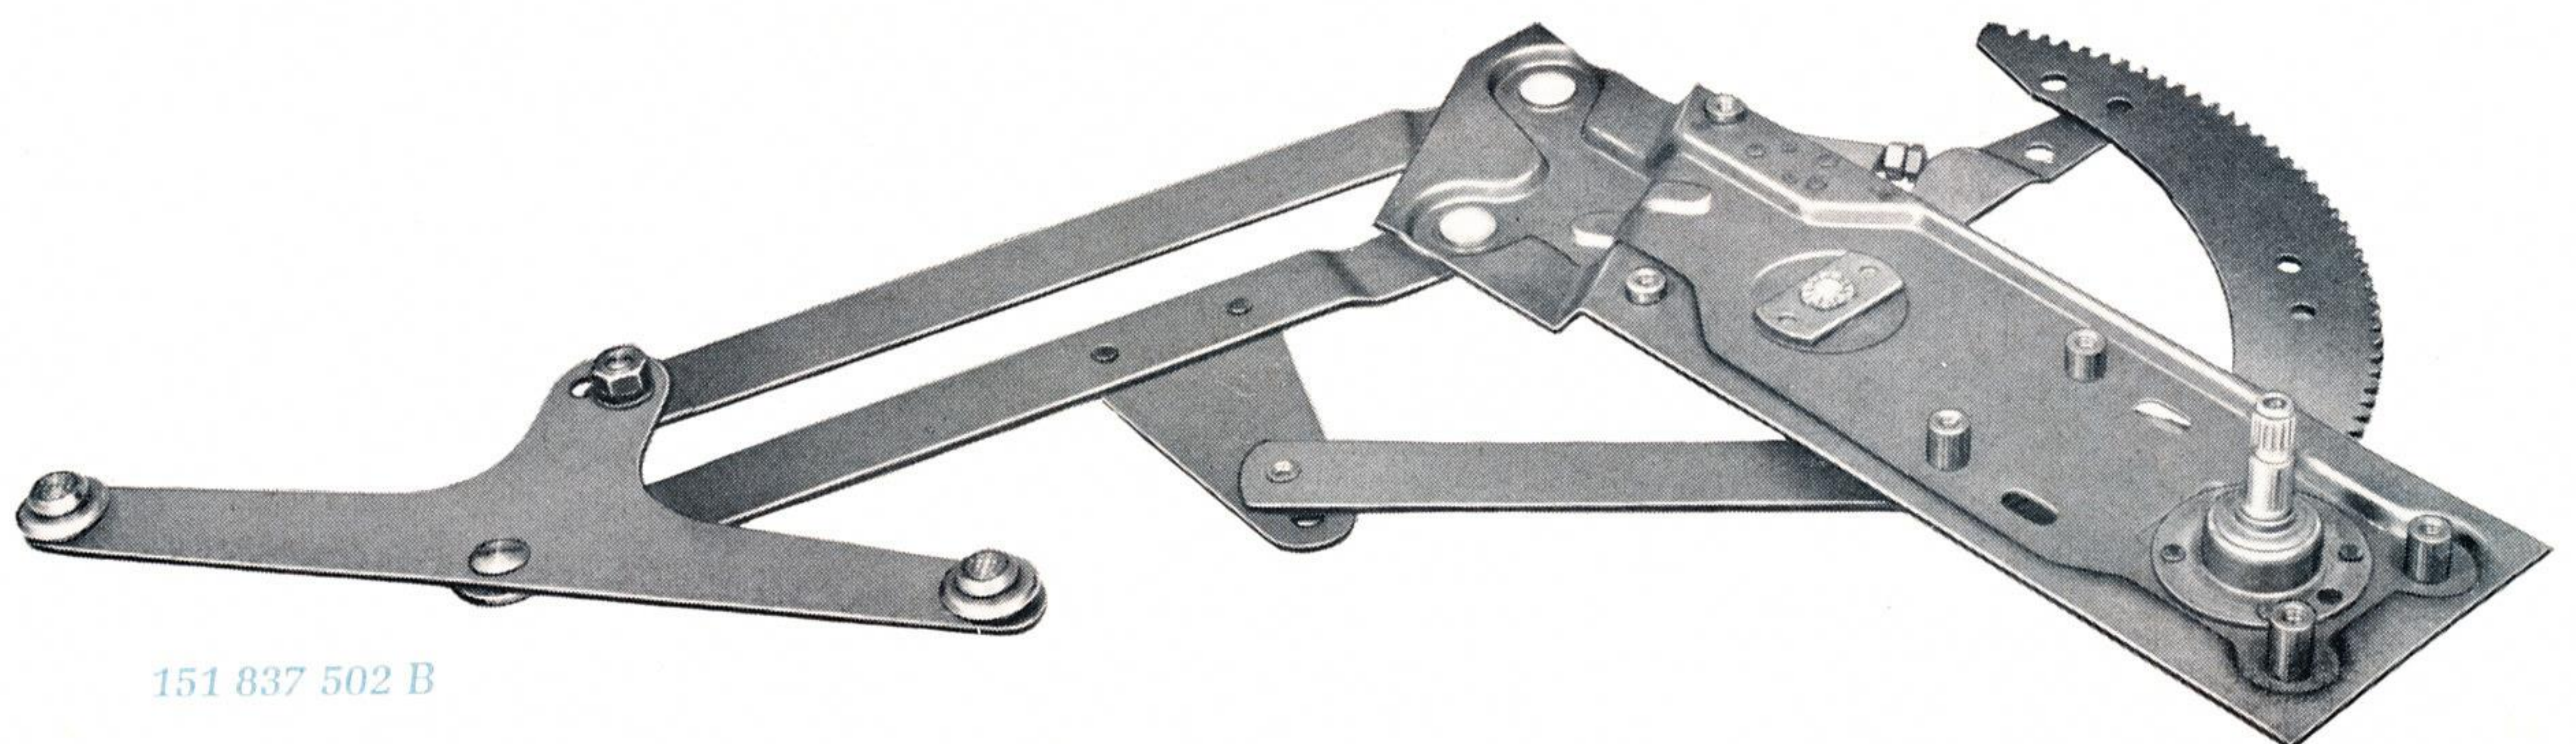

151 837 502 B

VW Passenger Cars

Window Winders


Part No.	Designation	Model	Used from Chassis No.	up to Chassis No.	Remarks
111 837 502 B	Winder — Door Window, right	111–118	1–397 023	1–929 745	
111 837 502 D	Winder — Door Window, right	111–118	1–929 746		
151 837 502	Winder — Door Window, right	151, 152		1–397 022	
151 837 502 A	Winder — Door Window, right	151, 152	1–397 023	1–929 745	
151 837 502 B	Winder — Door Window, right	151, 152	1–929 746		

Door Window Lift Channels

111 837 571	Lift channel — Door window, left	111–118		1–397 022	
111 837 571 B	Lift channel — Door window,	111–118	1–397 023	1–929 745	usable for left or right
111 837 571 C	Lift channel — Door window left	111–118	1–929 746		
151 837 571	Lift channel — Door window, left	151, 152		1–397 022	




111 837 571

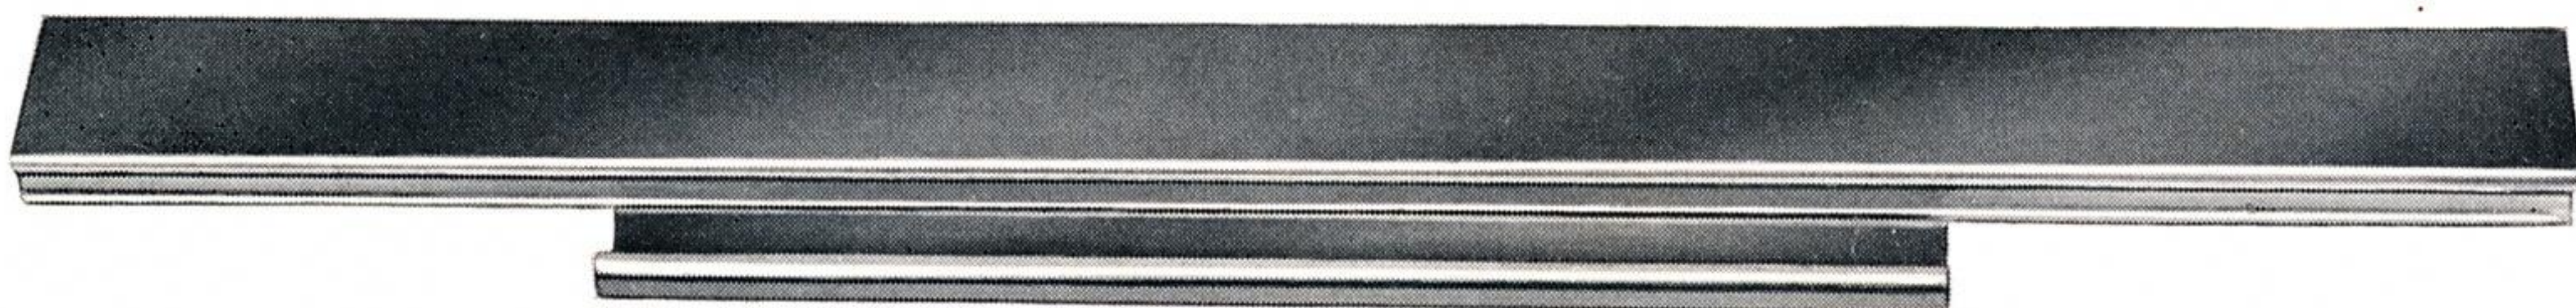


111 837 571 B



111 837 571 C

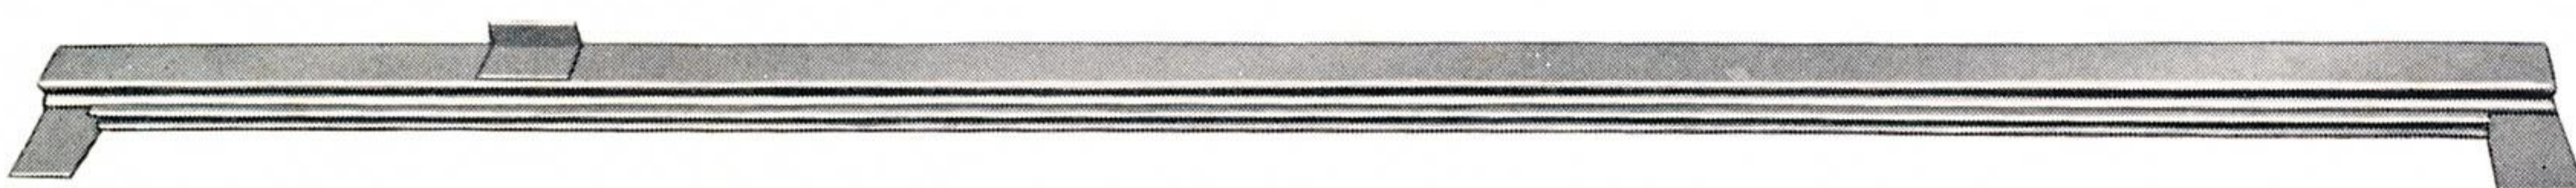

151 837 571

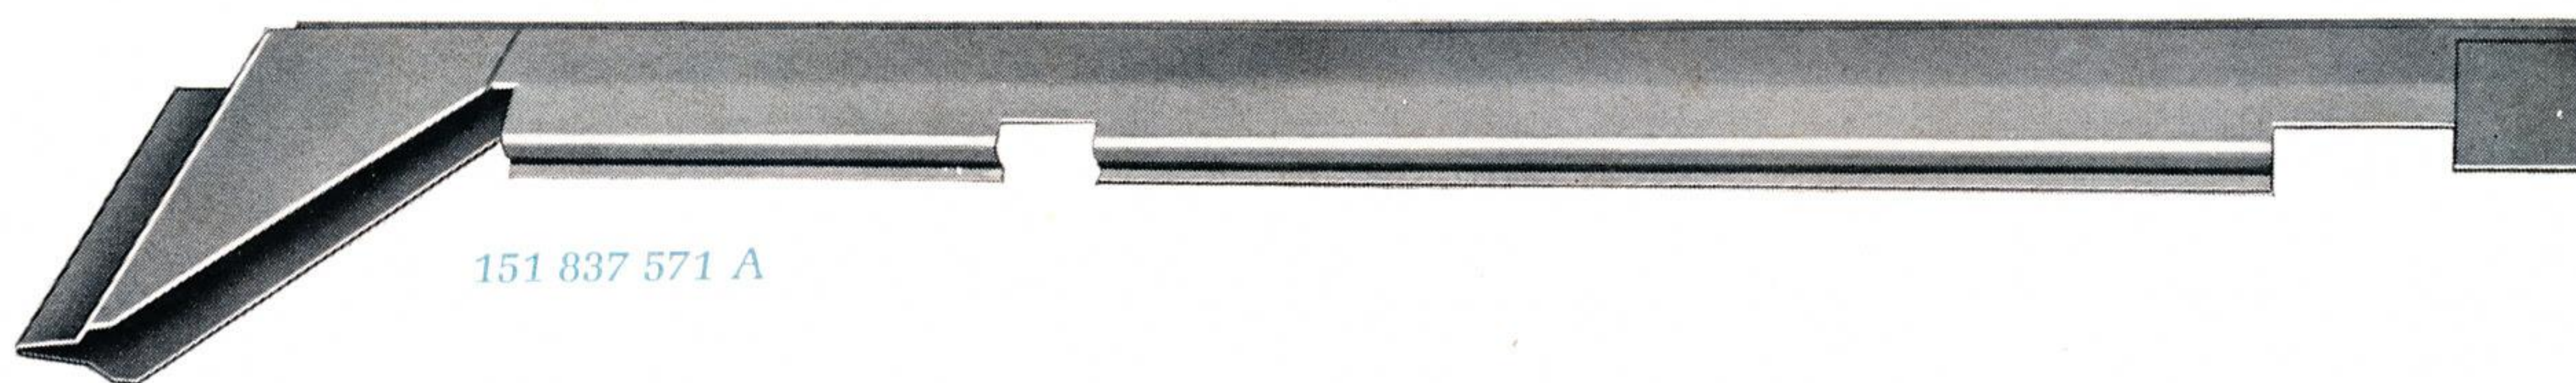

151 837 571 A




151 837 571 B



111 837 572



111 837 572 C

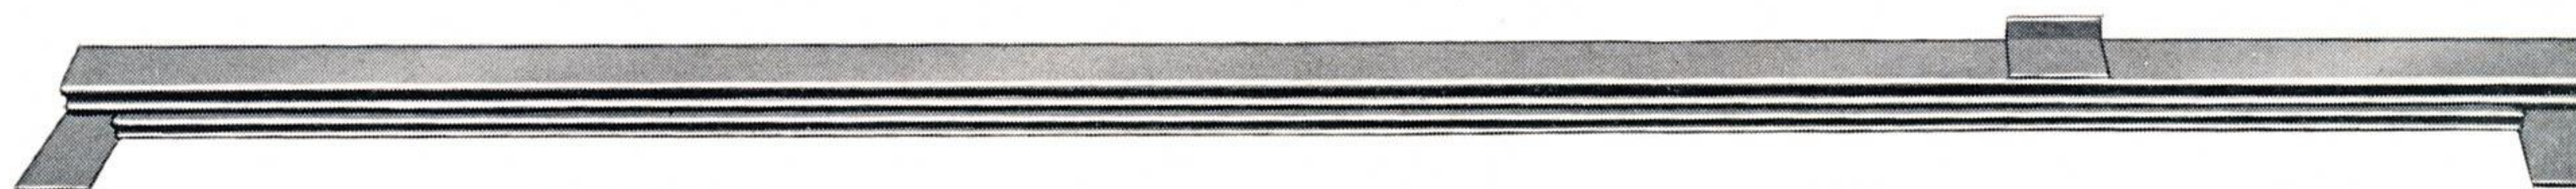

151 837 572



151 837 572 A



151 837 572 B

VW Passenger Cars

Door Window Lift Channel

Part No.	Designation	Model	Used from Chassis No.	up to Chassis No.	Remarks
151 837 571 A	Lift channel — Door window, left	151, 152	1—397 023	1—929 745	
151 837 571 B	Lift channel — Door window, left	151, 152	1—929 746		
111 837 572	Lift channel — Door window, right	111—118		1—397 022	
111 837 572 C	Lift channel — Door window, right	111—118	1—929 746		
151 837 572	Lift channel — Door window, right	151, 152		1—397 022	
151 837 572 A	Lift channel — Door window, right	151, 152	1—397 023	1—929 745	
151 837 572 B	Lift channel — Door window, right	151, 152	1—929 746		

Window Winder Handles

111 837 581	Handle — Door window winder, (black)	111, 112, 115, 116		1—929 745	
111 837 581 A	Handle — Door window winder, (black)	111, 112, 115, 116	1—929 746		
113 837 581	Handle — Door window winder, Chrome (ivory)	113, 114, 117, 118, 151, 152		1—929 745	
113 837 581 A	Handle — Door window winder, Chrome (ivory)	113, 114, 117, 118, 151, 152	1 929 746		



111 837 581




111 837 581 A




113 837 581




113 837 581 A

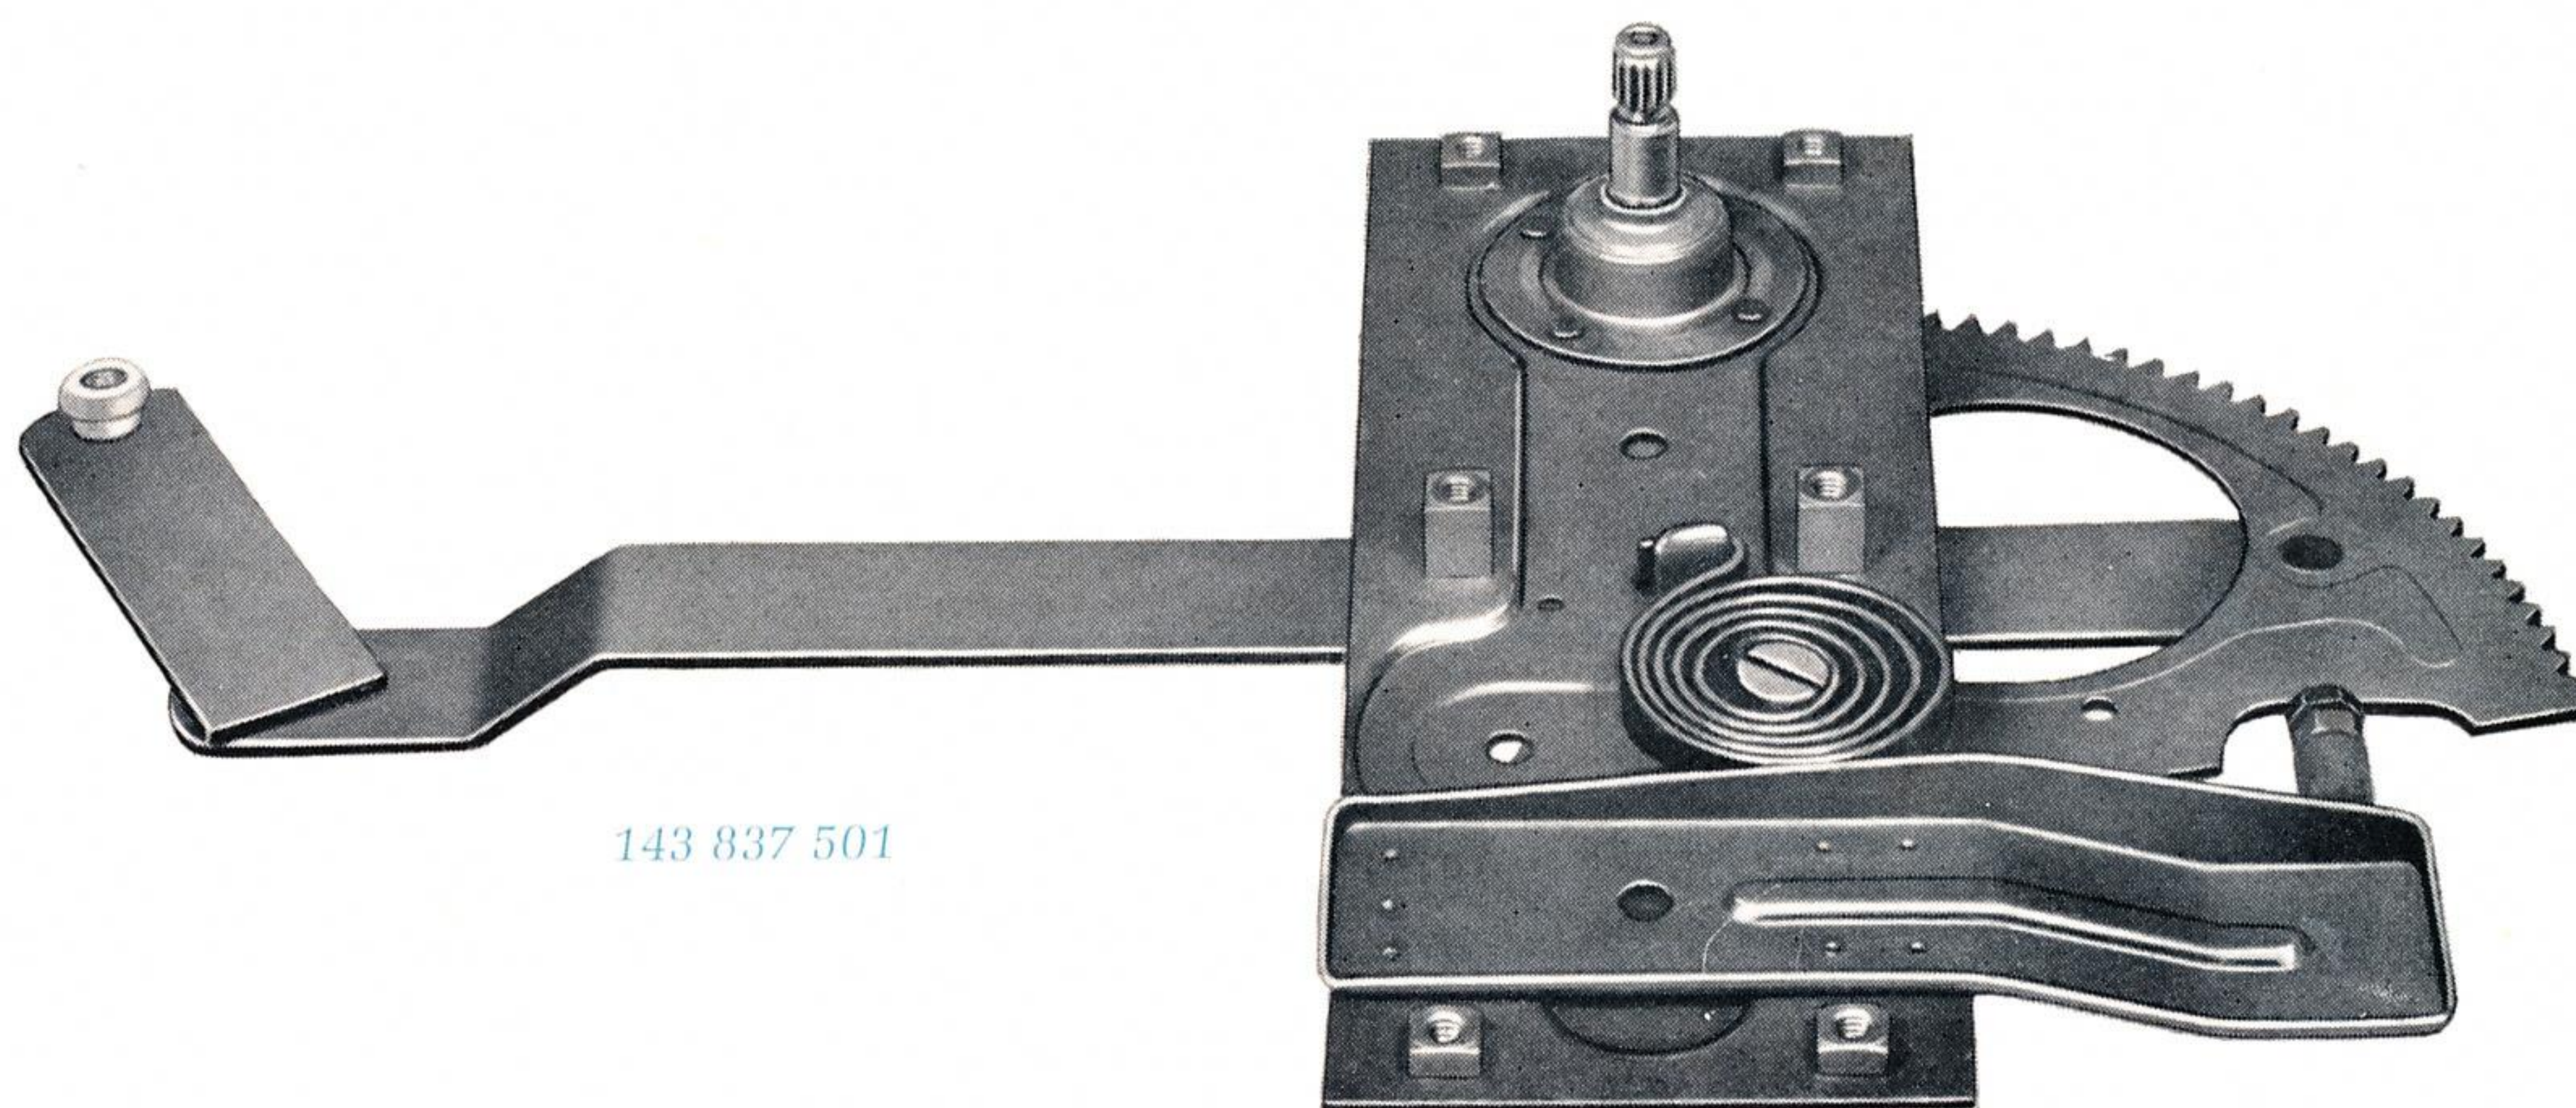


143 837 501

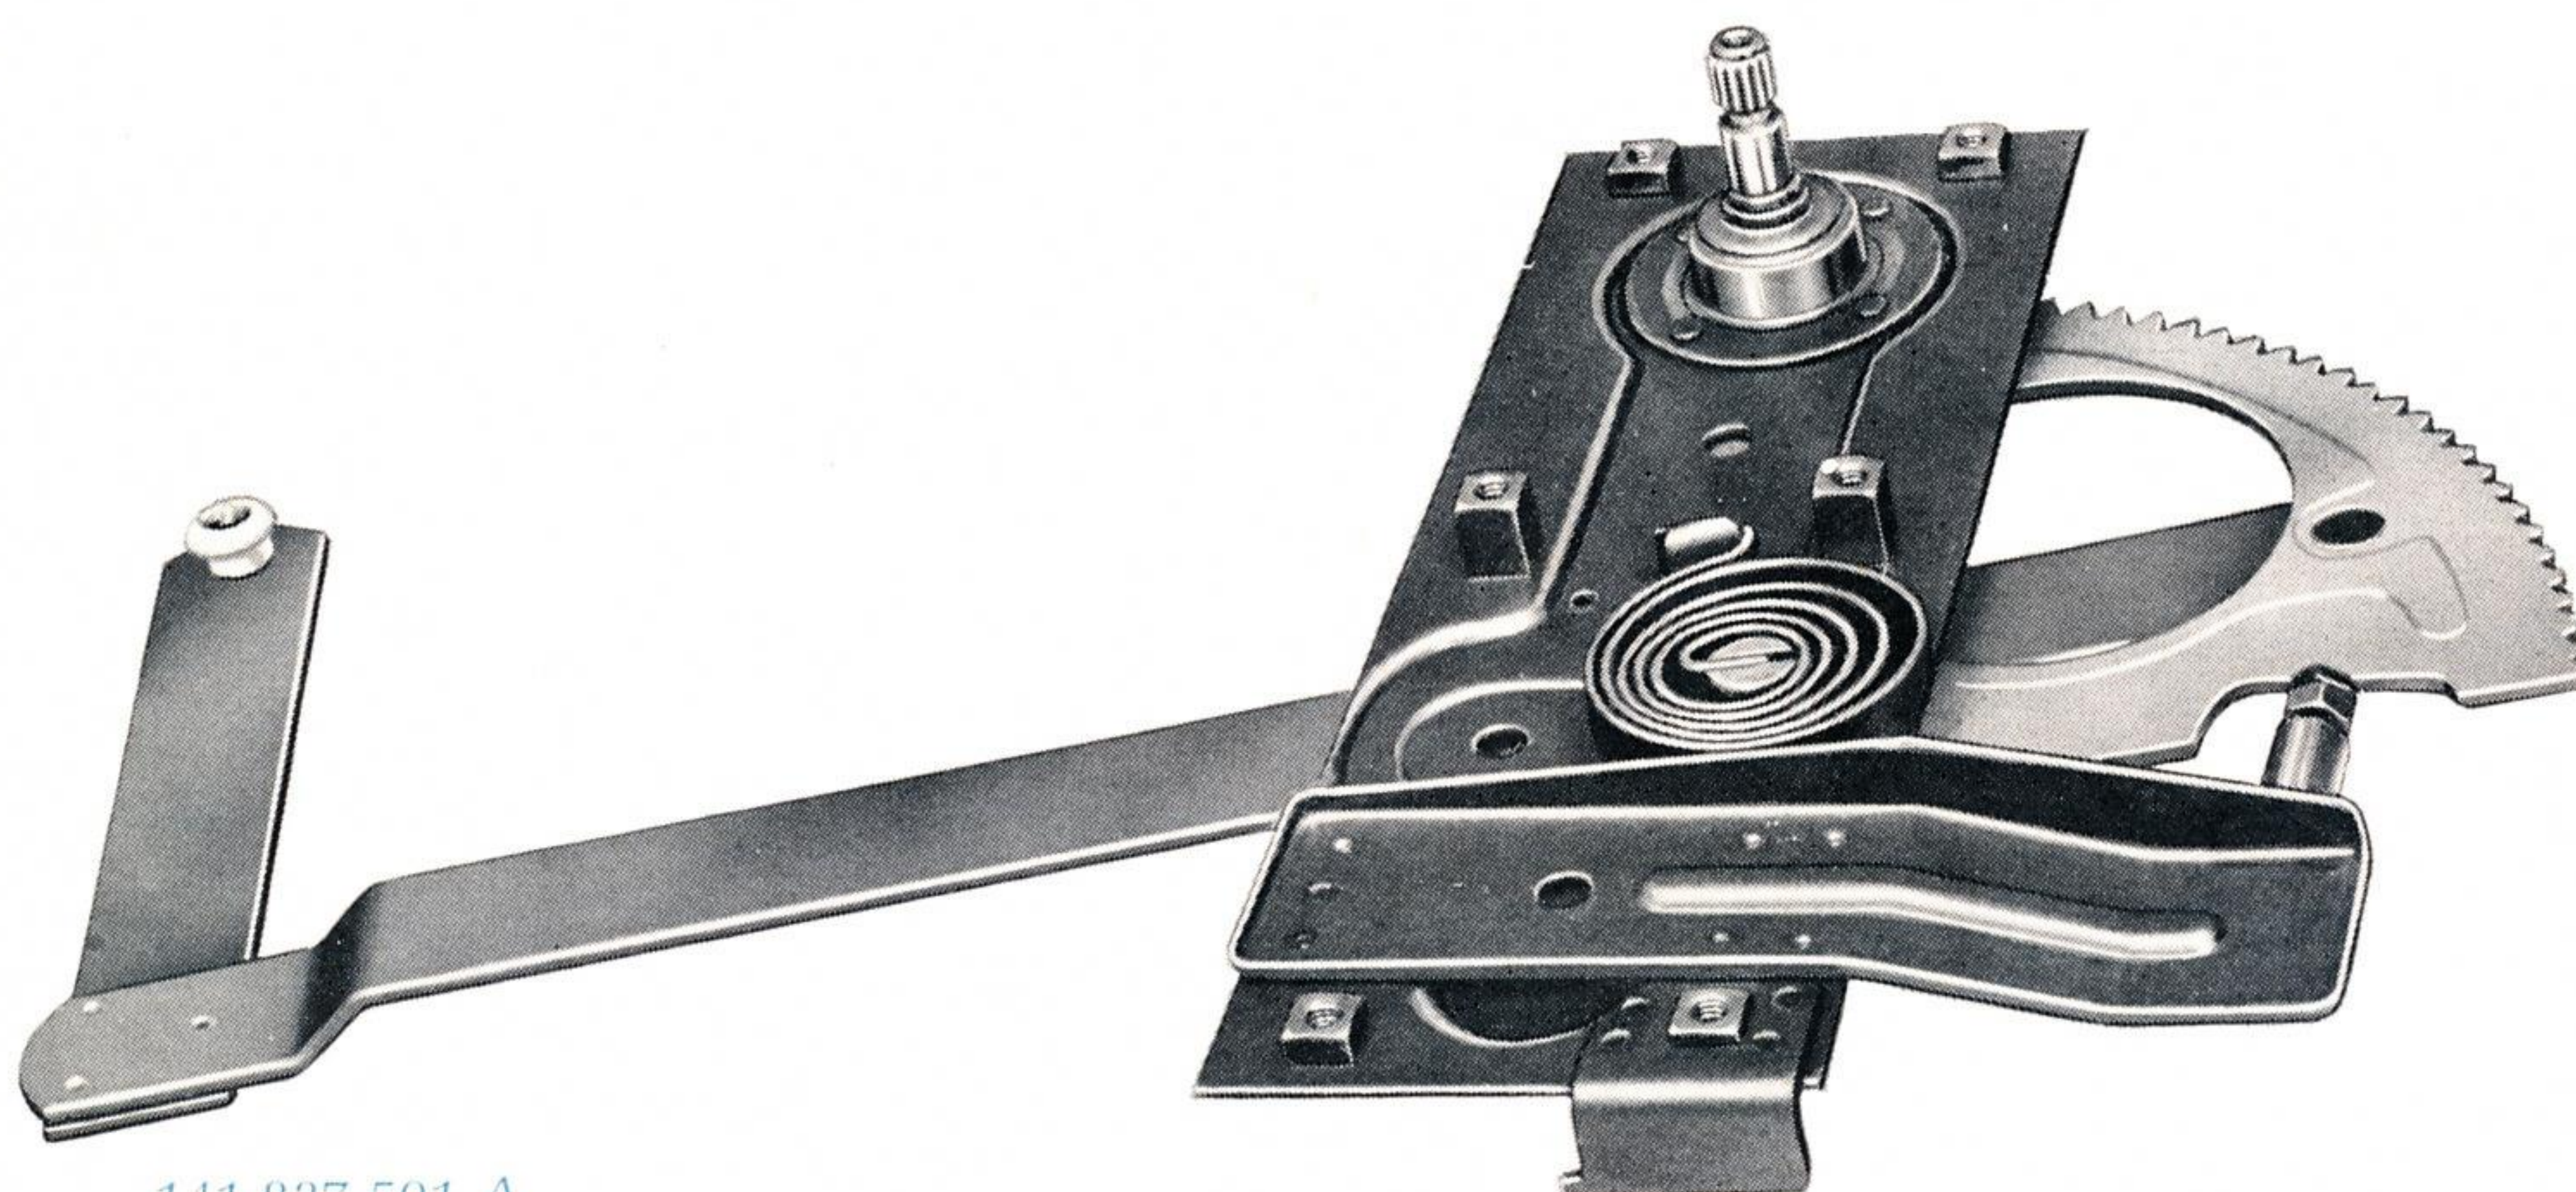

141 837 501 A

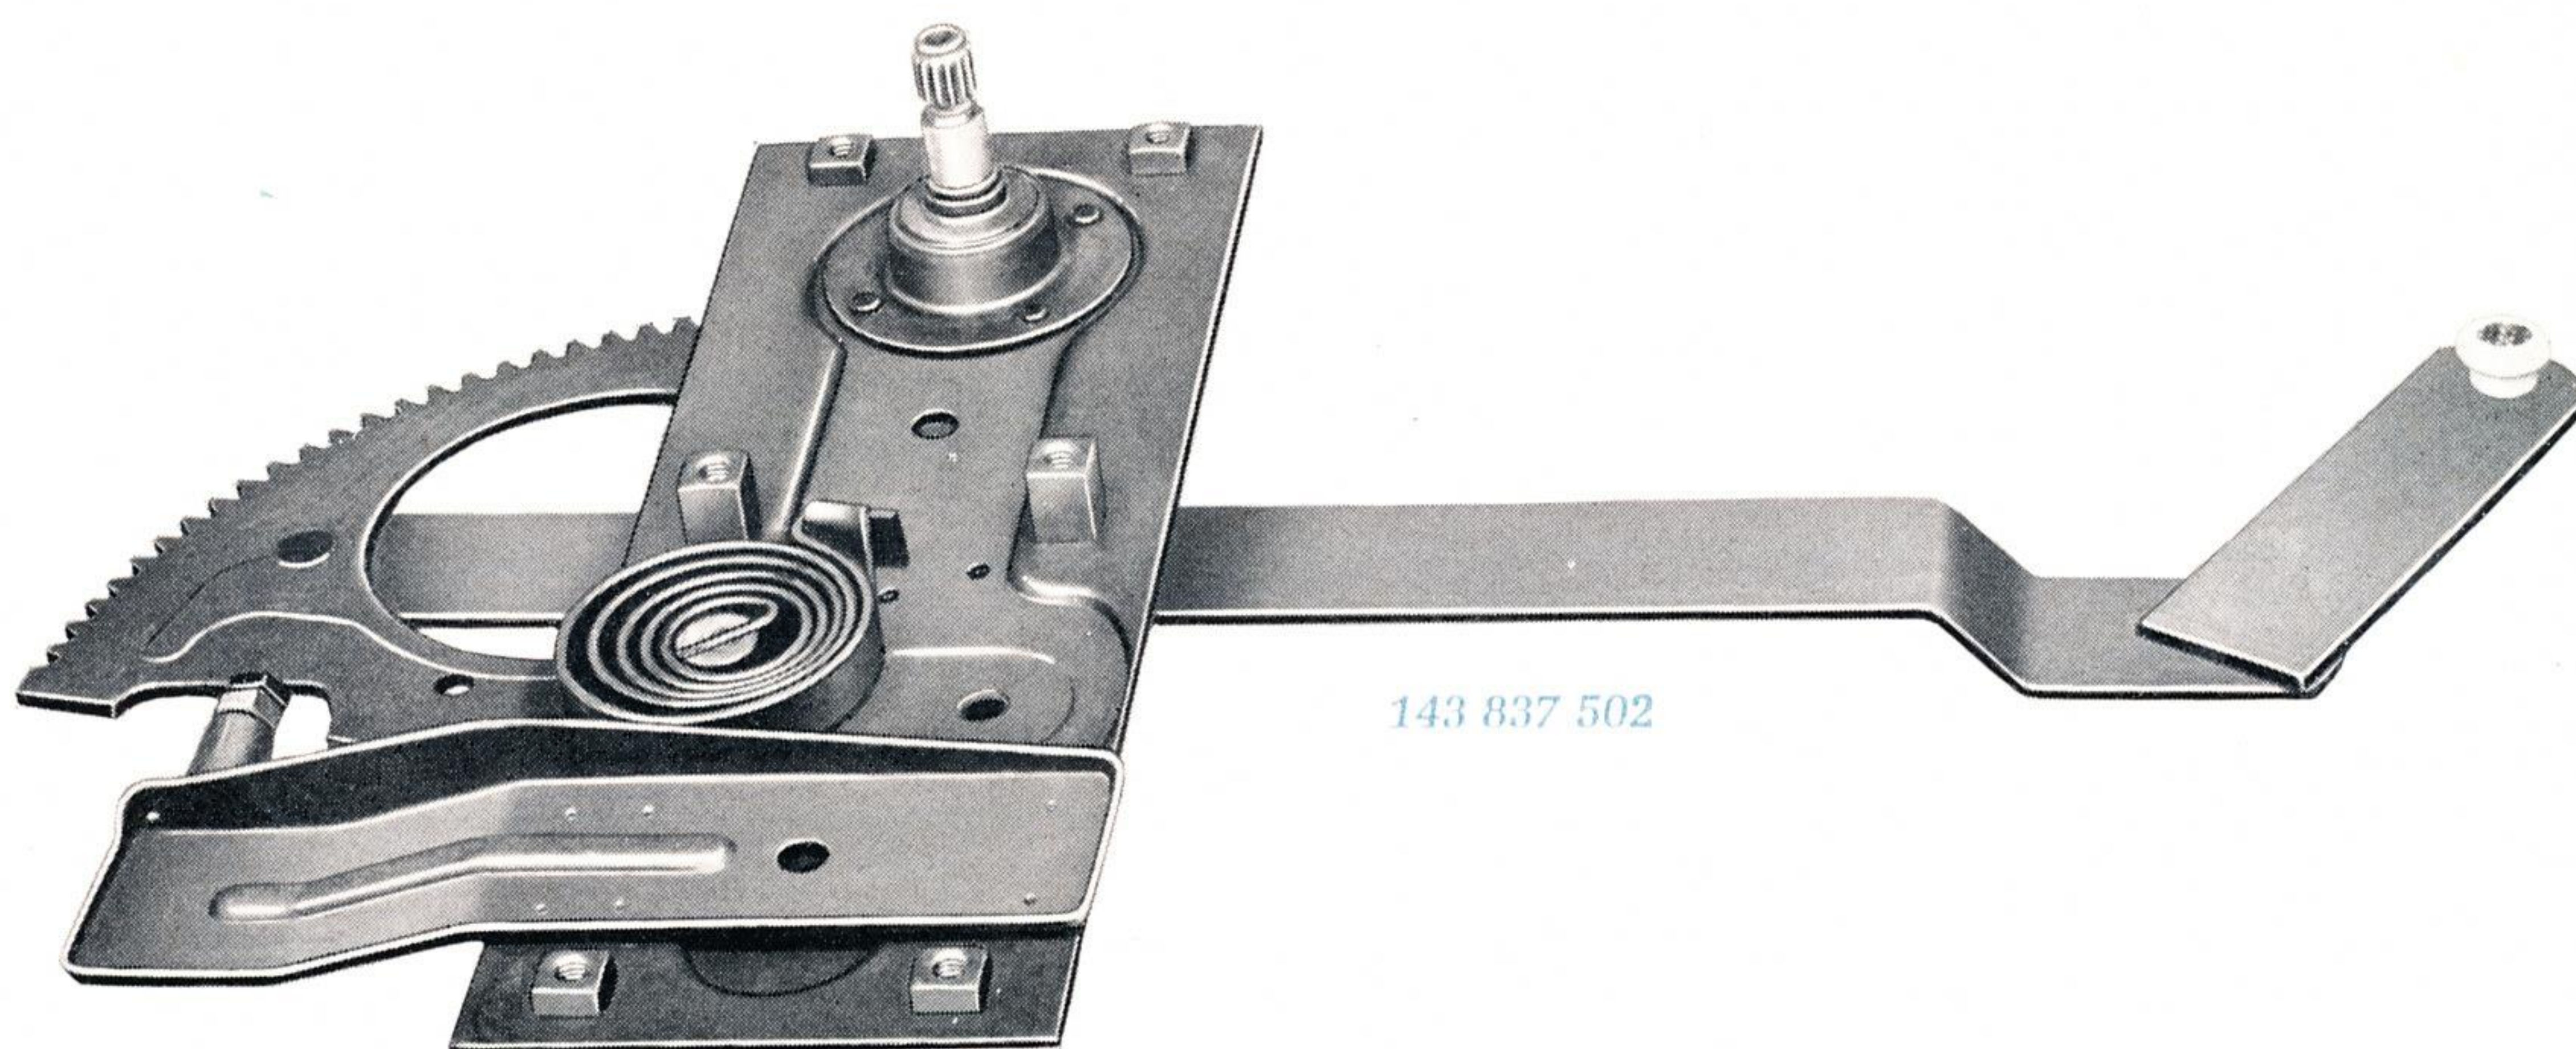

143 837 502

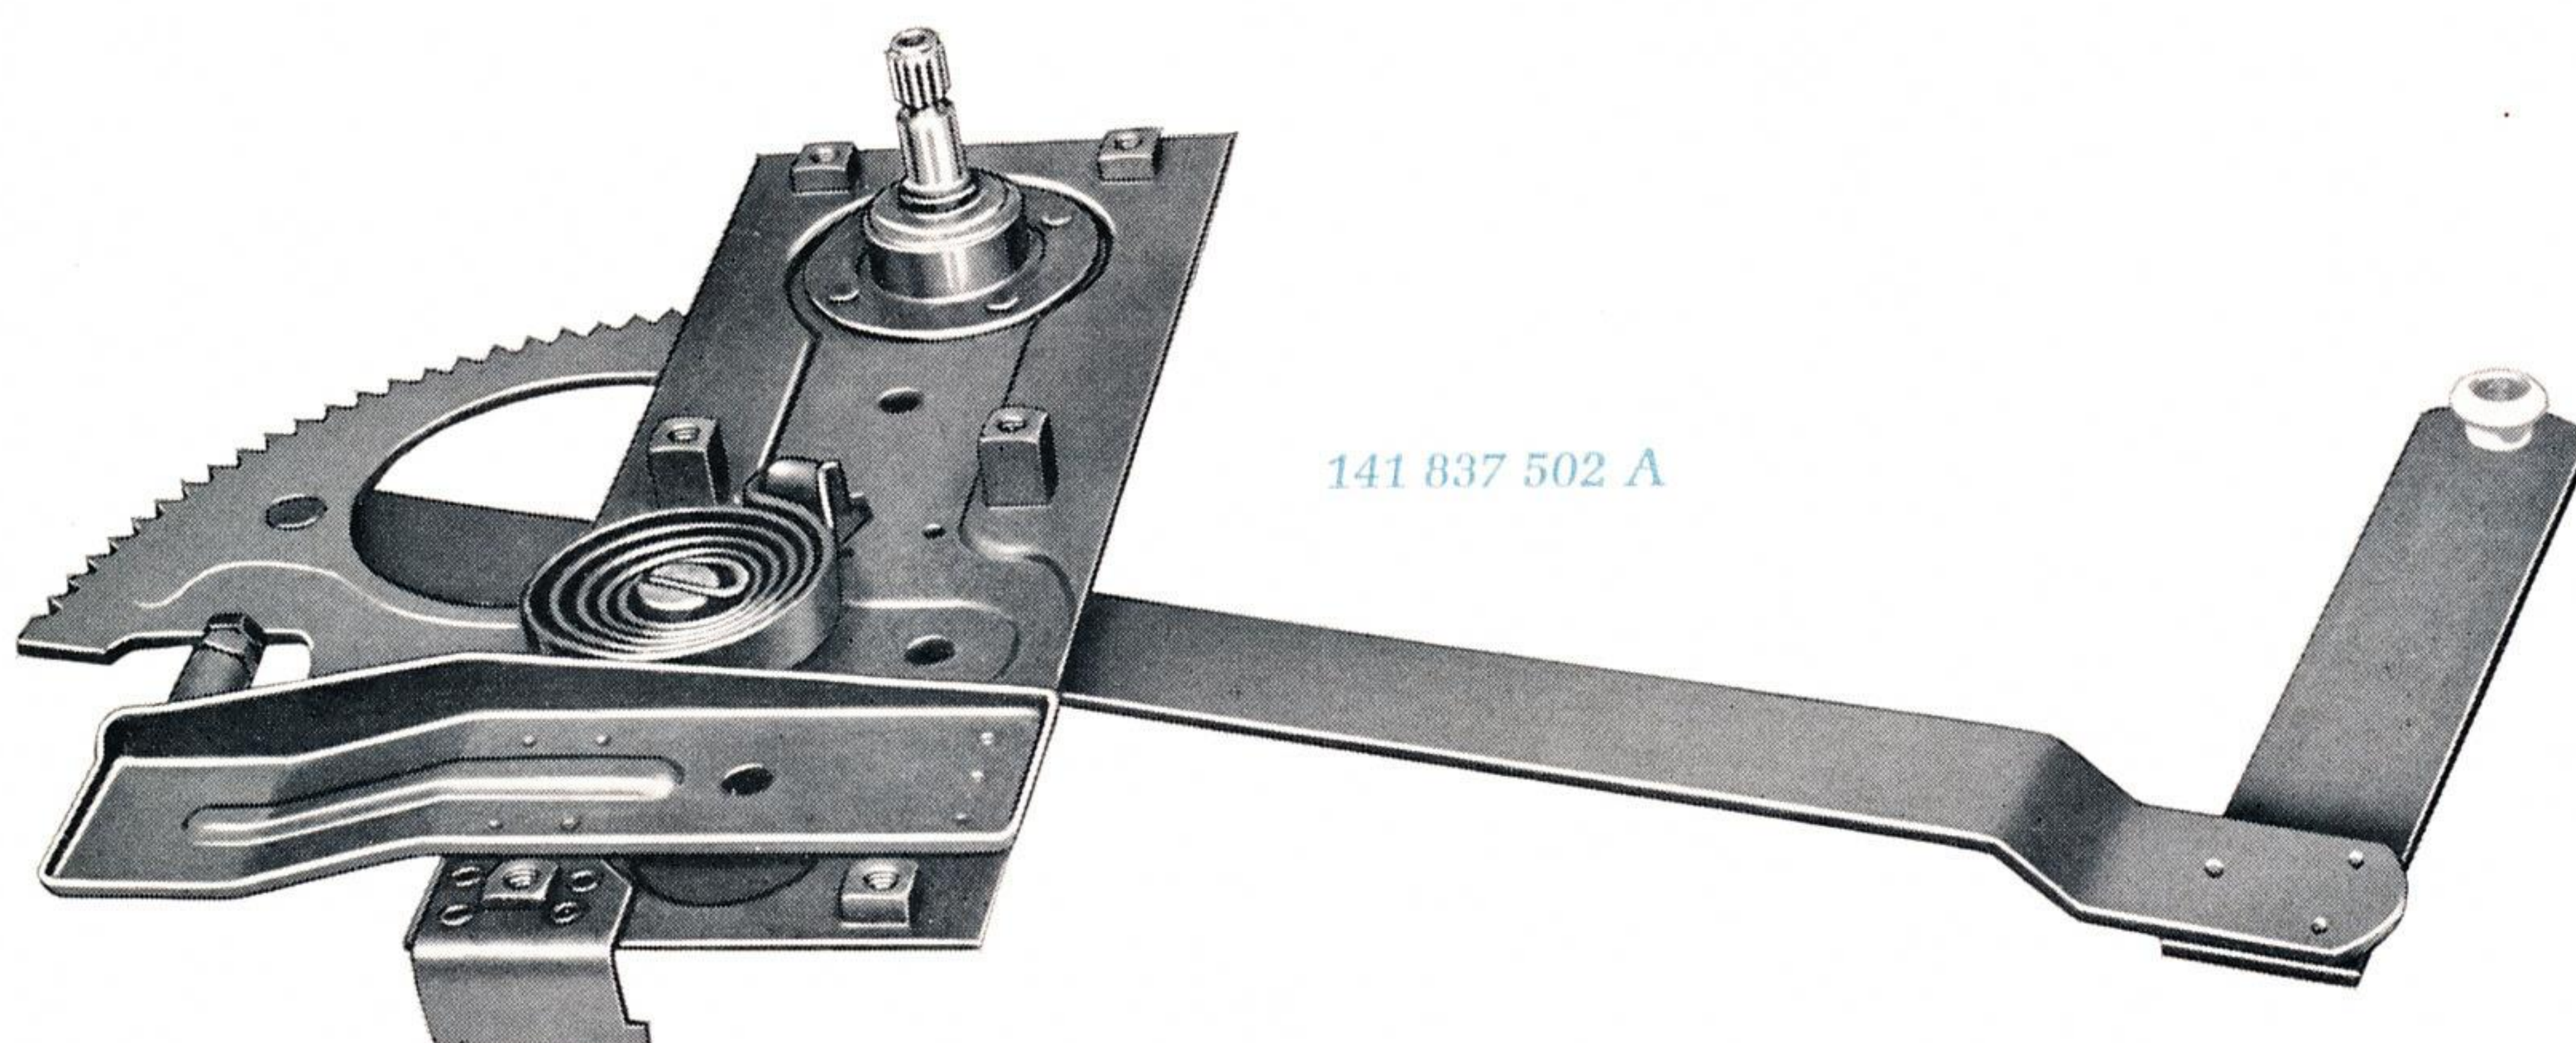

141 837 502 A

VW Karmann Ghia

Window Winders


Part No.	Designation	Model	Used from Chassis No.	up to Chassis No.	Remarks
143 837 501	Winder — Door window, left	141, 143		2 395 180	
141 837 501 A	Winder — Door window, left		2 395 181		
143 837 502	Winder — Door window, right	141, 143		2 395 180	
141 837 502 A	Winder — Door window, right		2 395 181		

Window Winder Handles


113 837 581 A	Handle — Door window winder, ivory	143	1 649 252	also for 113, 114, 117, 118, 151, 152 from Chassis No. 1 929 746
141 837 581	Handle — Door window winder, white		1 649 253	

Guide Rails


141 837 551	Guide rail with window lift channel	141, 143	2 395 180	usable for left and right
-------------	--	----------	-----------	---------------------------

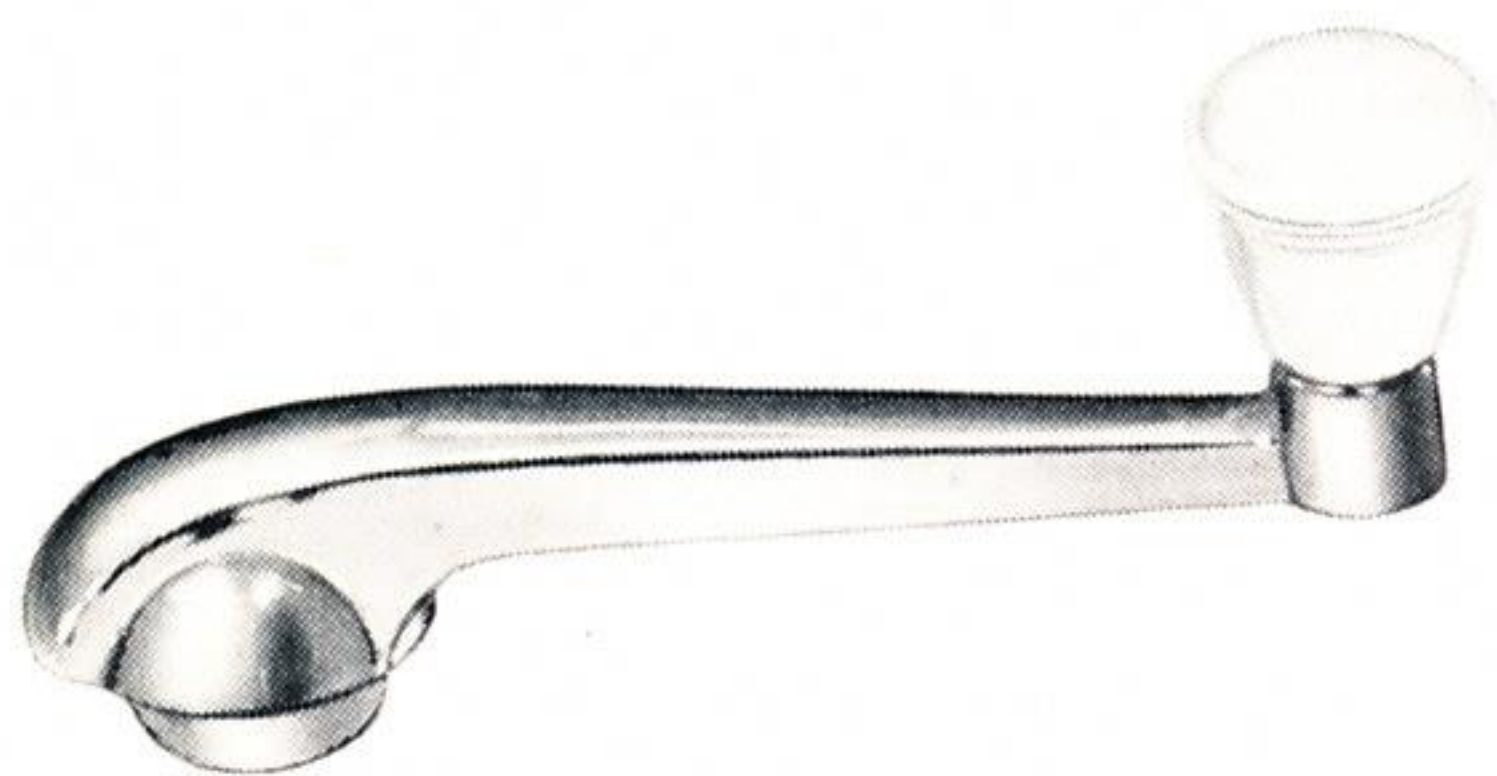


141 837 581

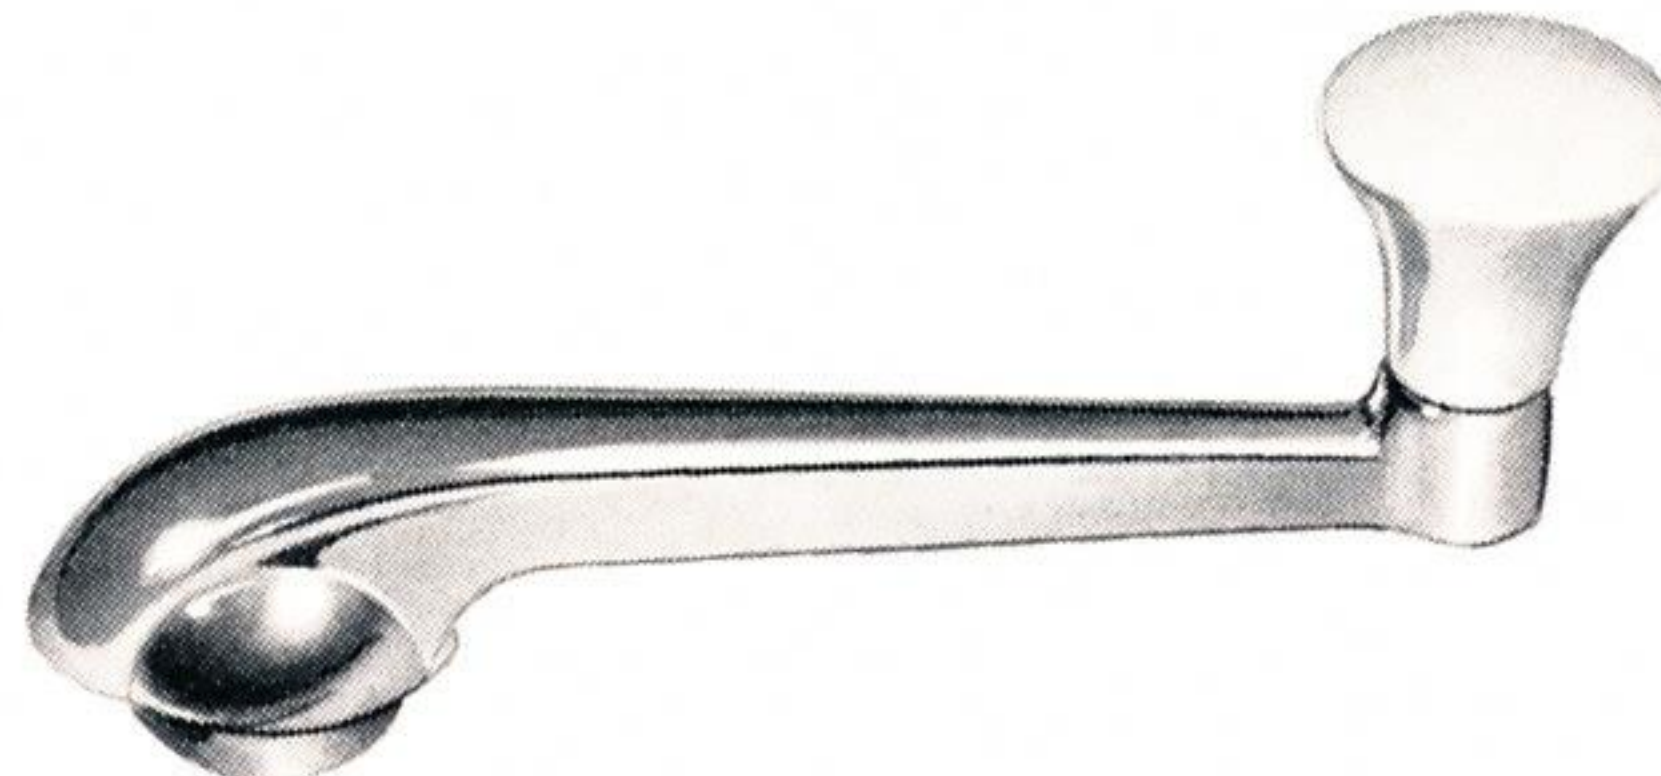


113 837 581 A

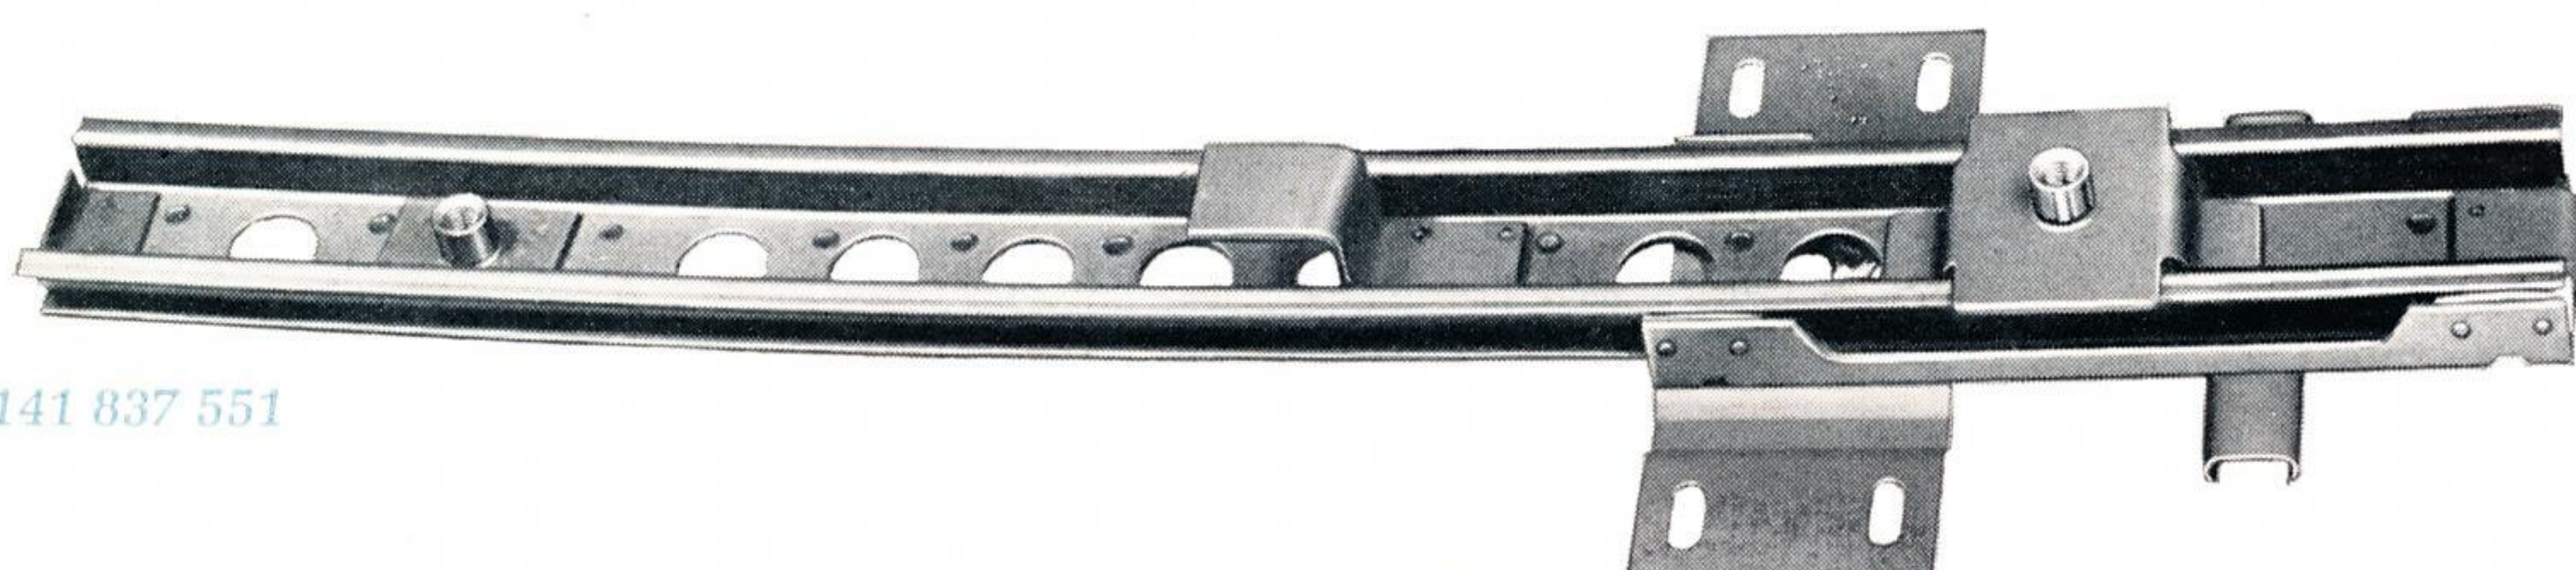


141 837 551

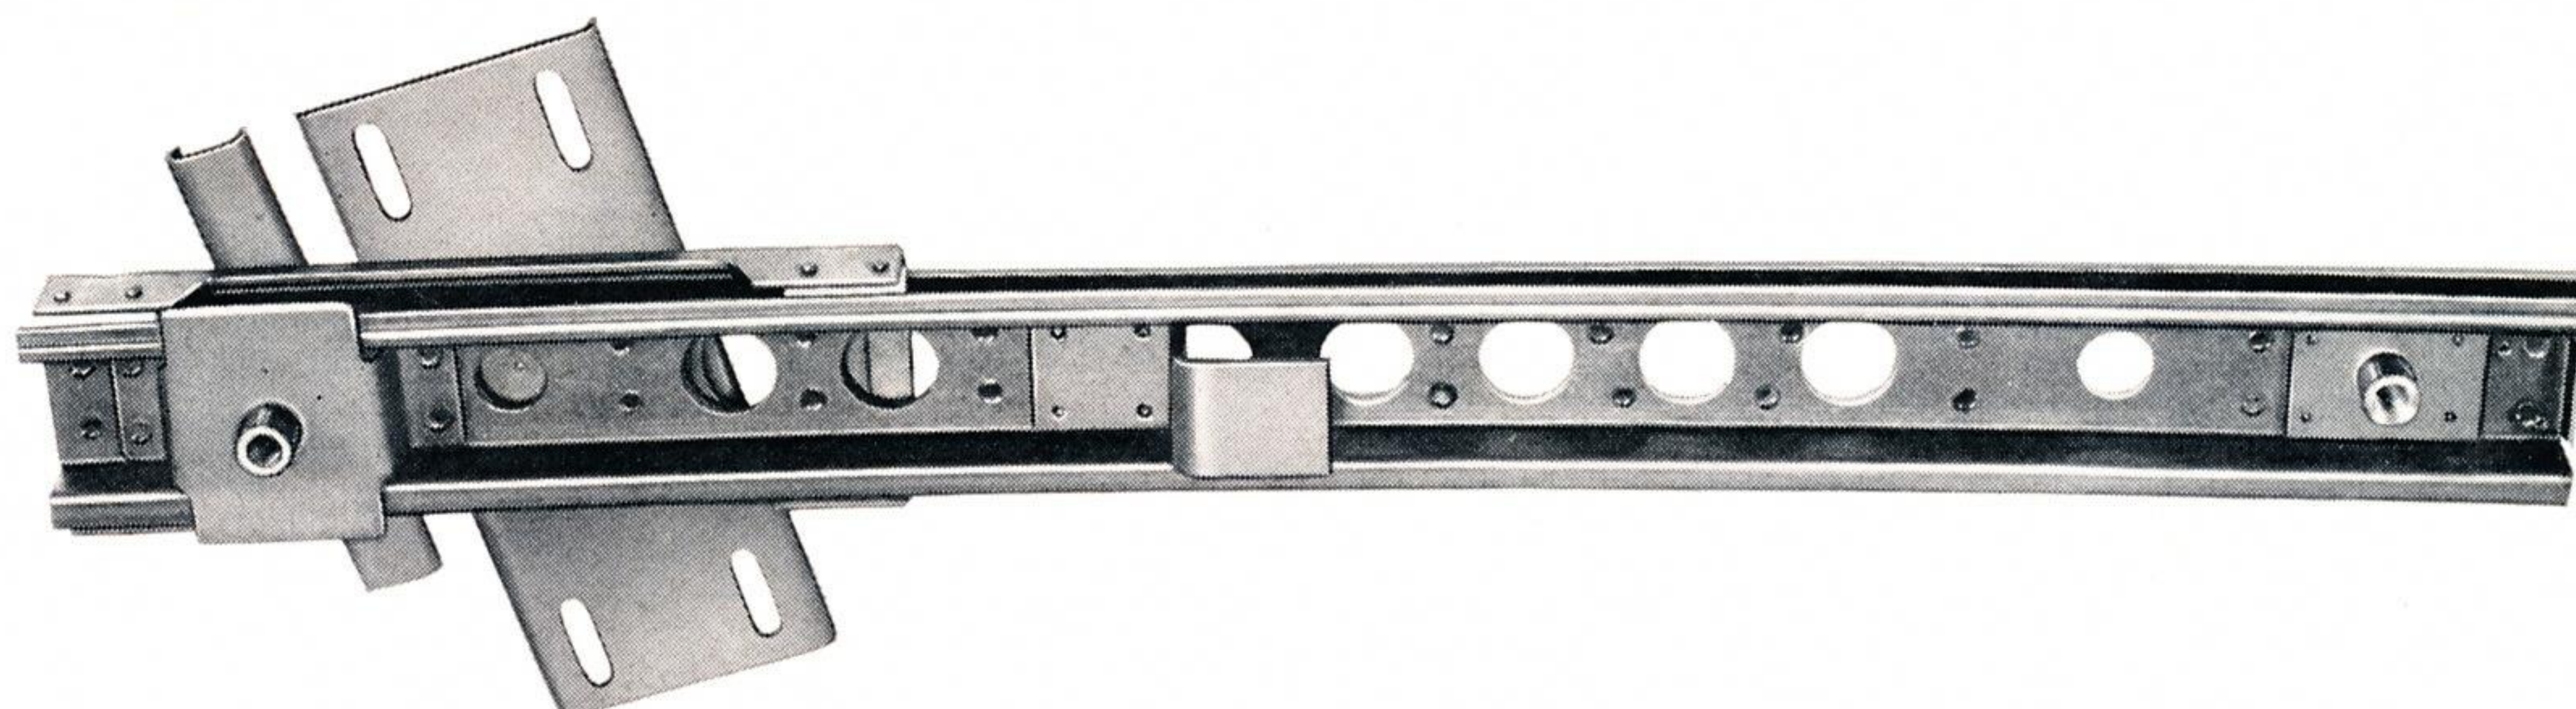


141 837 551 A

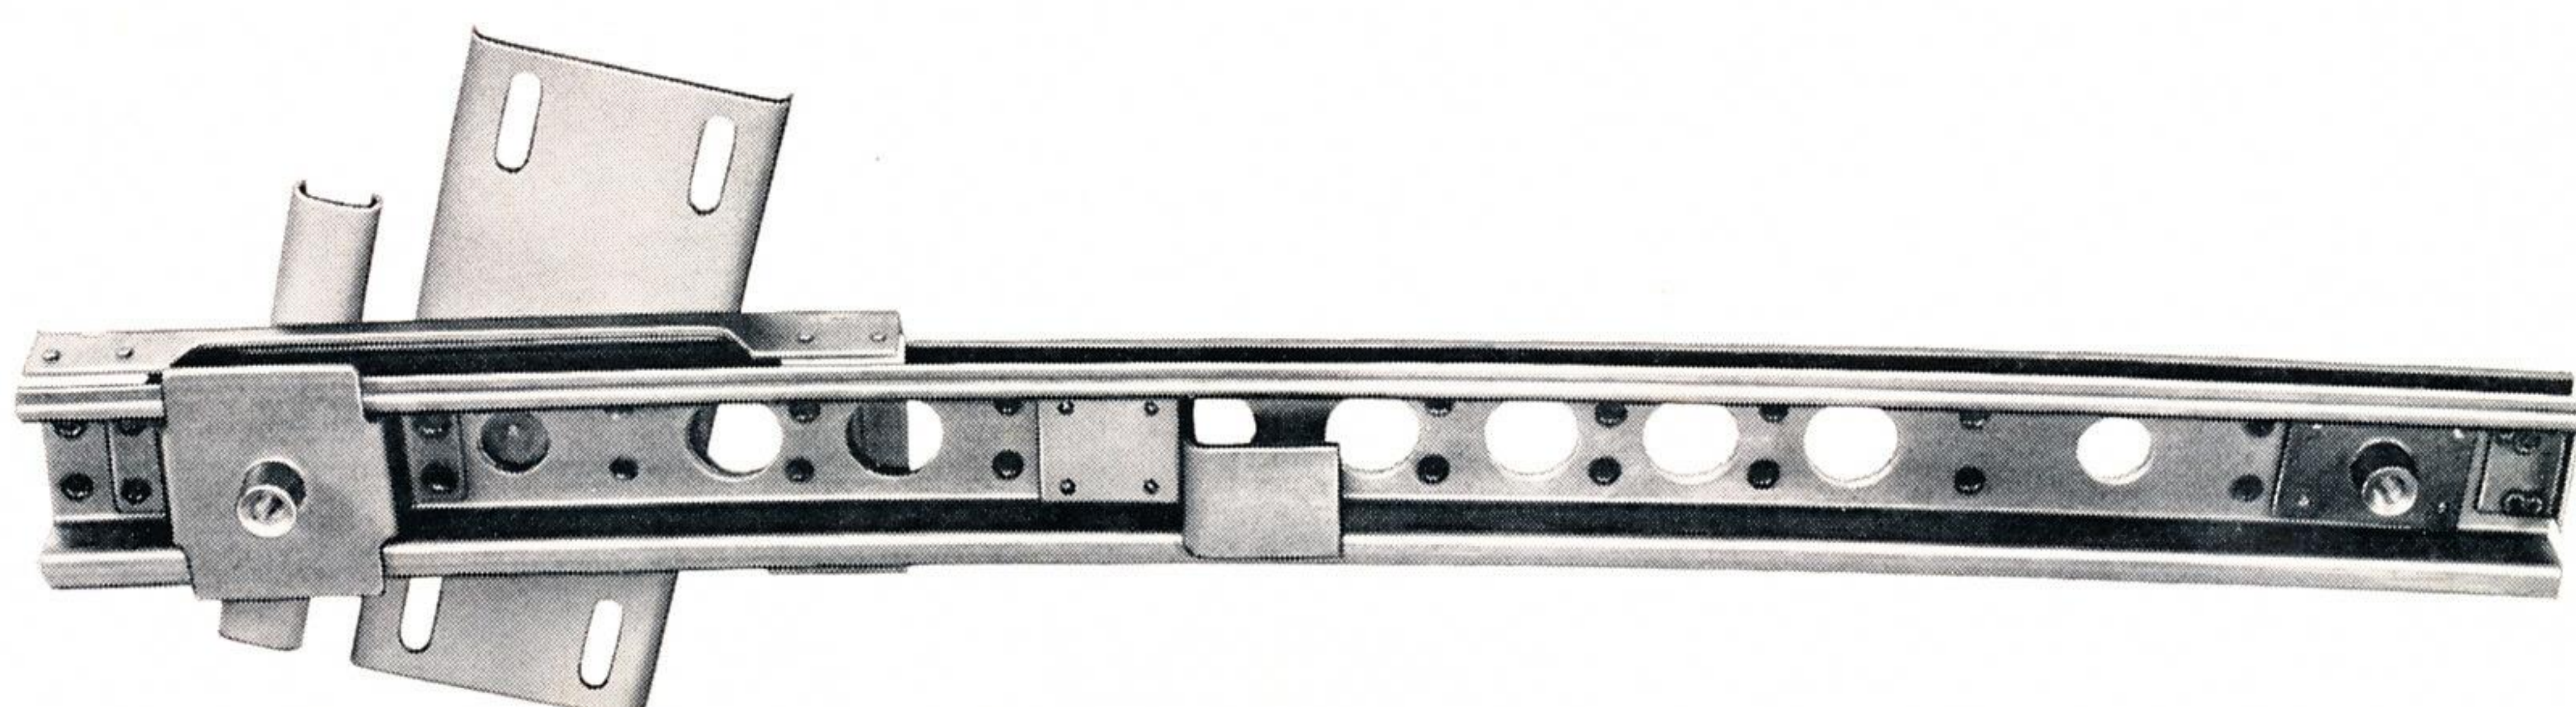


141 837 552

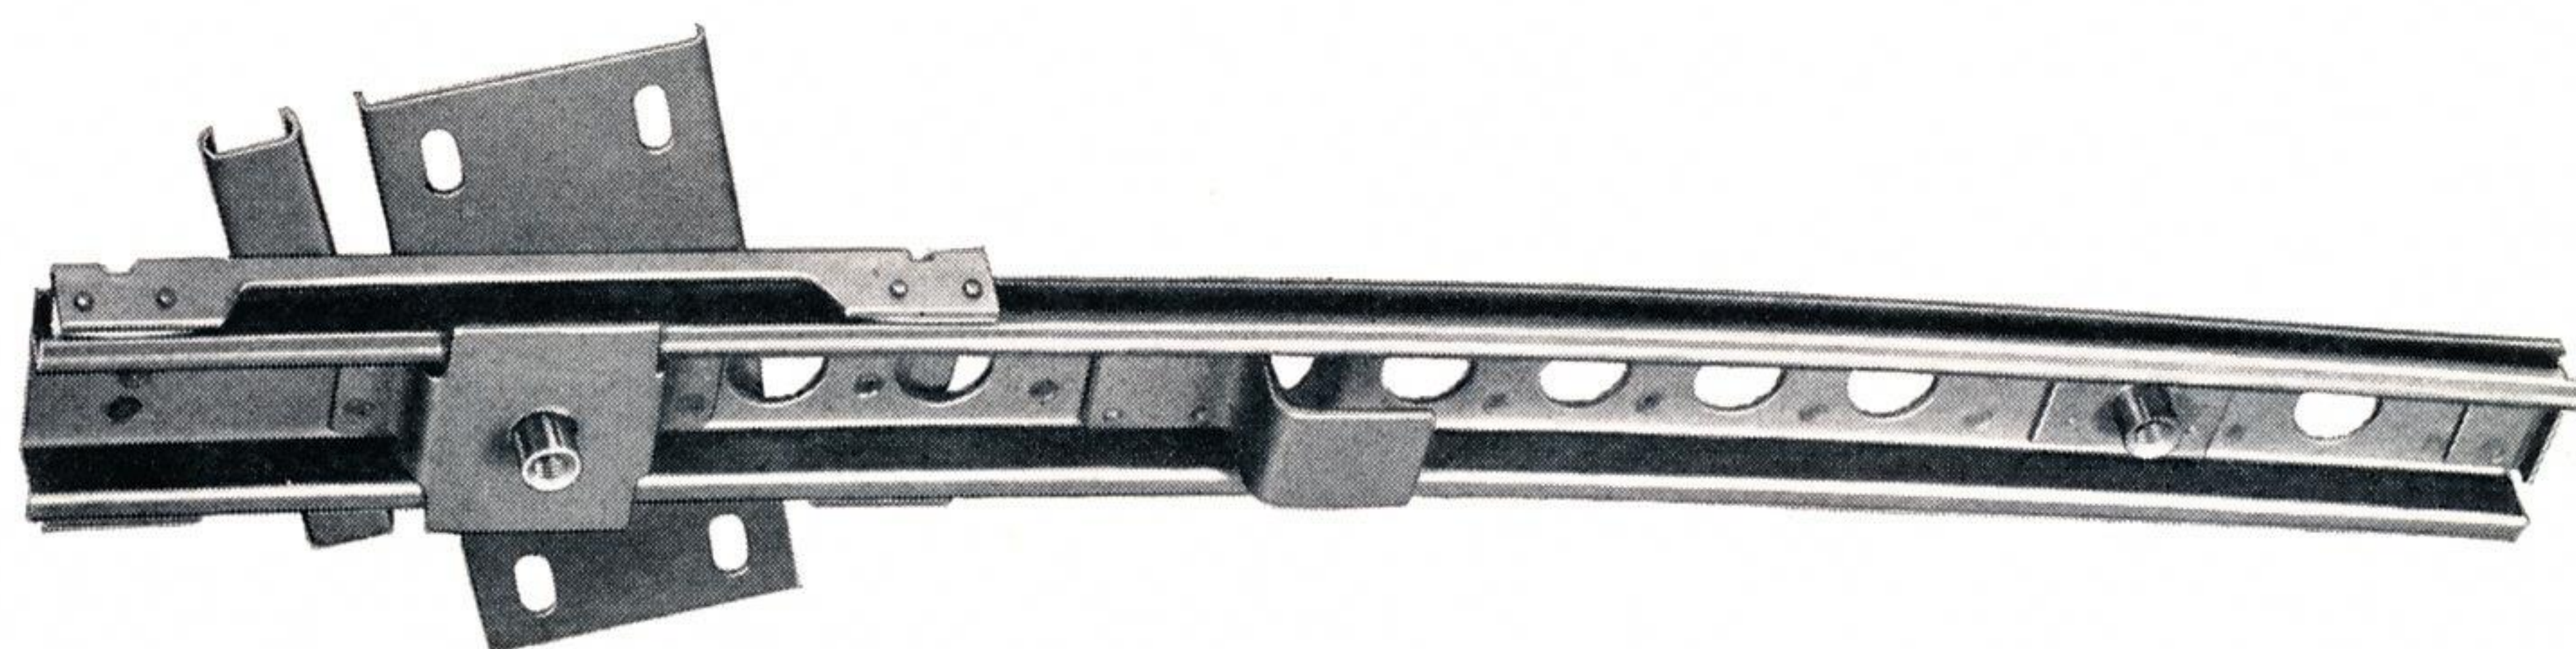

141 837 551 B

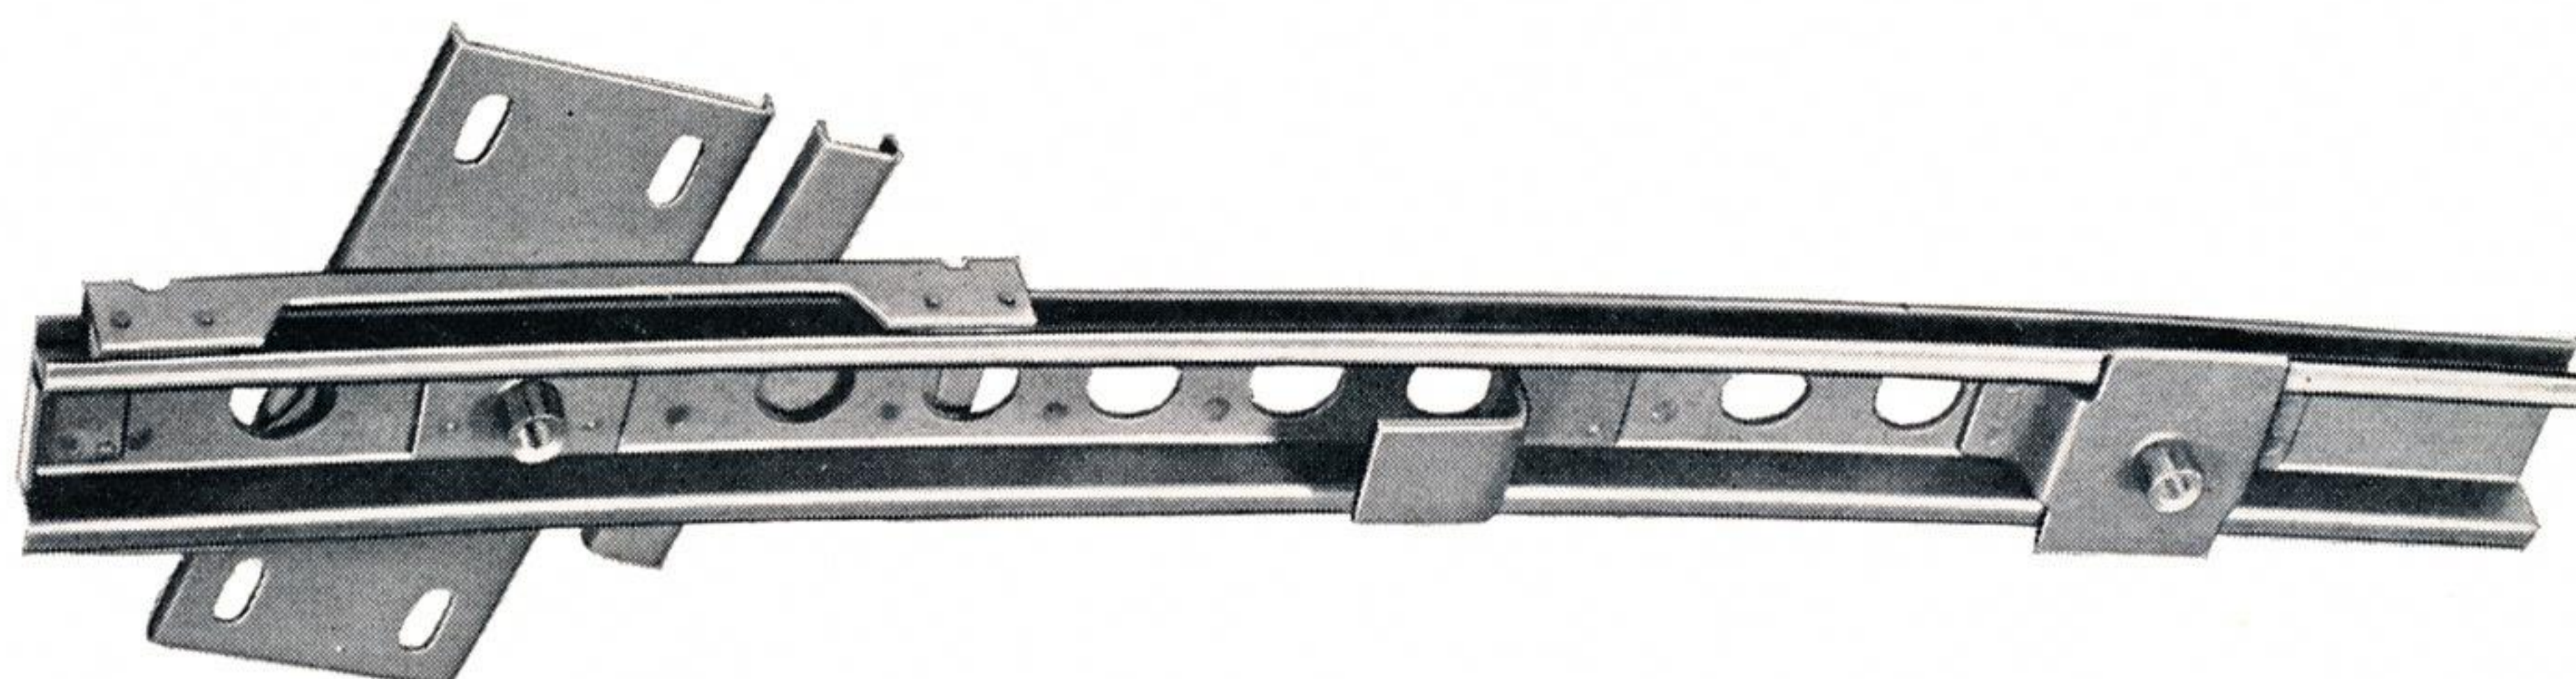

141 837 552 B

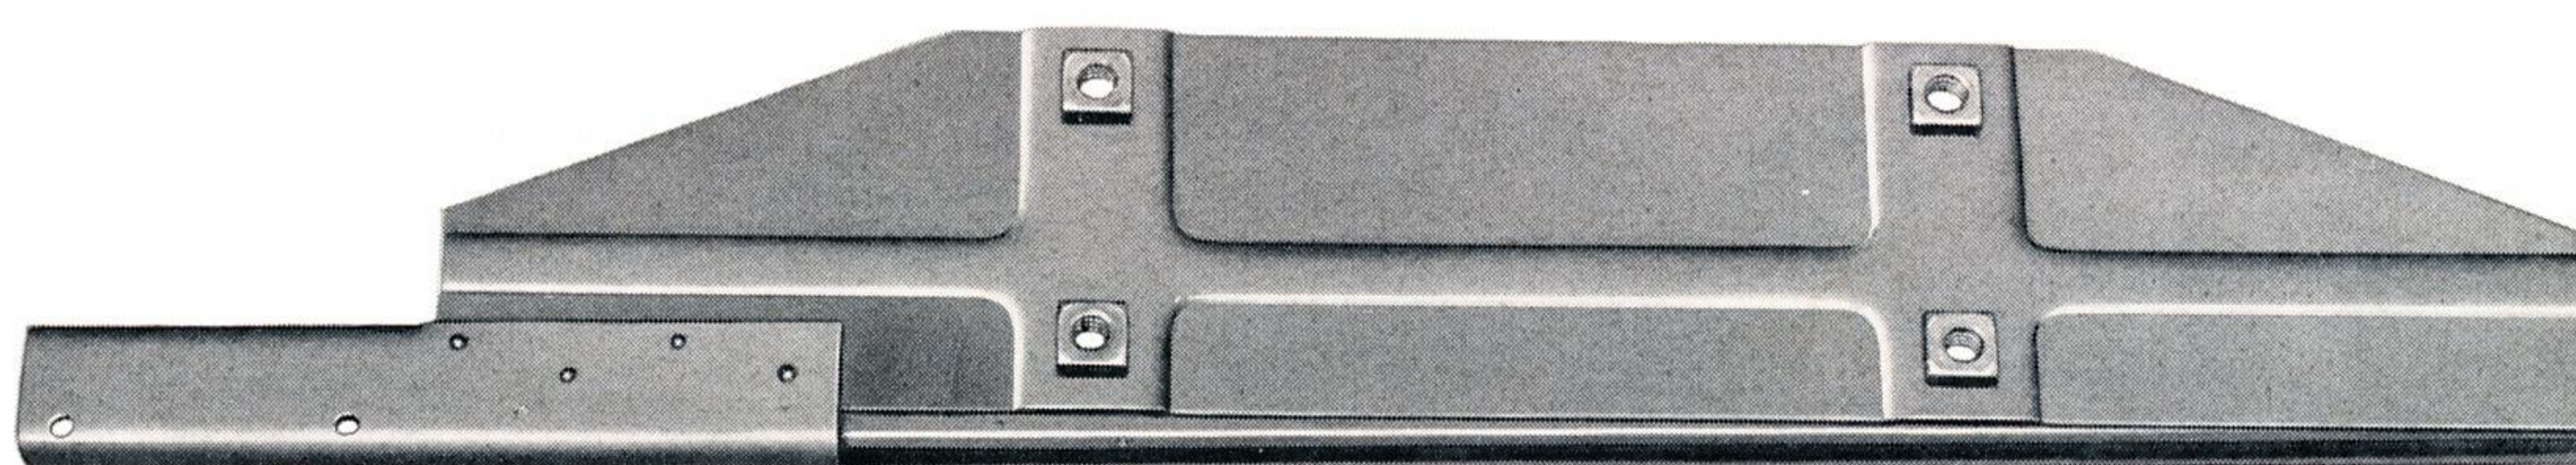

141 837 571

Guide Rails with Window Lift Channels


Part No.	Designation	Model	Used from Chassis No.	up to Chassis No.	Remarks
141 837 551 A	Guide rail left with window lift channel		2 395 181	2 960 113	
141 837 551 B	Guide rail left with window lift channel		2 960 114		
141 837 552	Guide rail right with window lift channel		2 395 181	2 960 113	
141 837 552 B	Guide rail right with window lift channel		2 960 114		

Door Window Lift Channels

141 837 571	Lift channel – Door window, left	141, 143	2 395 180	
141 837 571 A	Lift channel – Door window		2 395 181	used for left and right
141 837 572	Lift channel – Door window, right	141, 143	2 395 180	



141 837 571 A

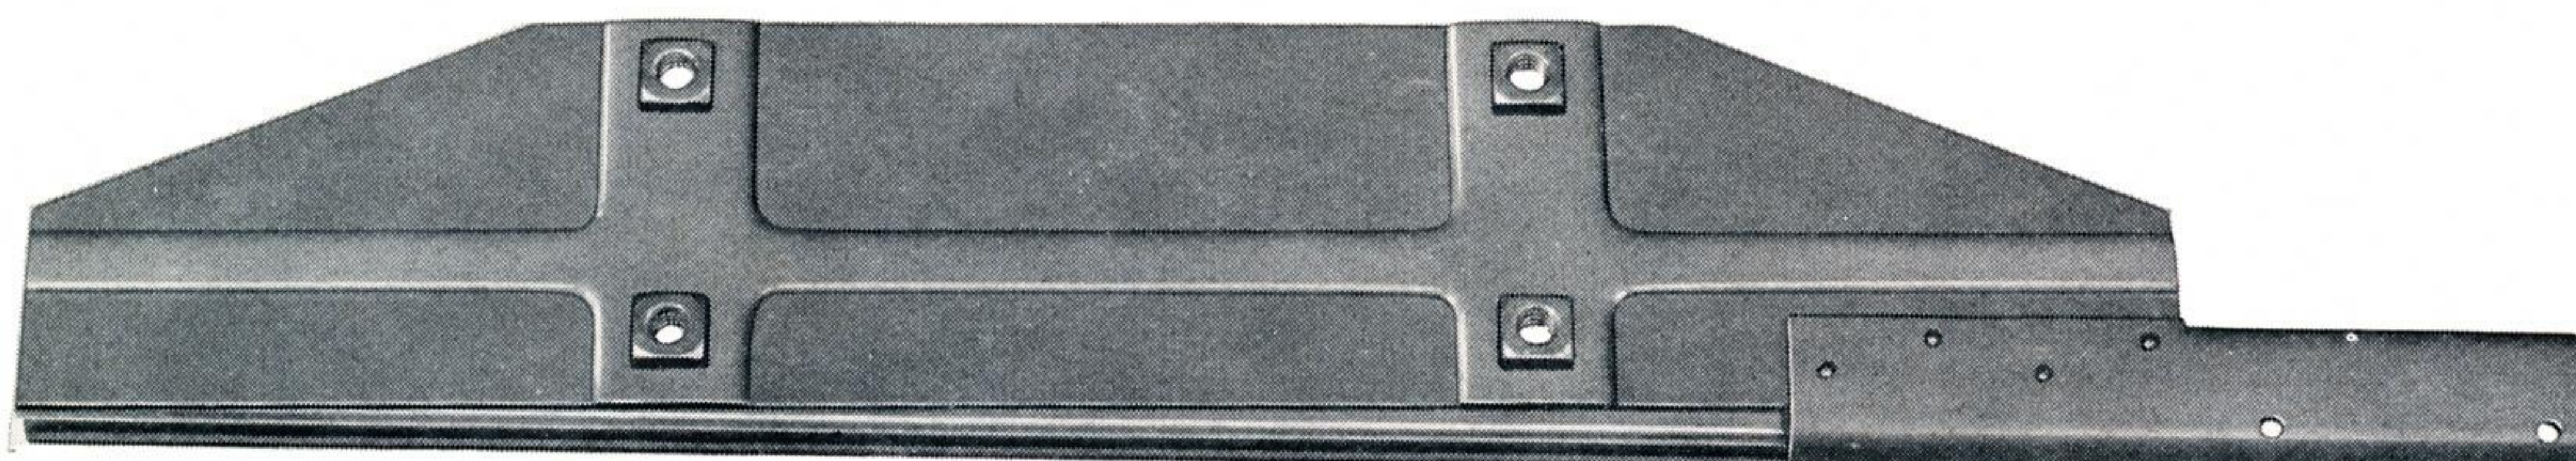


141 837 572


Rational Loading

- ❶ An Rms. type waggon ready for loading. Because of their measurements only Rms. and Rmrs. type waggons are suitable for rational and economic loading, as shown here.
- ❷ With the help of fork lift trucks, stacks of six G 808 containers or ten G 809 containers are placed ready for loading near the parts store on the first floor. The proportion of metal in the shipment are arranged so that the most economical loading weight is attained.
- ❸ A special loading tackle which is safe and easy to operate has been designed for use with one of the 5 ton cranes.


❶

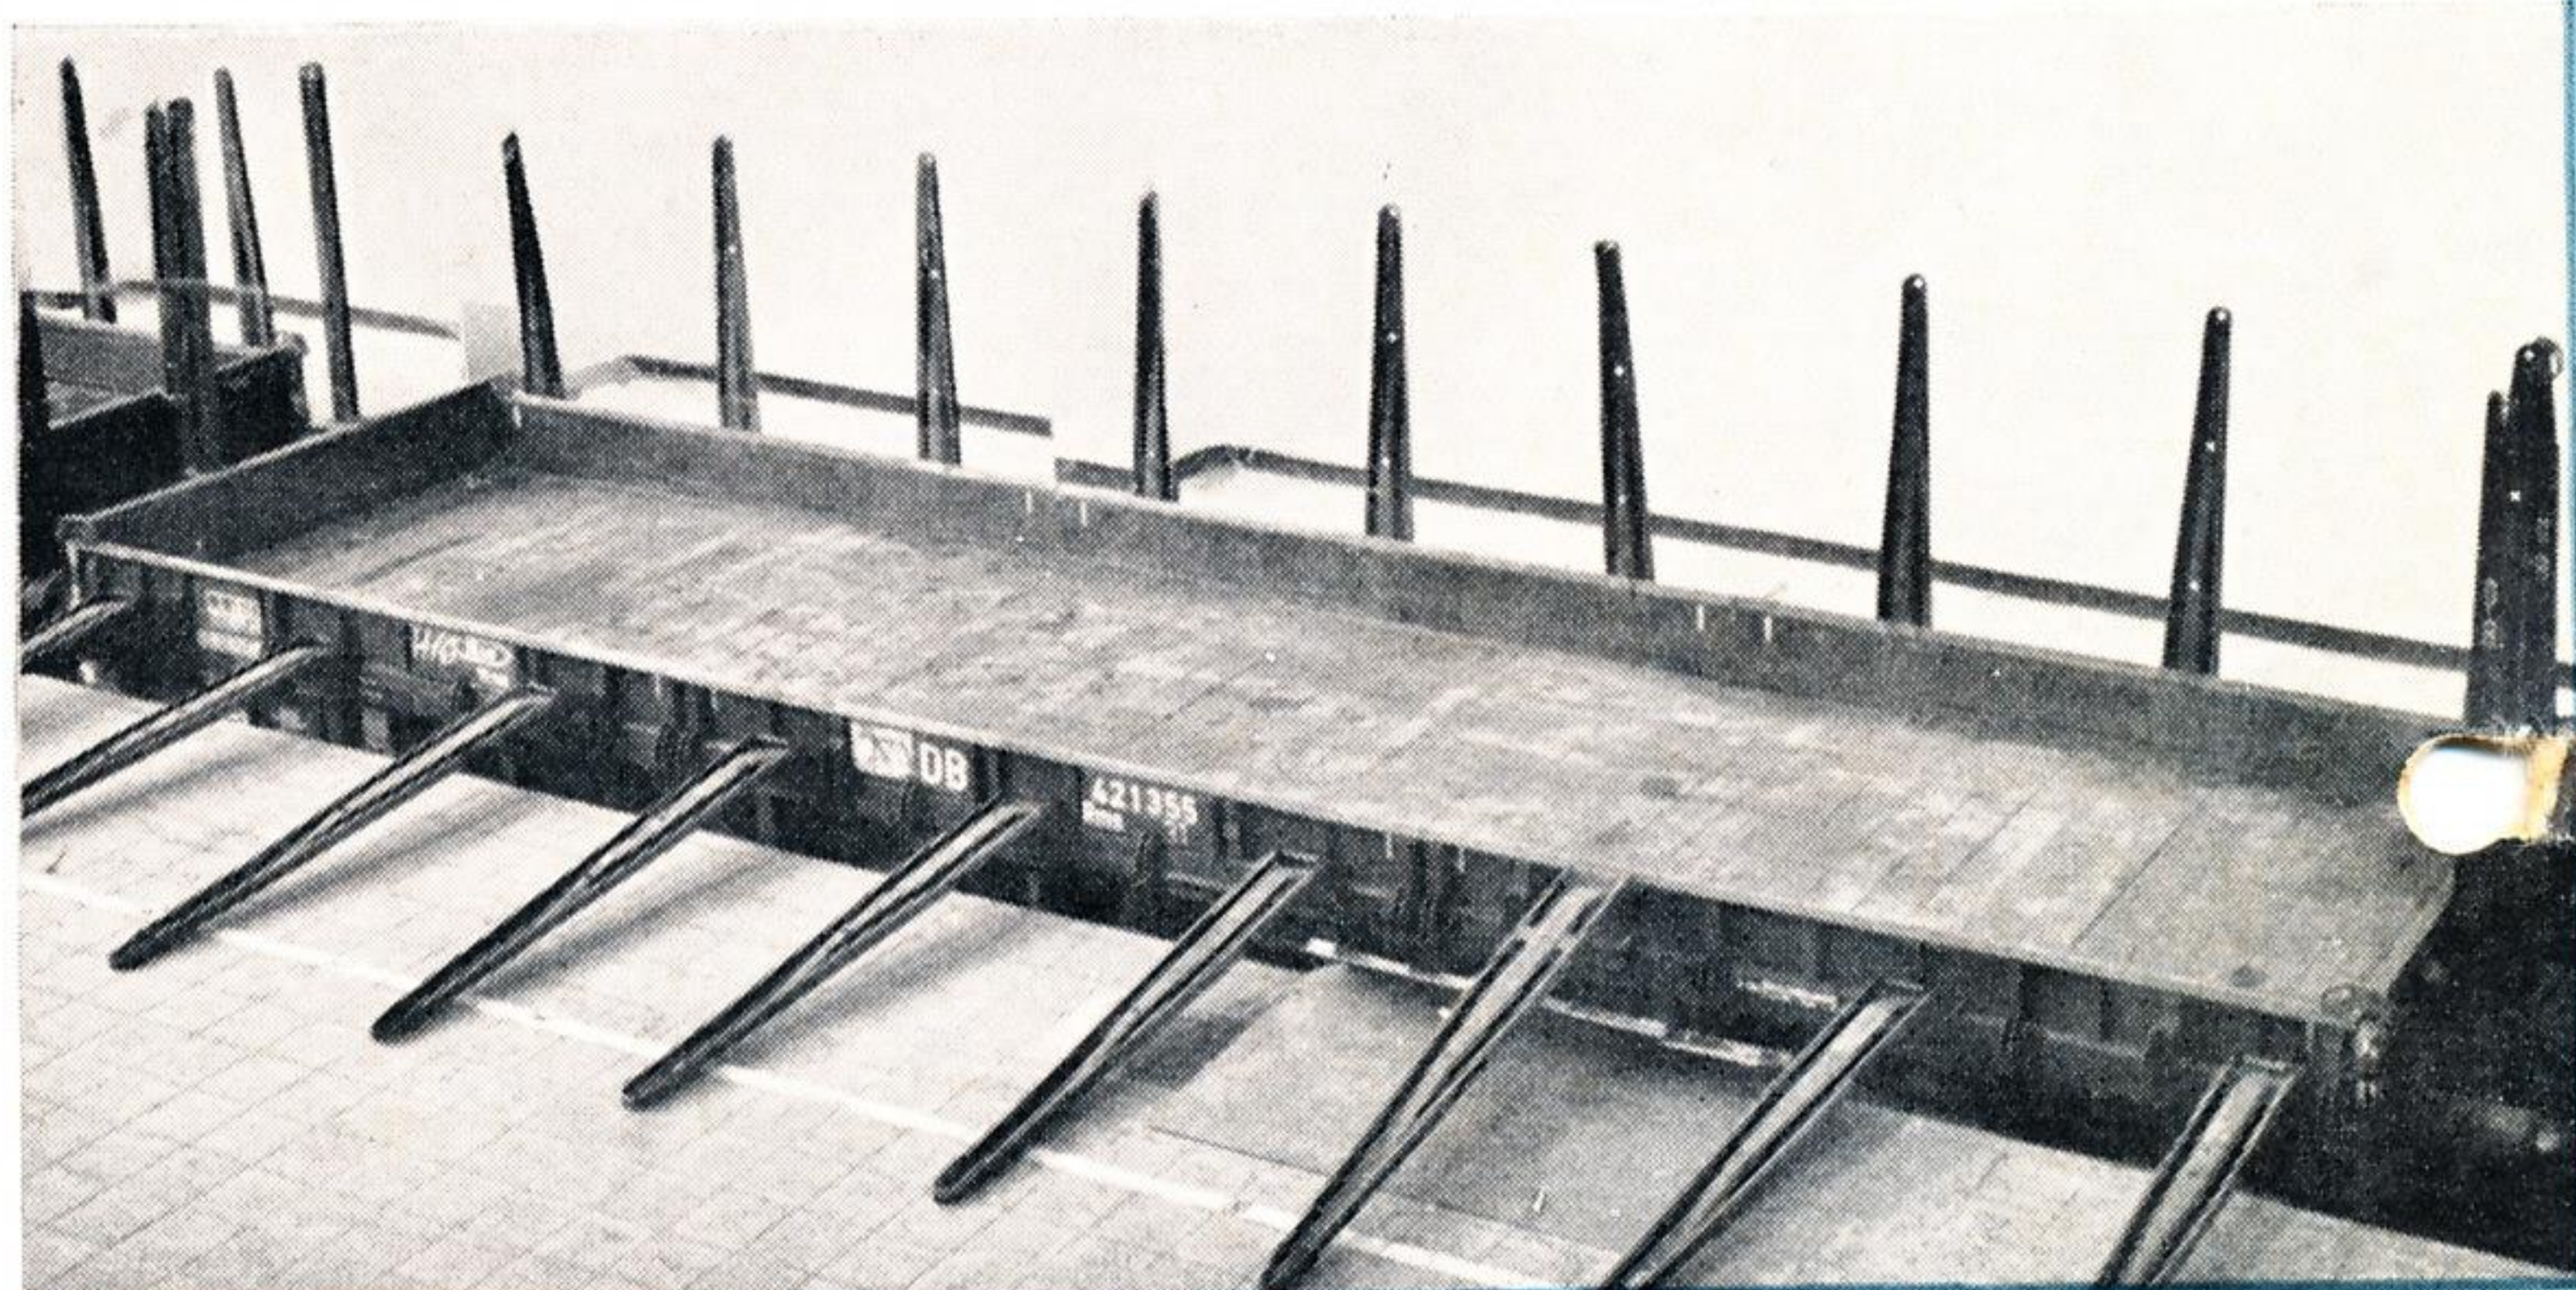


❷

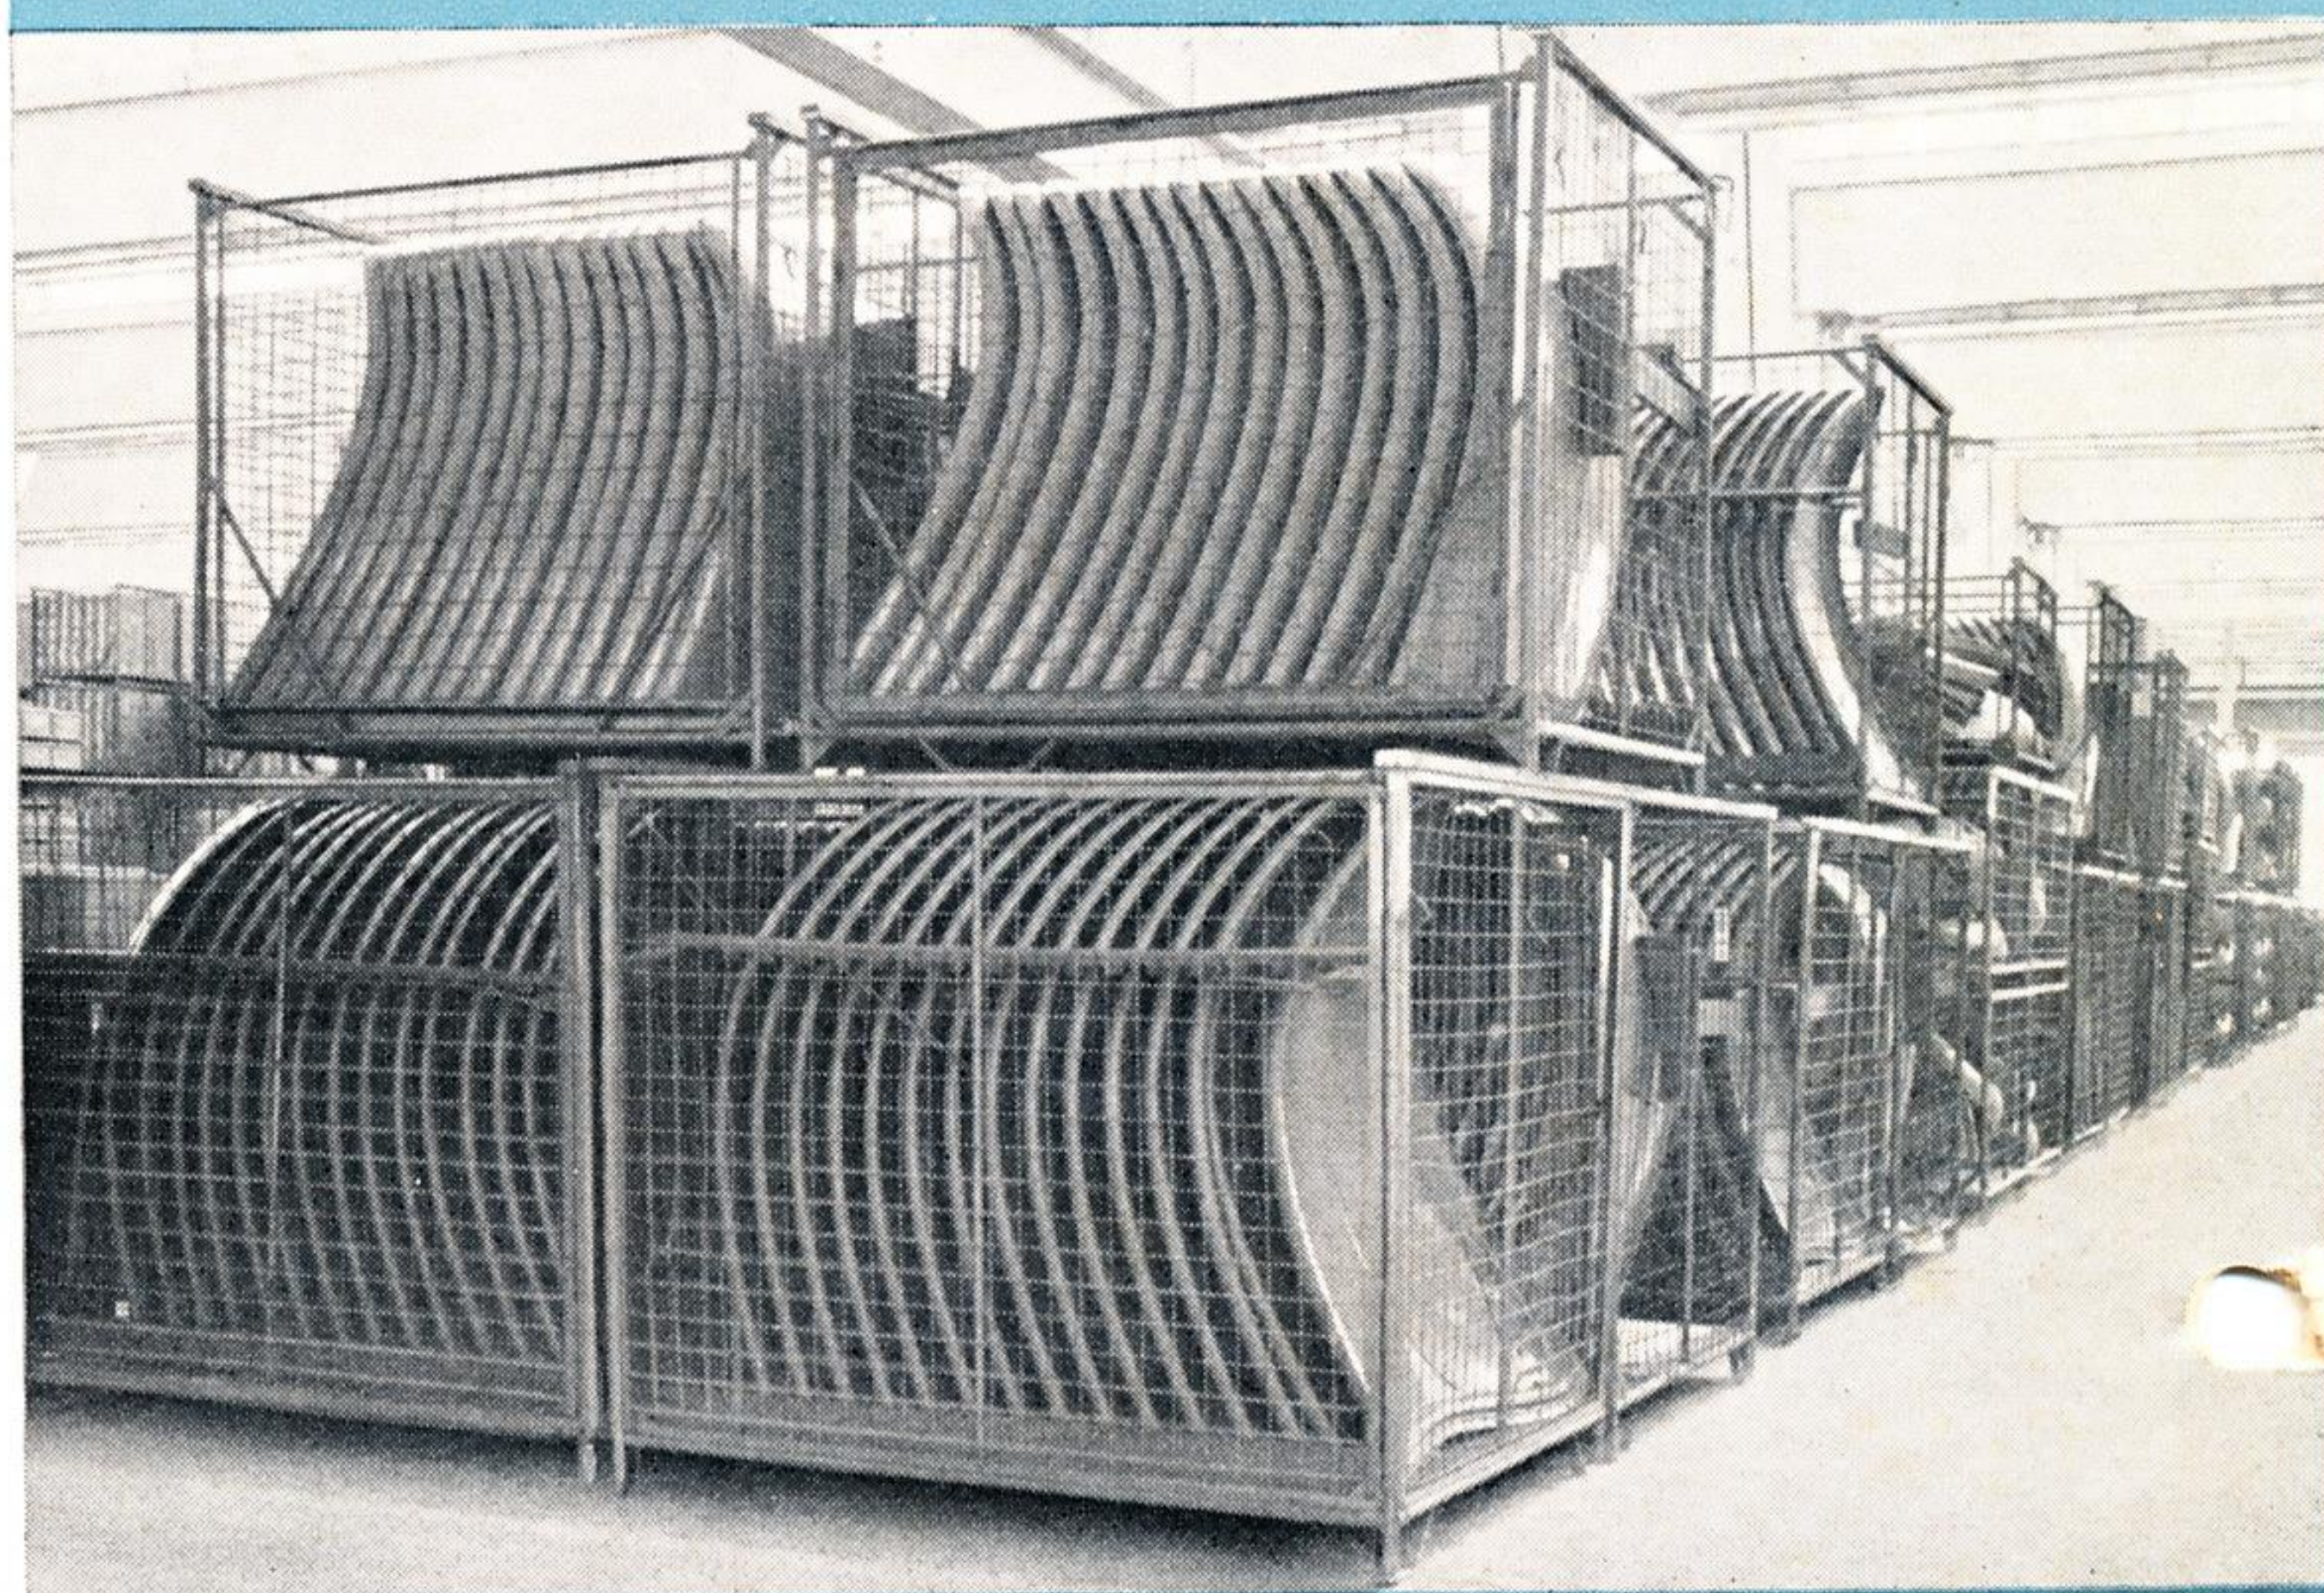


❸

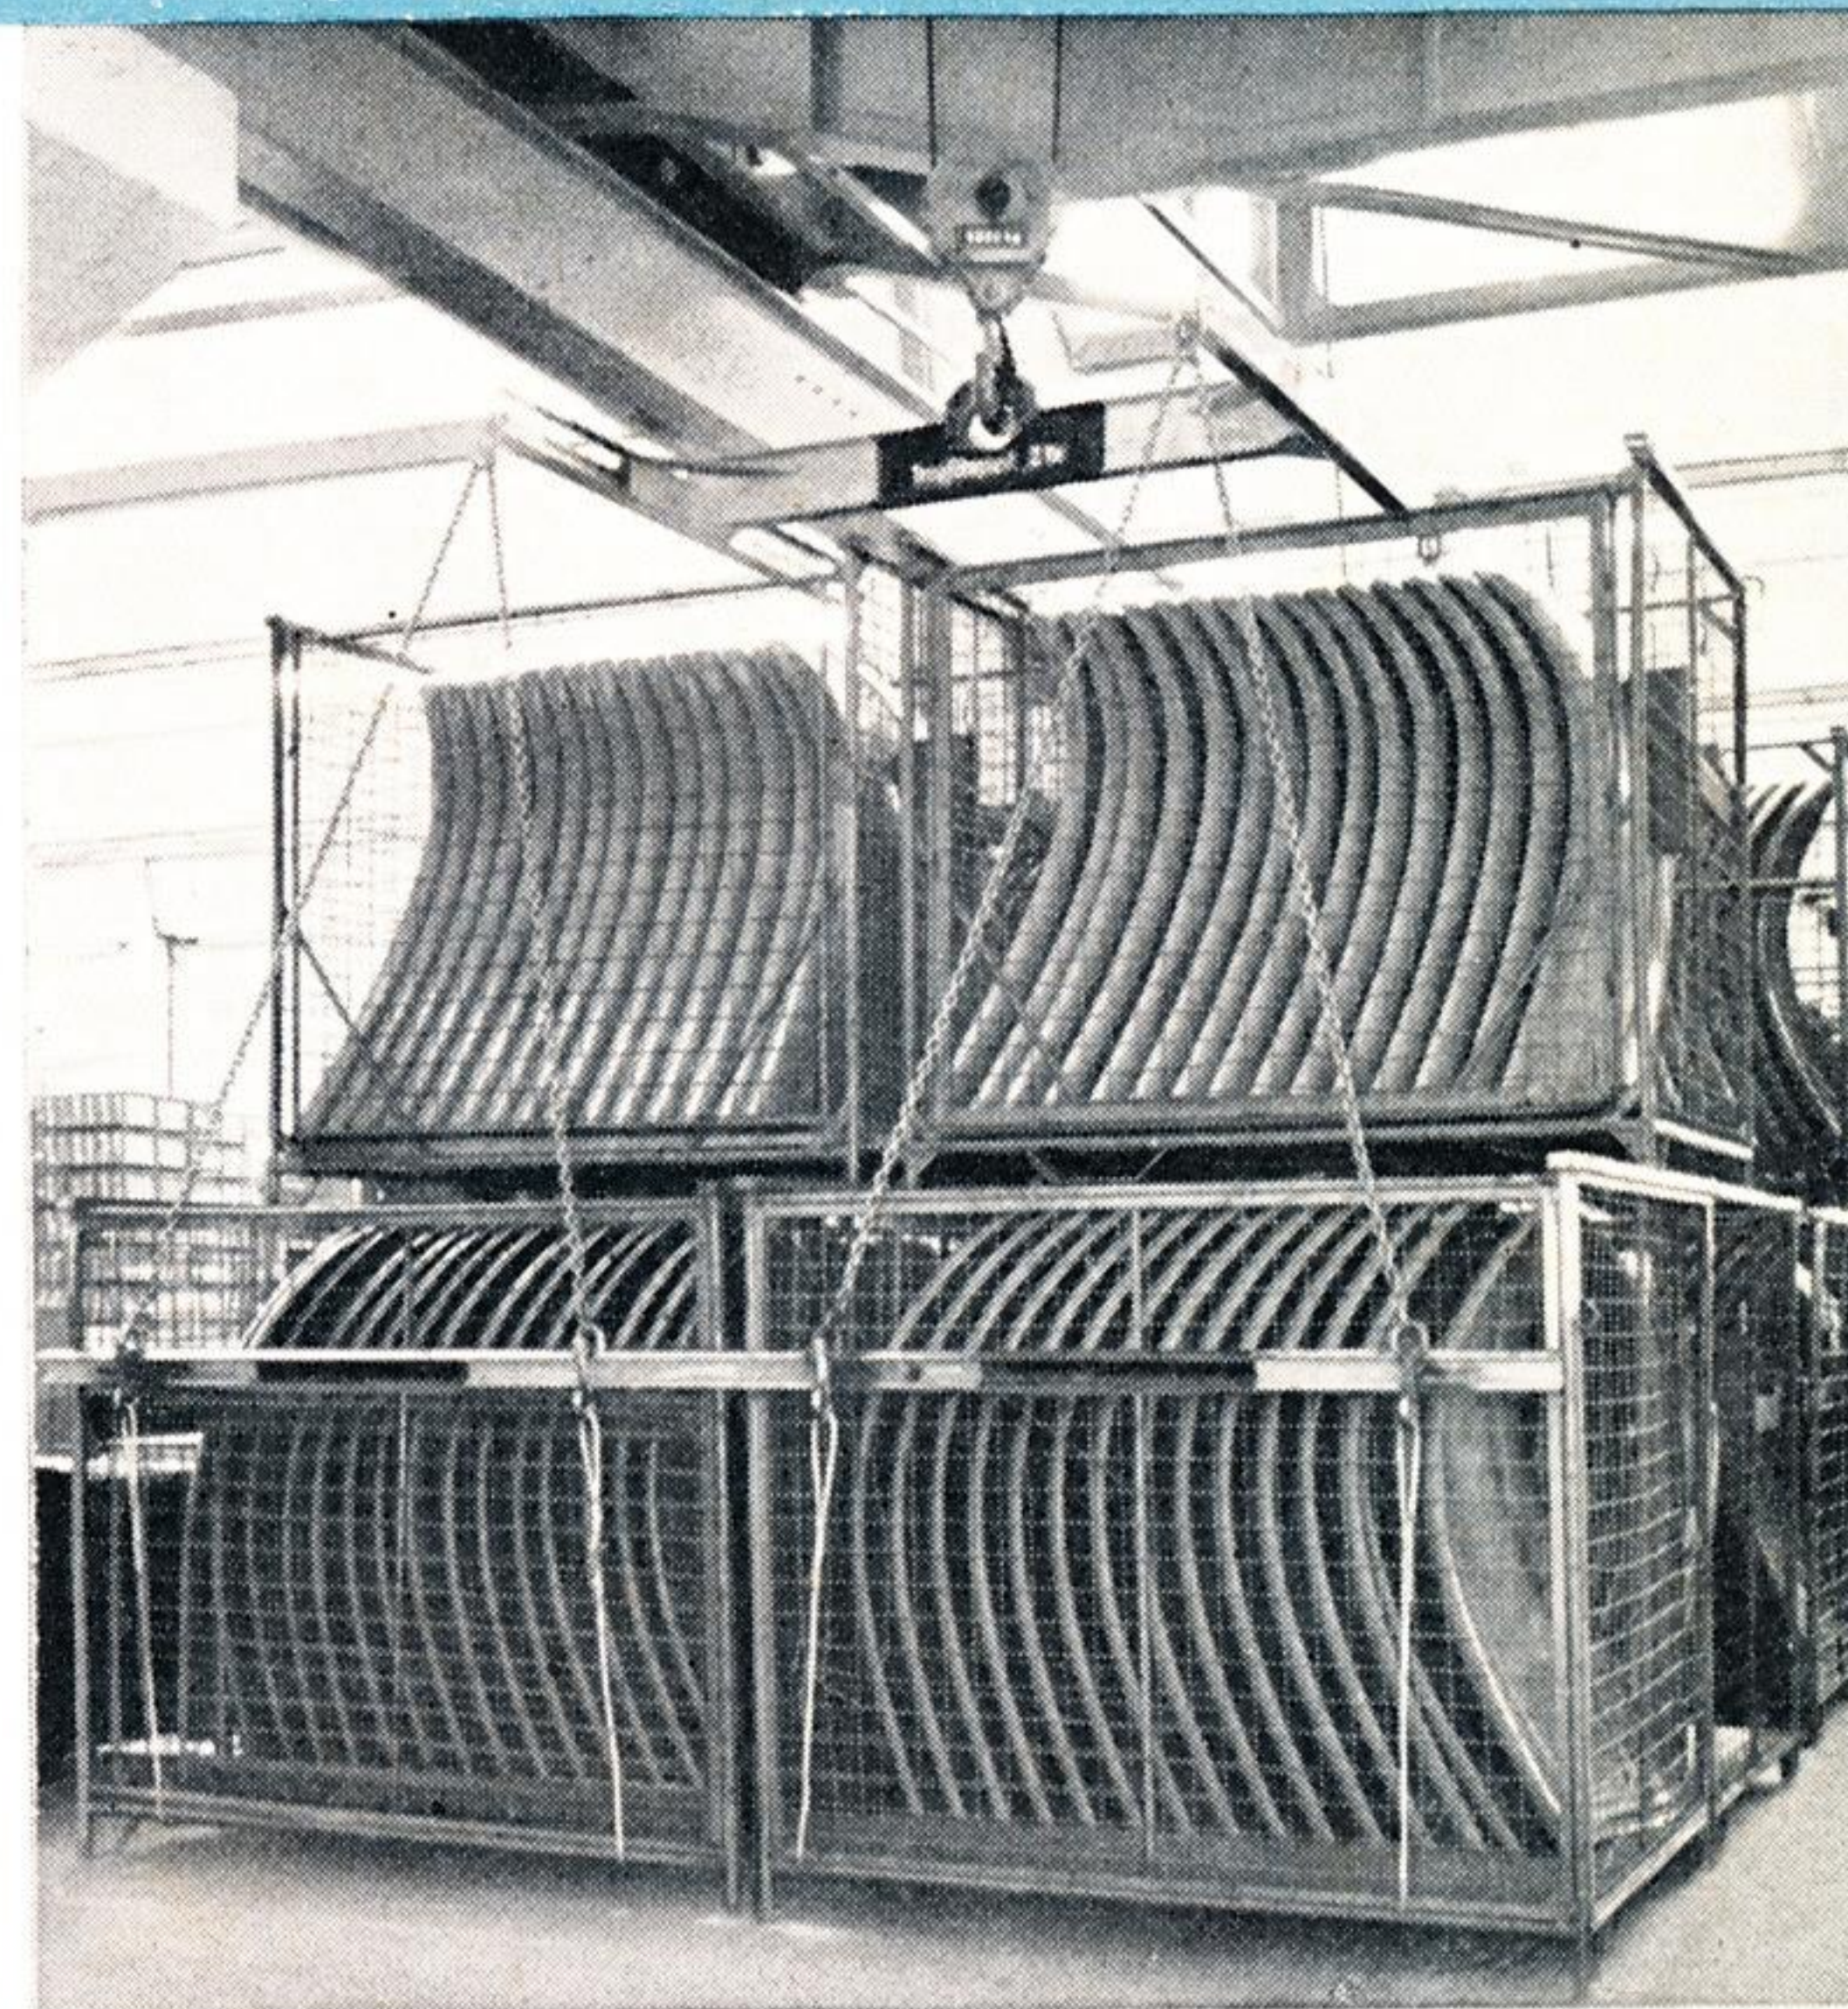


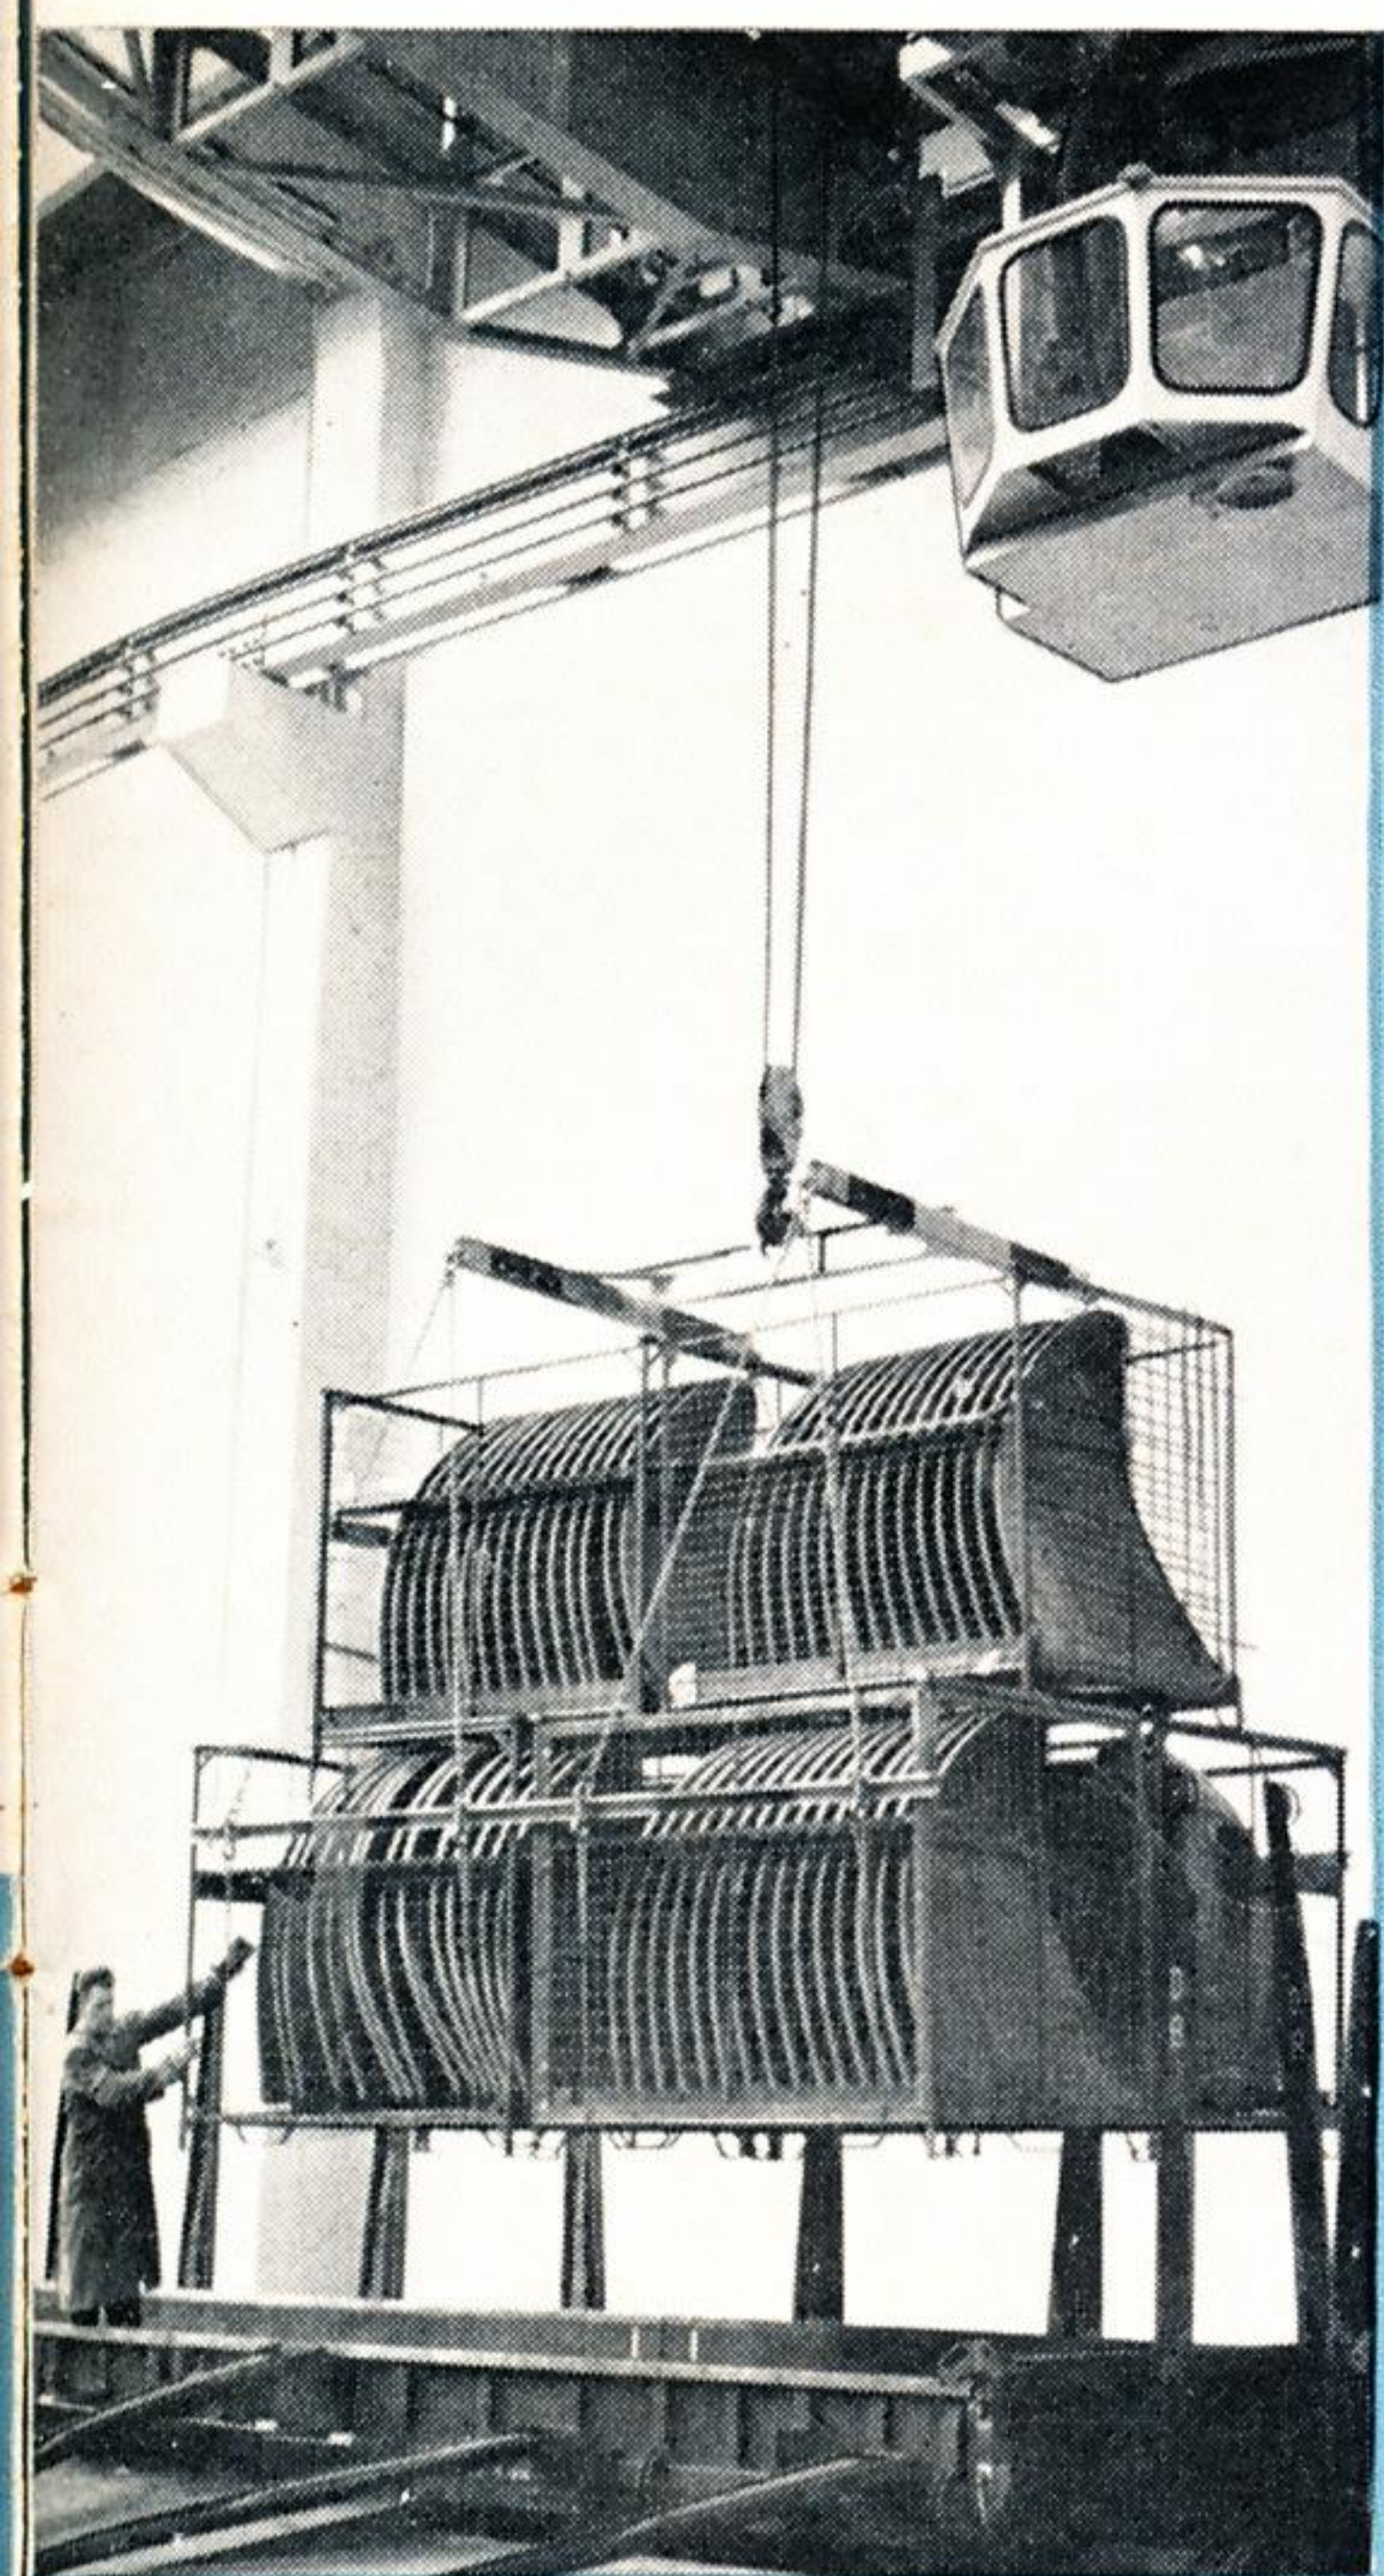


4

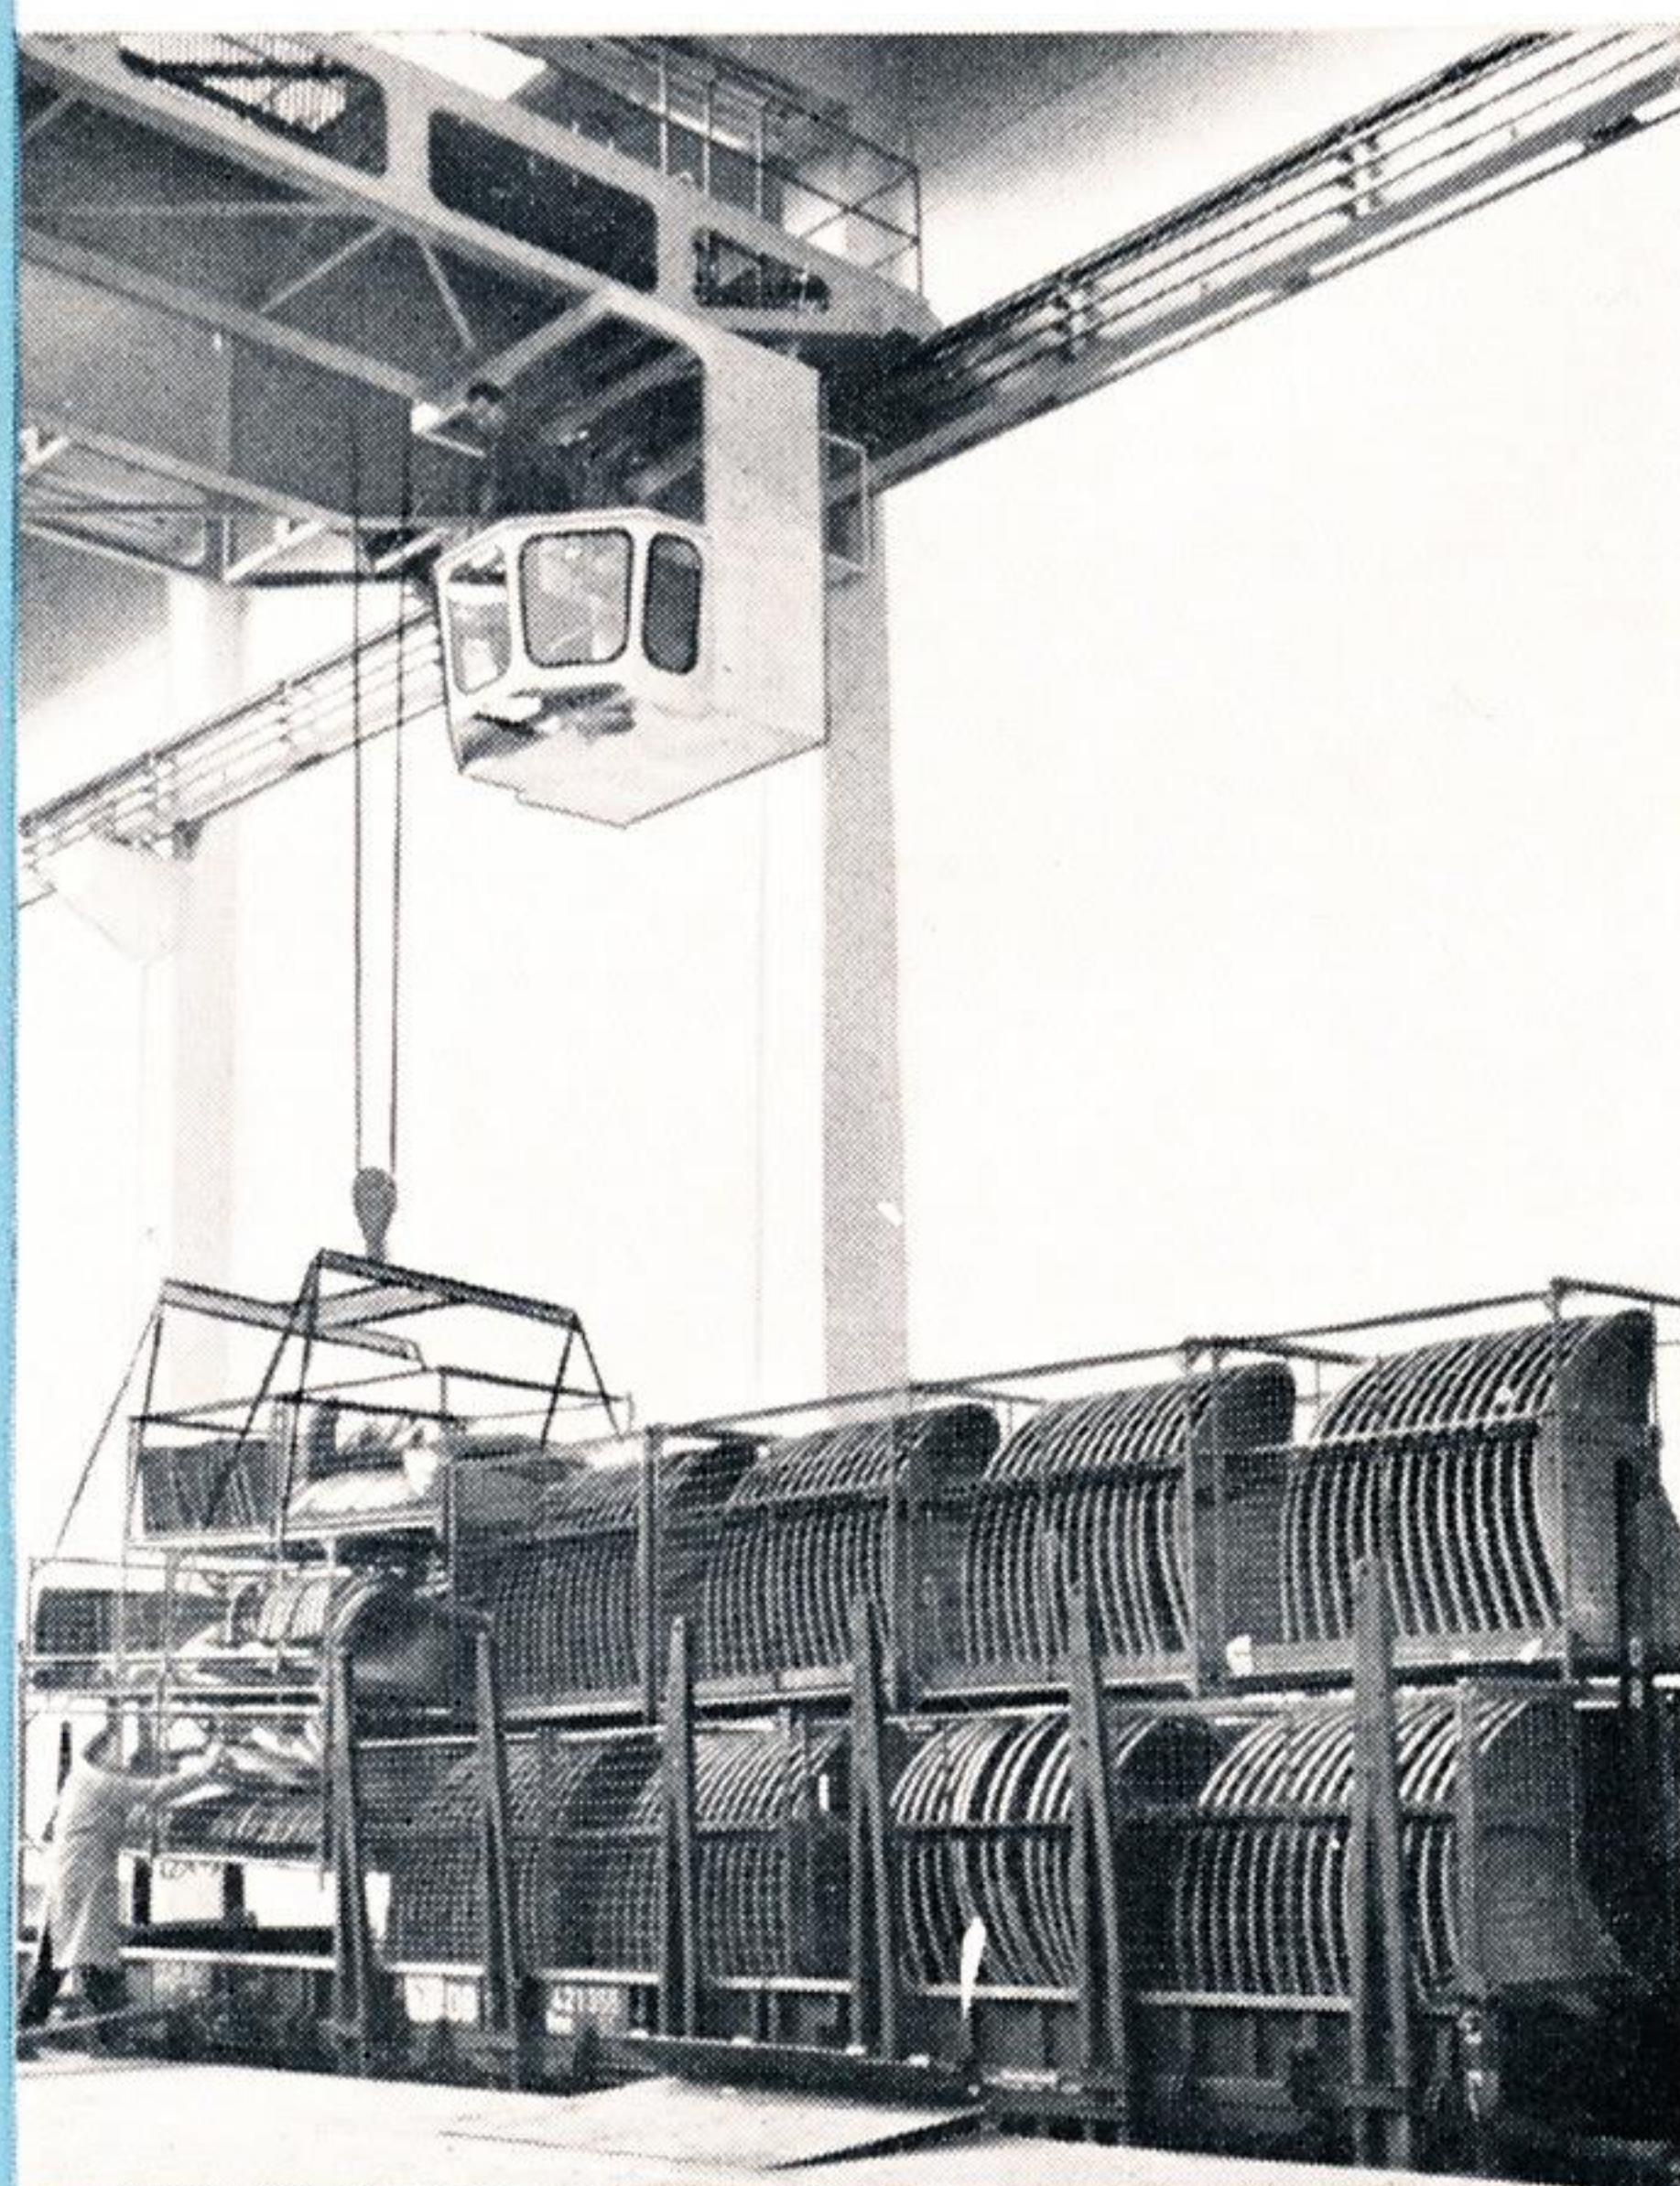


6

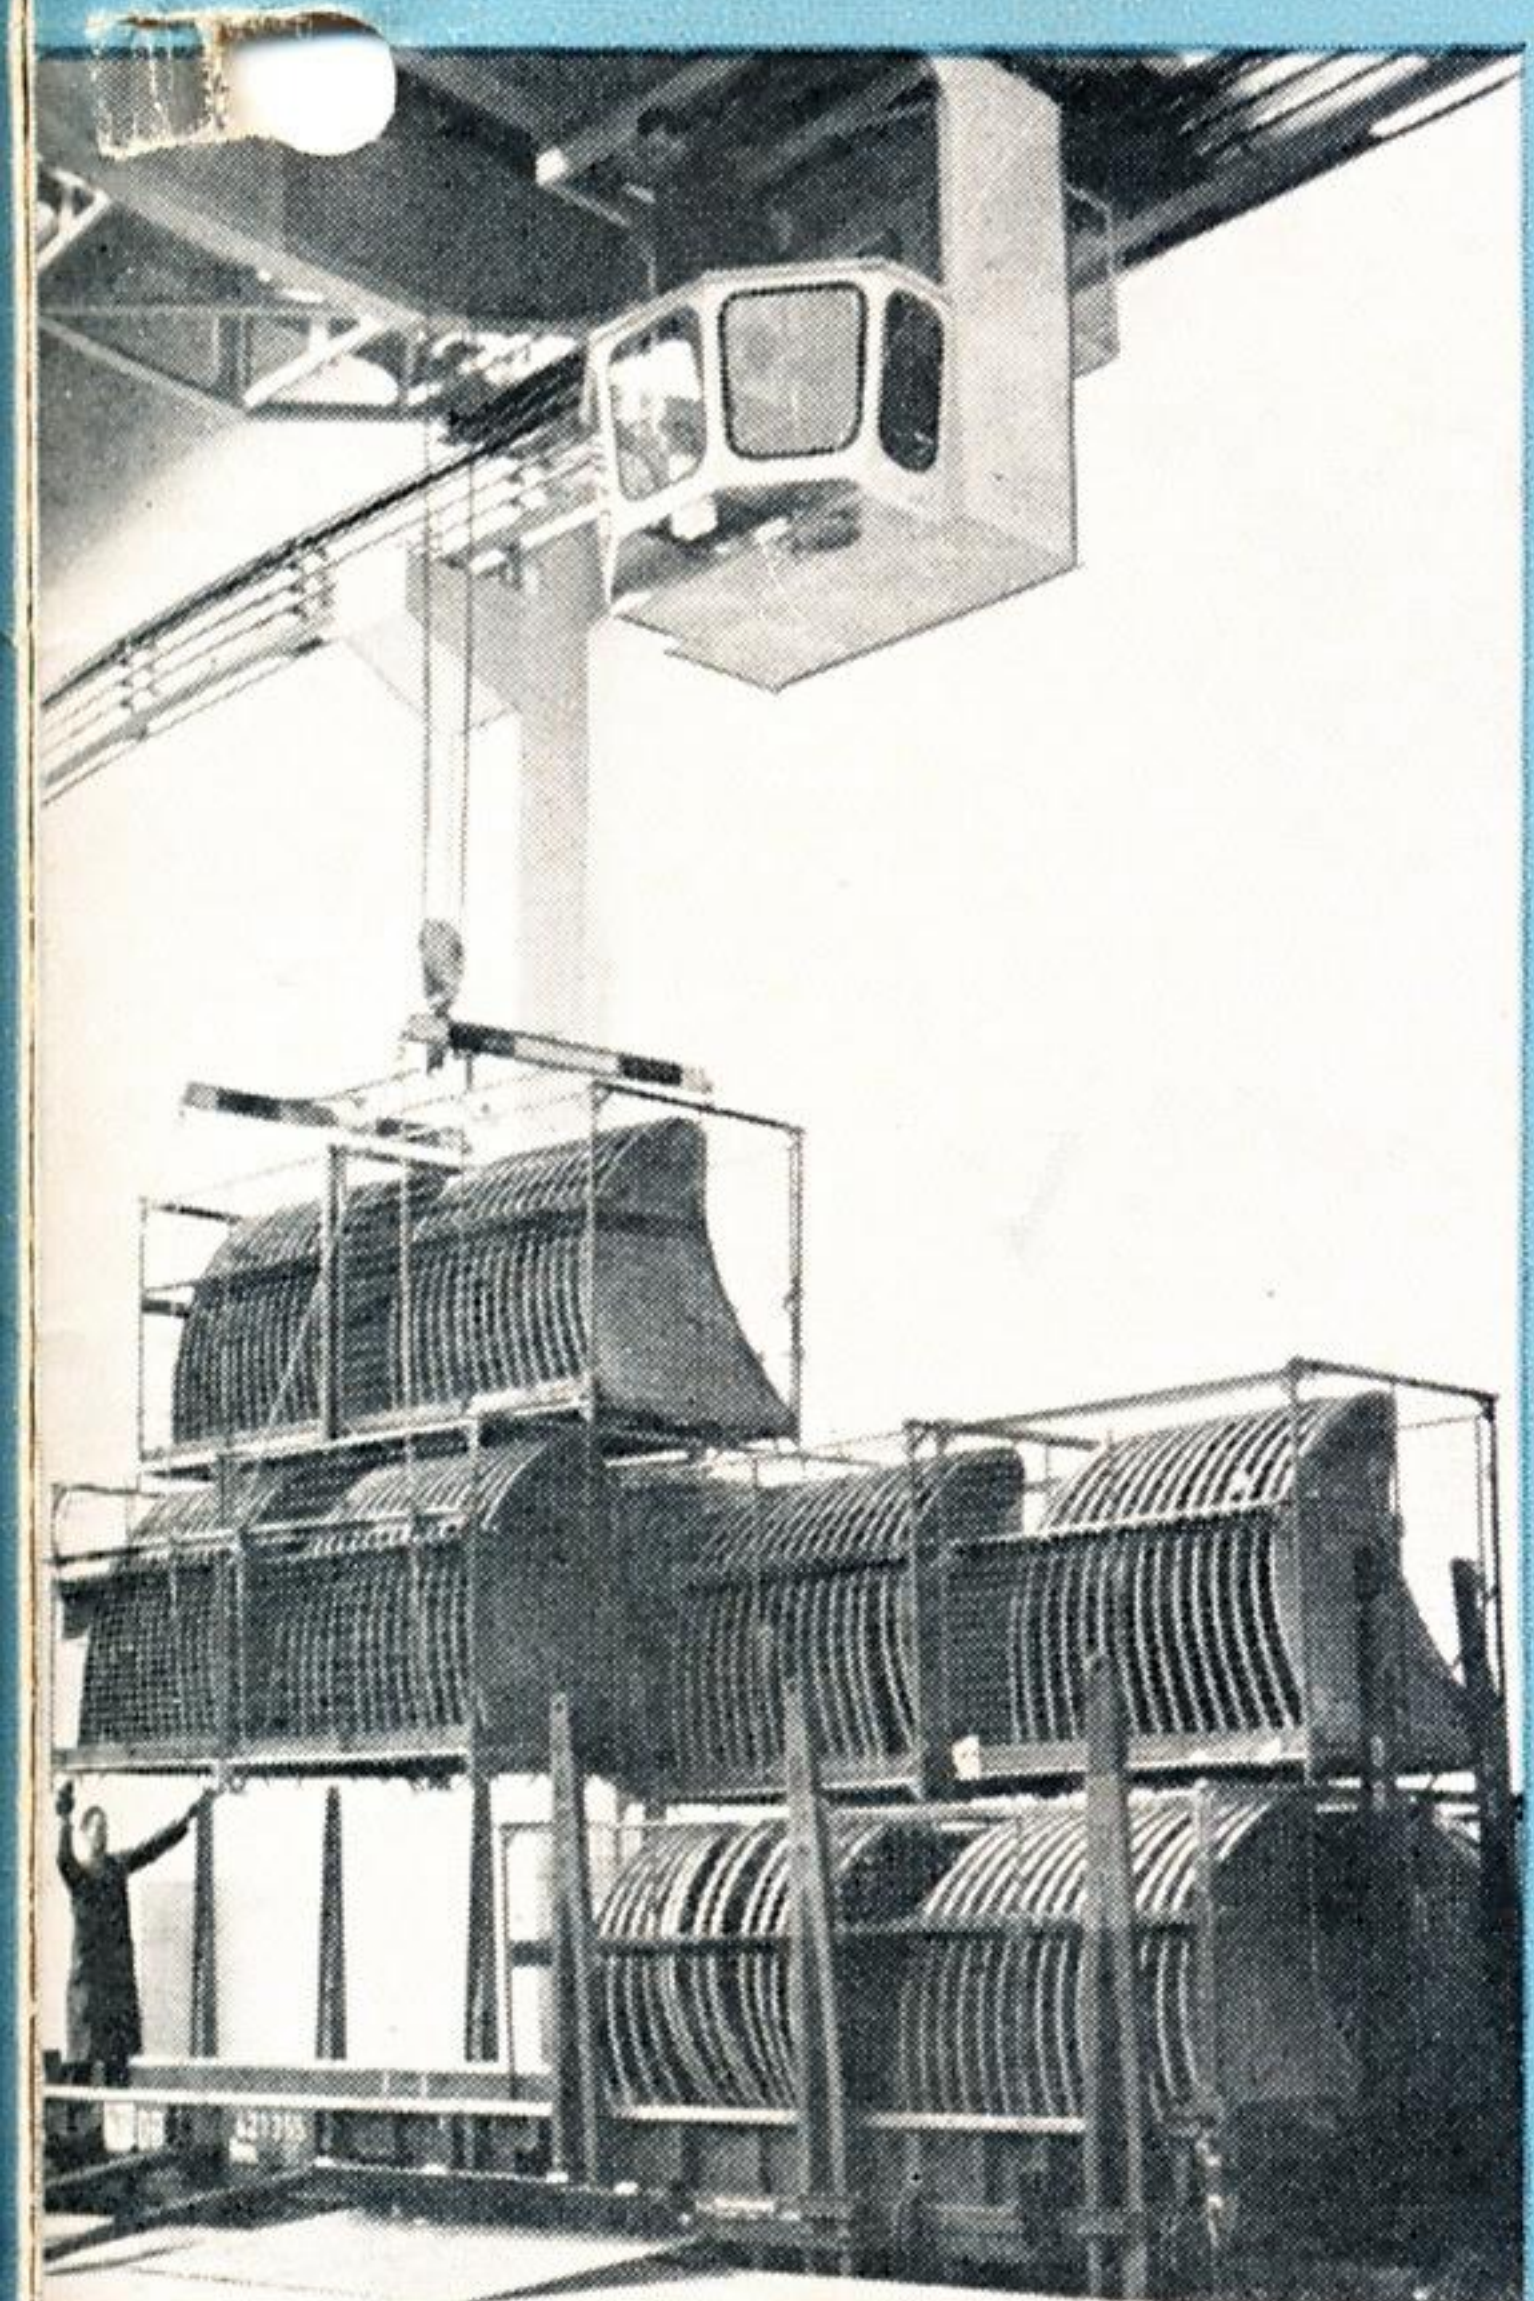

5

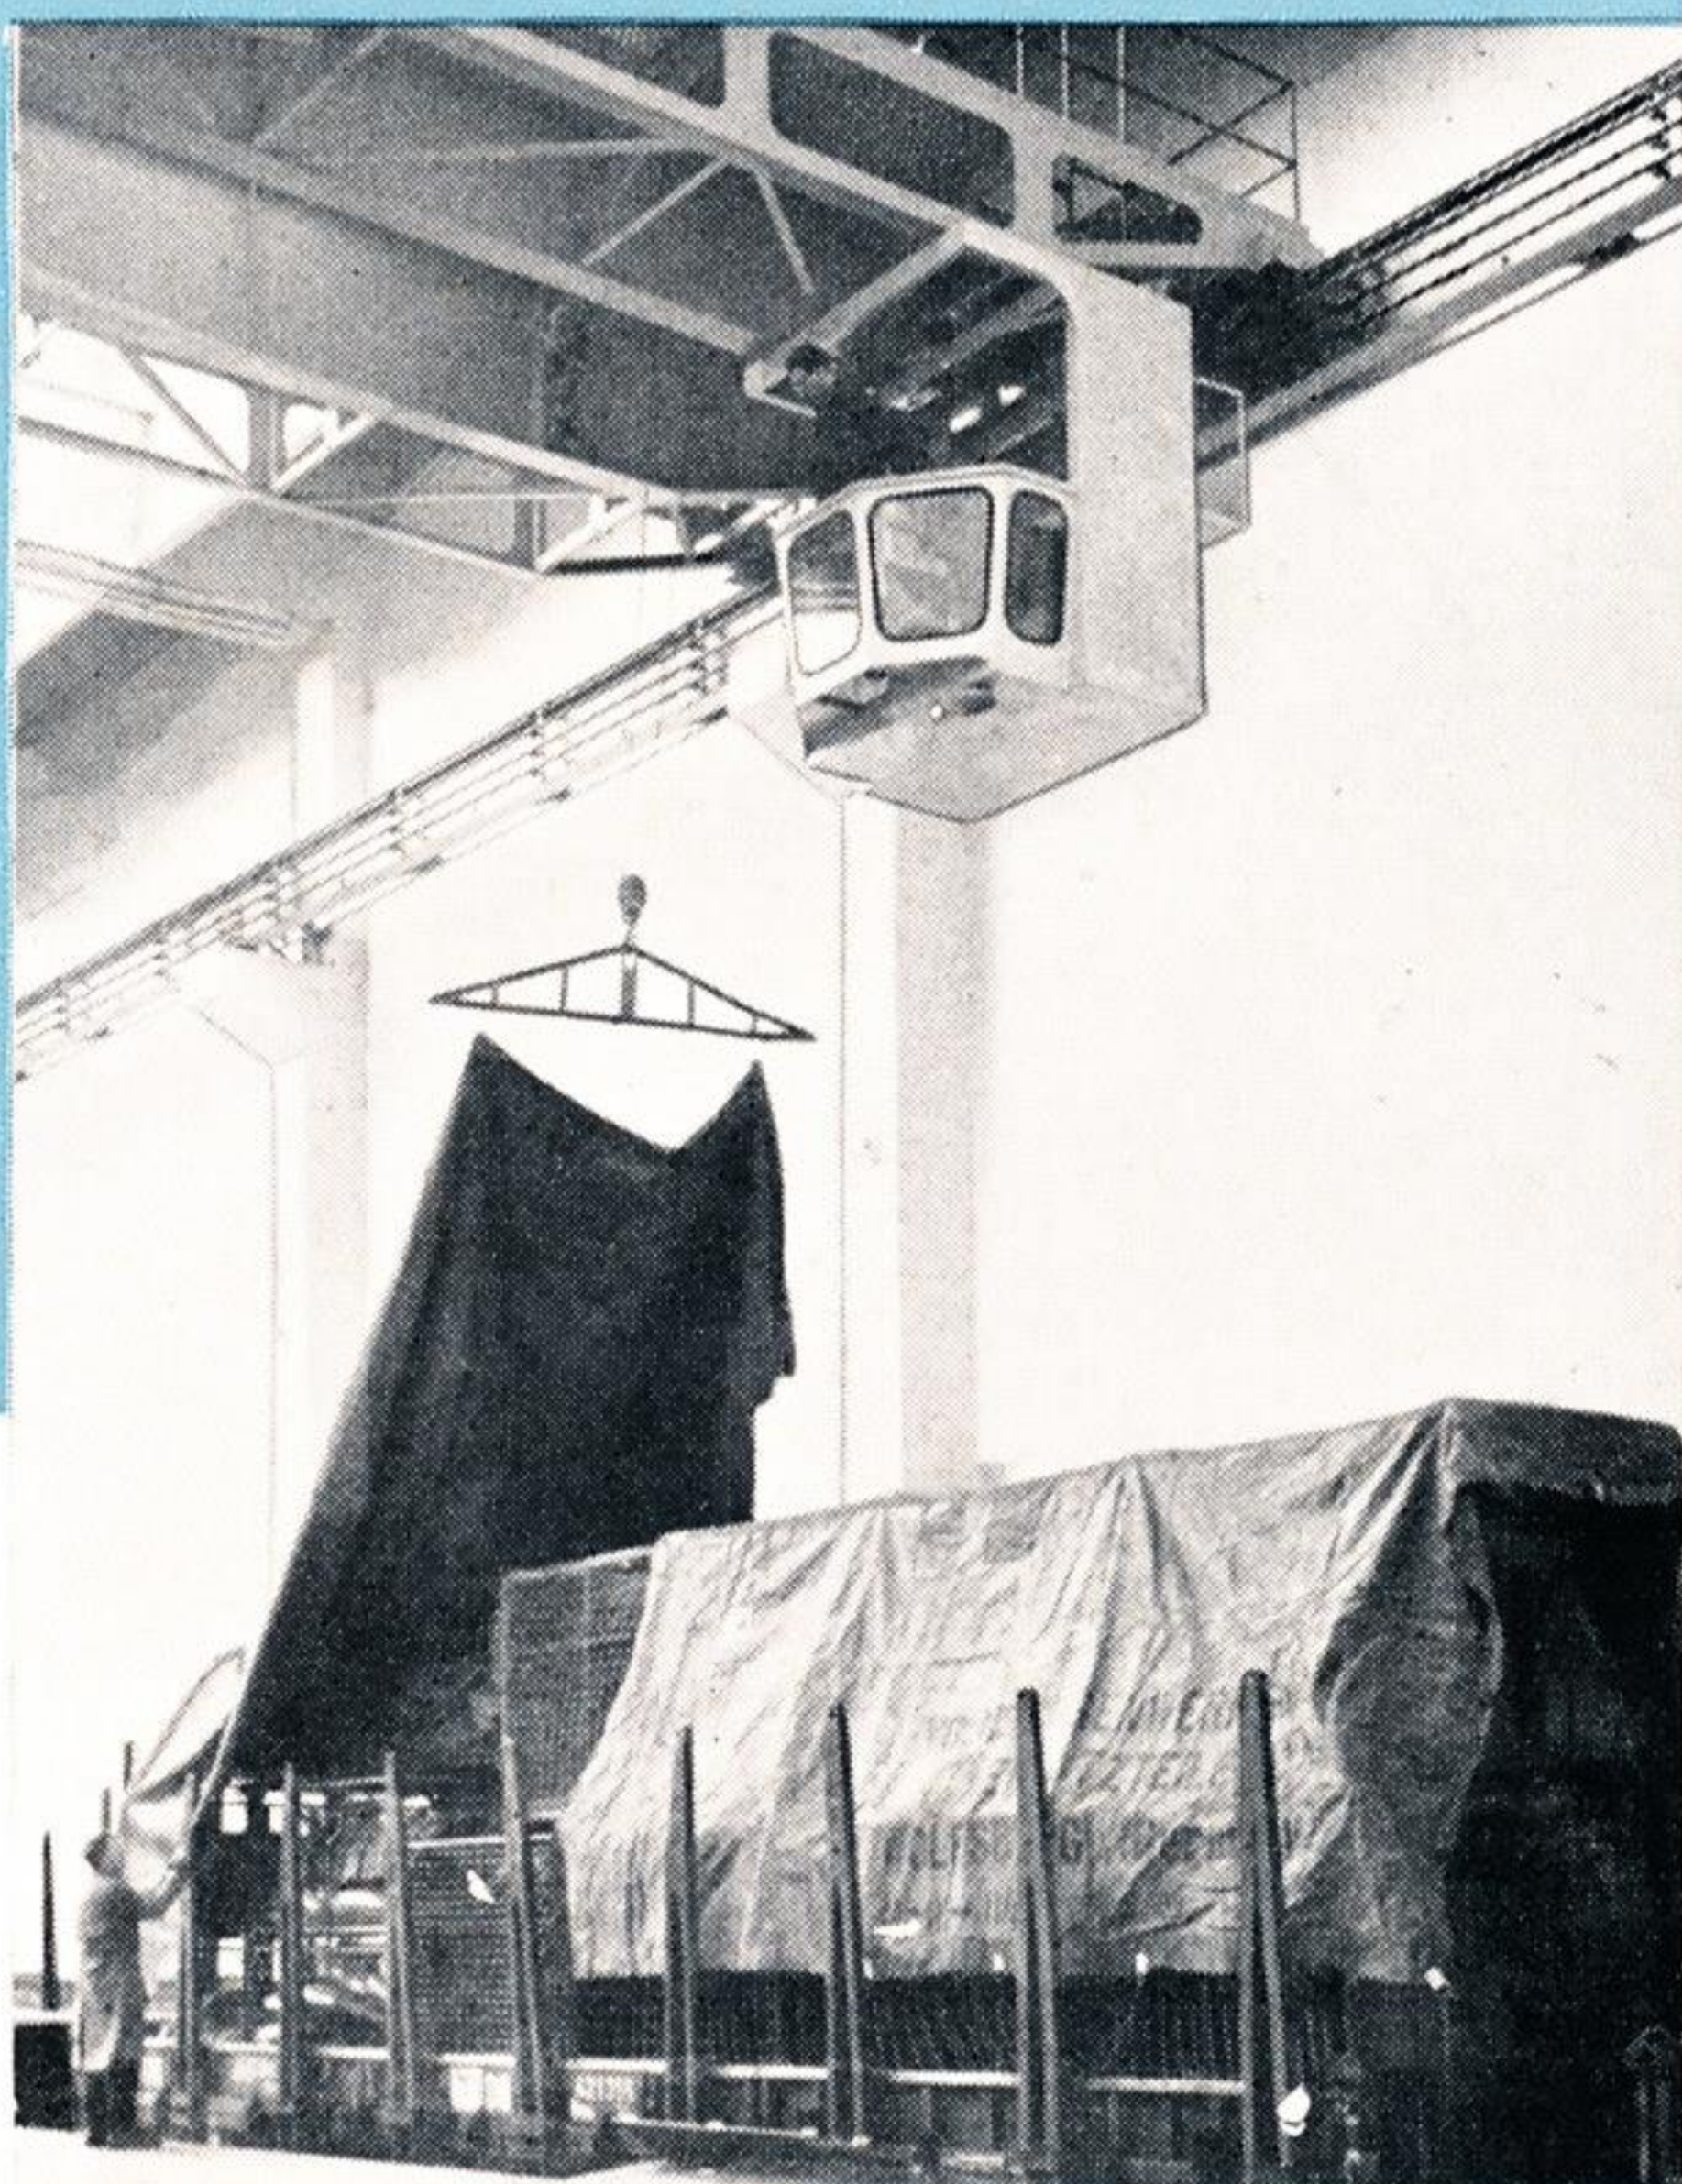

7

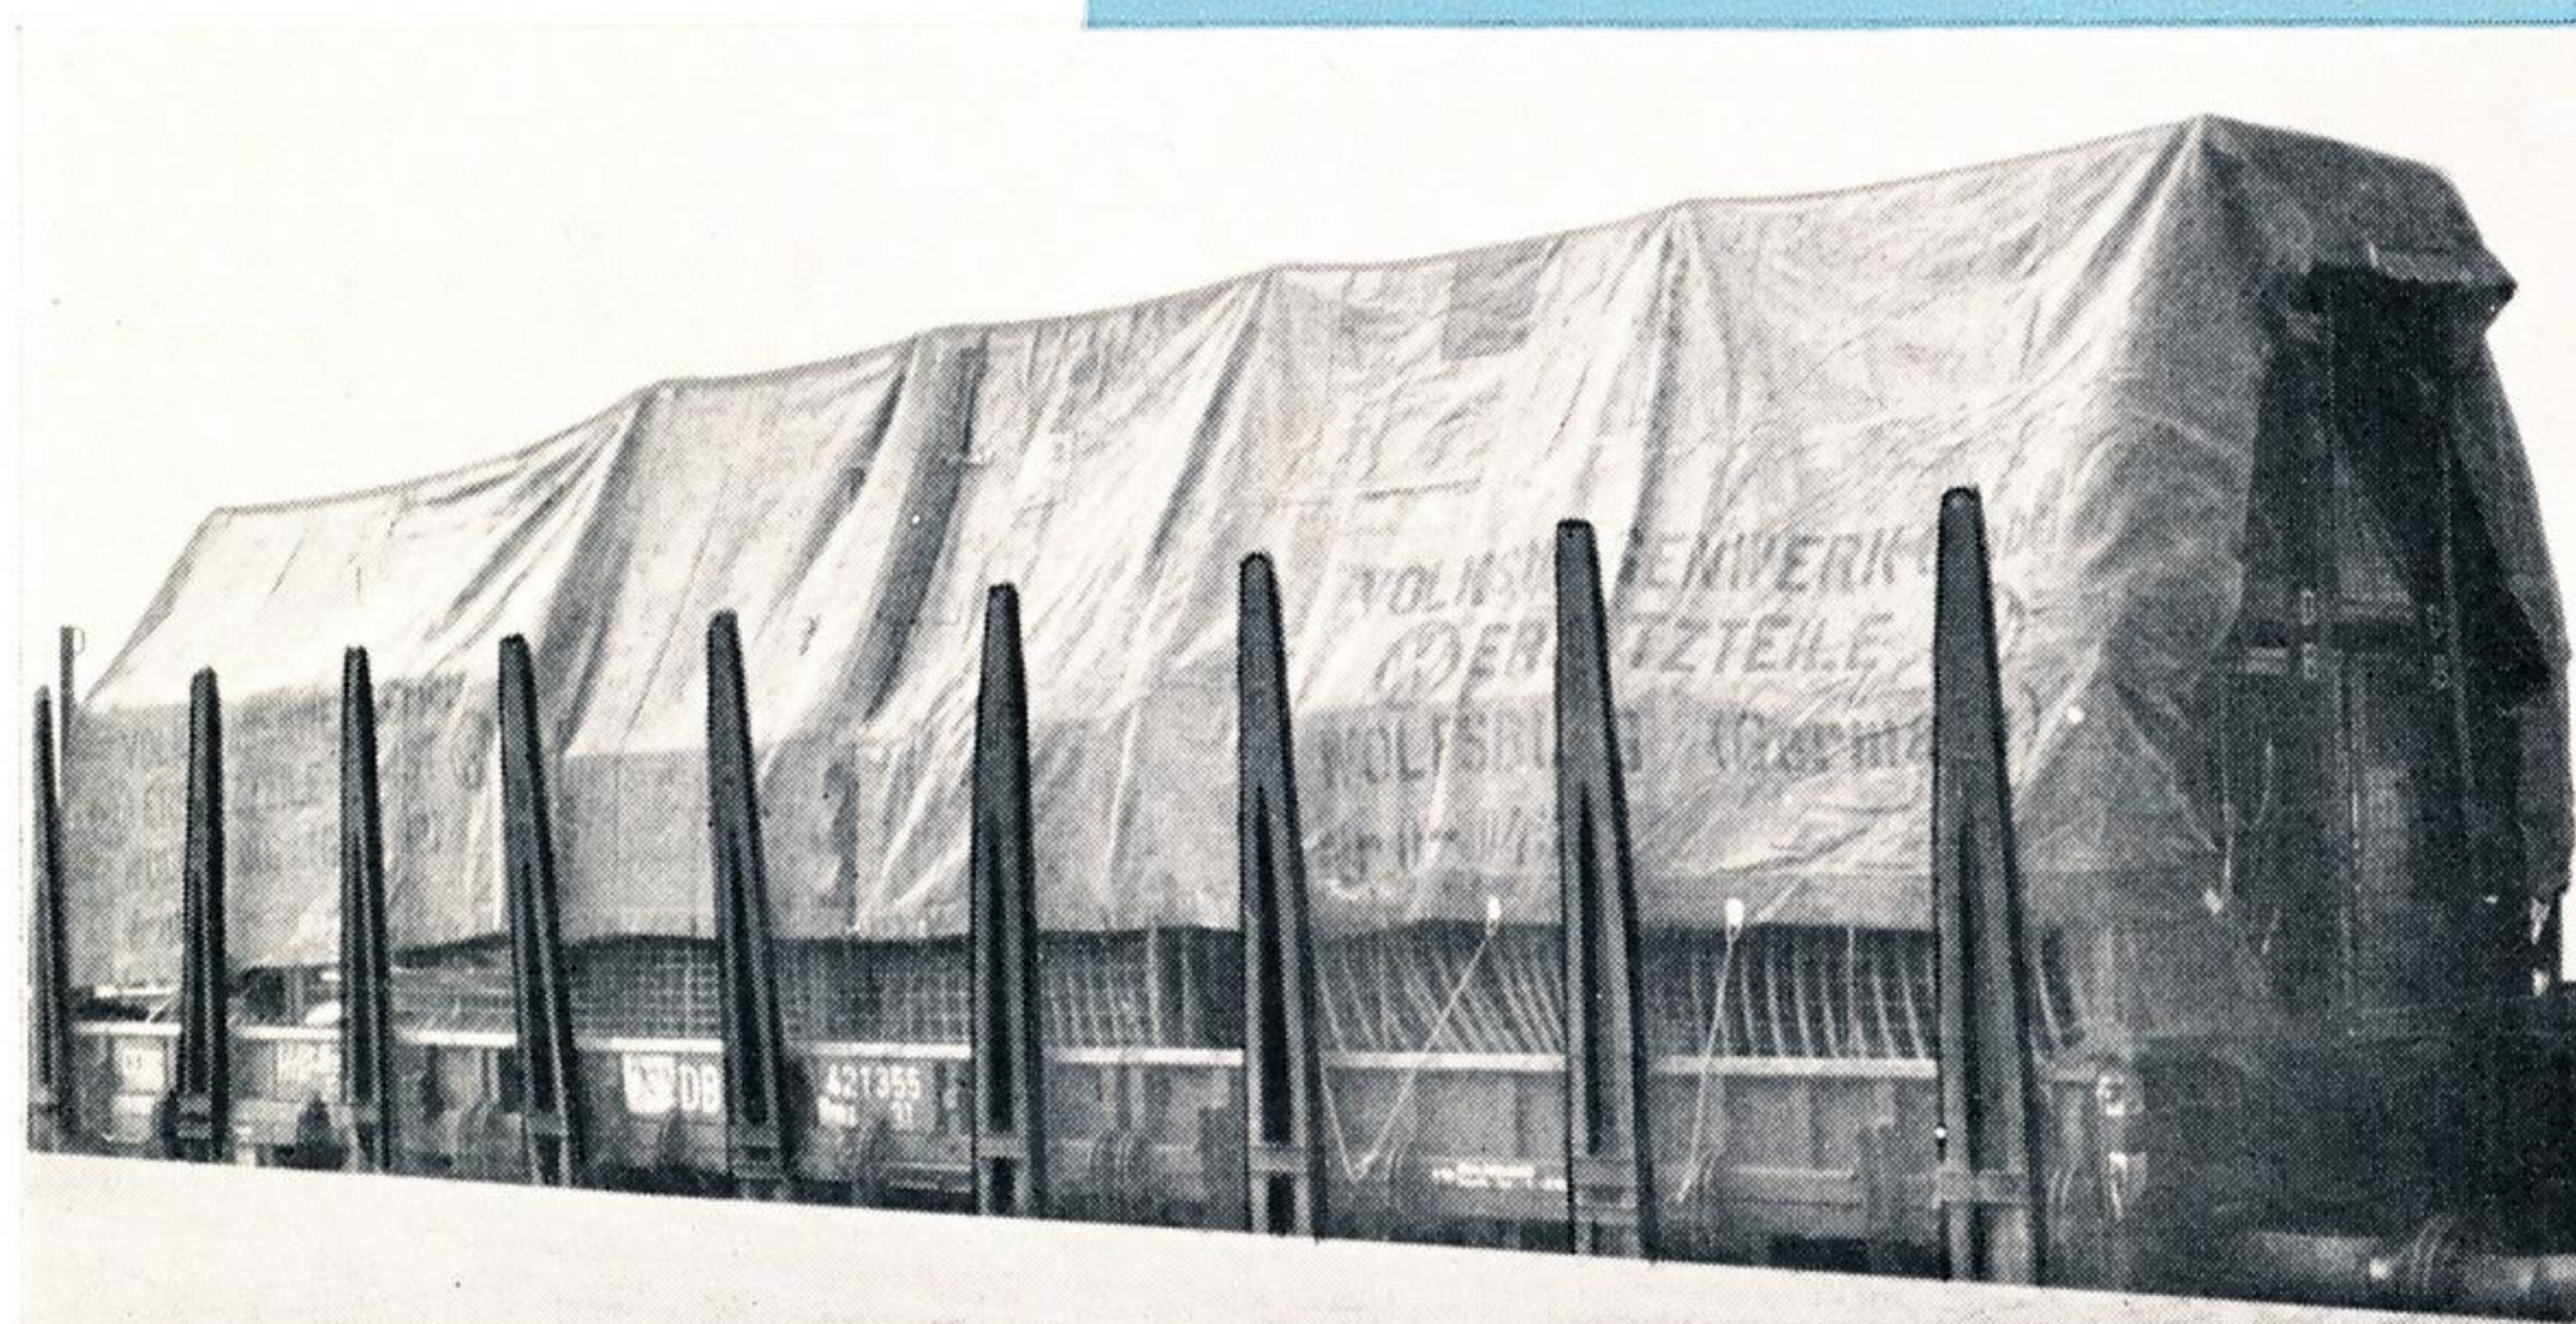

8

- 4 With the aid of the crane loading is carried out quickly, easily and safely.
- 5 Previously much manpower and plenty of time were required to load a waggon, today 3 men carry out the task in 17 minutes.
- 6 3 Blocks each of six G 808 containers (or ten G 809 containers) fill one waggon. It is only necessary to secure the front end of the load with wooden wedges thus avoiding shifting of load when shunting.
- 7 The covering over of the loaded waggon is carried out with the use of a crane for which a special tackle has been designed.
- 8 Two tarpaulins large enough to overlap in the middle are required to cover a loaded waggon. The tarpaulins are equipped with snap hooks and chains and can be quickly and securely fastened.

VOLKSWAGENWERK AG · WOLFSBURG