


# Volkswagen Campmobile

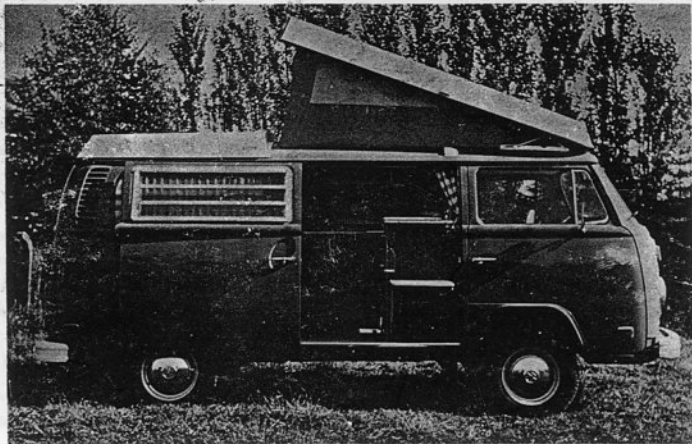

It goes on vacation with you

# CONTENTS

Bed, double	8	— Camping Equipment		Pop-up roof	18
Bench — front	15	with Pop-up Roof and Tent	6, 19–22		
— rear	8			Removal instructions	24–28
Bottle storage	14	Floor plan — inside back cover		— Ceiling cabinet or shelf	26
Ceiling — cabinet/shelf	10	Folding counter	15	— Clothes/linen closet	28
— lamp	10	Grocery shelf	15	— Dinette table	24
Cleaning	23	Hammock, child's	17	— Front bench seat	24
Clothes closet	16	Hints (what to take along)	23	— Icebox cabinet	25
Cot, canvas	18			— Rear bench seat	27
Curtains	11			— Water pump	25
Dimensions diagrams	30	Icebox cabinet	13	Screen, rear lid	17
Dinette table	7	Identification plate	9	Sink and cover	13, 14
Do-it-yourself hints	24–28	Introduction	4	Stool (jump seat)	9
Double bed	8				
		Jump seat (stool)	9	Table, dinette	7
Electrical receptacle	11			Tent	19–21
Equipment		Linen closet	16		
— Basic Equipment	5, 9–12	Louvered windows	12	Utensil compartment	14
— Camping Equipment	5, 13–17	Luggage rack	19		
— Camping Equipment				Water — pump	13
with Pop-up Roof	6, 18–19	Mattress	8	— tank	14
				Windows, louvered	12

WELCOME to the growing family of VW Campmobile owners!

You now own a Volkswagen for day-to-day driving and a comfortable home away from home for camping outdoors. Safe dependable transportation, custom equipped for recreation and fun

The VW Campmobile looks like a VW Station Wagon. And it IS a VW Station Wagon at heart. Your Type 2 Owner's Manual explains everything you should know about the Volkswagen Station Wagon. Be sure to read the Owner's Manual to learn how to operate your Volkswagen safely.

In the following pages, you'll see what makes your VW Station Wagon a Campmobile. We'll tell you all about the equipment in your Campmobile and how to use it.

Take a few minutes to read this manual and make yourself at home — — literally.

## CAMPMOBILE EQUIPMENT

You had many options to choose from. Whatever you decided on, you have the basic Campmobile equipment and possibility one or more add-on packages.

Following is a list of all available Campmobile equipment. Later, we'll explain how to use each item.

Many of the special-purpose items in your Campmobile are designed for use at the campsite and should not be used while the vehicle is in motion.

### Basic Equipment

- Full-width rear bench seat converting to double bed, with armrest and storage locker below.
- Rear deck mattress to complete the bed make-up.
- Vinyl-leatherette-covered seat upholstery and mattress with snap-on panels.
- Safety belts for four seating positions (2 combination lap/shoulder belts for the front seats and 2 lap-type belts for the rear bench seat.)
- Jump seat (stool).
- Fold-down dinette table with marproof and heat-resistant table top.
- Rear ceiling cabinet surfaced with wood-grained marresistant materials.

- Birch plywood wall and ceiling panels.
- Three-way ceiling lamp.
- 110—125 Volt electrical receptacle with double service receptacle on outside of vehicle, double electrical outlet on inside wall, and master switch and circuit breaker.
- Wear-resistant floor covering.
- Curtains for all windows, including windshield.
- Louvered (jalousie-type) side windows.
- Mounting hooks for optional child's hammock.
- Vinyl cover for spare wheel.

### Optional Equipment

In addition to the Basic Campmobile equipment, the following are the three optional equipment combinations:

#### 1. Camping Equipment

- Icebox cabinet, which includes a 1.9 cu. ft. capacity icebox with polyester insulation, ice rack and separate drain, hand-operated water pump, 7<sup>1</sup>/<sub>2</sub> gallon water tank with filler cap and drain, and utensil compartment.

- Stainless steel sink with cover, drain and stopper. The sink cover can be folded out to serve as a utility shelf and work surface.
- Grocery shelf with folding, campstove-size counter on outboard side if icebox cabinet.
- Front bench seat with storage area below the seat and behind the seat back; includes a lap-type safety belt.
- Clothes closet, complete with hanging rod, hooks, and mirror on back of closet door.
- Linen closet with shelves and door.
- Child's hammock.
- Rear luggage compartment lid screen, with snap fasteners for easy installation and removal.

## 2. Camping Equipment with Pop-up Roof

Includes the above equipment, plus the following:


- Pop-up Roof made of weather-resistant canvas with fiber-glass-reinforced polyester top. Sides and rear wall have screened openings with zippered flaps.
- 5' canvas cot for another child.
- Luggage rack, including buffer rods and tie-down hooks; can be easily reached from within the Pop-up Roof.

## 3. Camping Equipment with Pop-up Roof and Tent

This is the most comprehensive equipment option and includes all the above items, plus the following:

- 6' 6" x 9' 8" free-standing side-mounted tent with vinyl floor, external frame for easy set-up, all guy lines and stakes, storage bag, zipper-operated doors and side ventilation flaps, and Campmobile connecting boot.

Text and illustrations in this manual are based on latest product information available at the time of publication. It has always been the manufacturer's policy to continuously make improvements; therefore, the right is reserved to make changes at any time during the model year without notice.

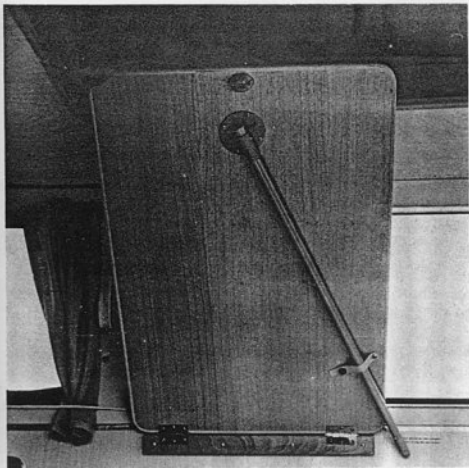


### Dinette Table

The folding table is attached to the wall panel directly in front of the rear bench seat, as you look in from the sliding door.

**The table should be flush against the wall and held securely in place by its spring catch when you are driving.**


**To set the table up,** detach the table top from its catch (H) on the wall. Fold the top up. Unsnap the plastic strap (G) that holds the table leg in place. Slide the table leg down to fit the upper end into the support (F) beneath the table top, while swinging the leg to a vertical position (C). Screw the leg into the threaded plate on the floor (D). The

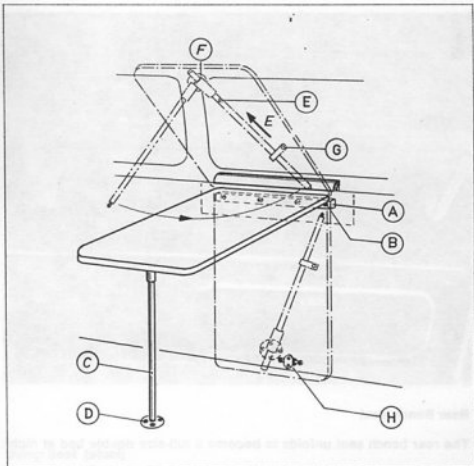

leg should be fully screwed in to assure secure mounting of the table.

**To fold the table away,** unscrew the leg and bring it flush with the bottom of the table top. Slide the leg up to the stop (E) to fit it under the table top. Fasten the leg with the plastic strap to hold it in its stowed position, as shown in the illustration. Lower the table top and press it firmly against the wall to make sure it engages the spring catch.

**Remove all carpeting, toys or other objects that might be caught between the table top and wall and thus prevent the table from folding flush.**

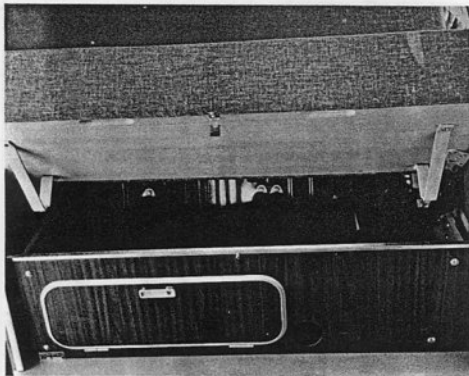


### Rear Bench Seat

The rear bench seat unfolds to become a full-size double bed at night.

**To put up the bed,** fold down the dinette table first. Push the seat belts between the seat bench and backrest. Release the fastener in the center beneath the seat. Lift the seat cushion at the front until it touches a stop. This will disengage the backrest. Now pull the seat cushion forward while pushing the backrest down onto the support between the seat and rear mattress.

**To set up the bench seat again,** stand in front of the bench. Slightly lift both seat cushion and backrest, and push them toward the rear. Relocate the seat belts by pulling them between the seat bench and backrest. Press down on the seat. Secure it in place by closing the fastener in the center beneath the seat cushion.

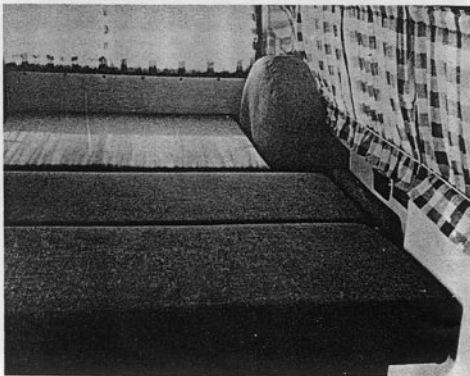

**Do not use the double bed to transport passengers. Do not allow children to kneel or sit on the rear deck while you are driving. Be sure the backrest is locked in the upright position and all passengers use the safety belts.**


Both the bench cushion and rear mattress are foam rubber, covered with soft vinyl leatherette. If necessary, the covers can be removed by unsnapping the fasteners beneath the cushions.

**The large storage compartment under the bench** is accessible from the front through a door on the lower seat panel. Depress the push button release in the door handle to open the door. The storage compartment can also be reached from the top by lifting the seat



cushion. To raise the seat cushion, first release the fastener in the center beneath the seat. When you lower the seat cushion, be sure to engage the fastener to lock the cushion in place.

The **identification plate** in the lower corner of the front panel contains the vehicle type and Campmobile equipment serial number. Please give this number when ordering spare parts for the **Campmobile equipment**.

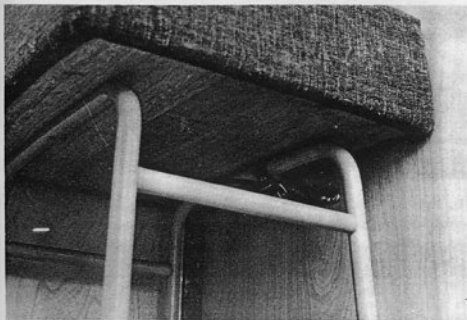


#### **Jump Seat (stool)**

The jump seat or stool behind the driver's seat provides a convenient movable seat inside the Campmobile. It can also be used outside at the campsite.

**Do not use the jump seat when the car is in motion. The seat is not equipped with a safety belt or backrest.**

**Before you drive off, secure the jump seat in place with the retaining strap.** Pull the plastic retaining strap through the bracket on the back of the driver's seat and secure it snugly. (If you have the optional Camping Equipment package, the retaining bracket is located on the aisle side of the icebox cabinet.)



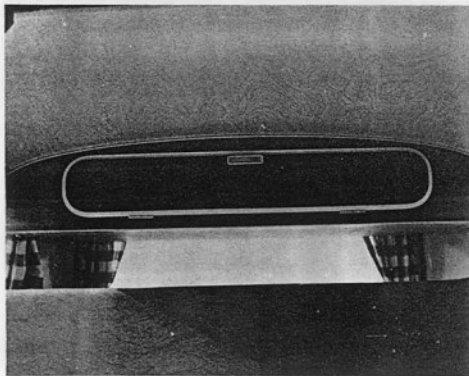


### Ceiling Cabinet

Your VW Campmobile has many convenient storage areas. One of the largest storage area is in the Ceiling Cabinet.

The Ceiling Cabinet is located in the rear of the vehicle above the rear mattress. It is accessible through the hinged door in the cabinet face. (If you have the optional Camping Equipment, you have a Ceiling Shelf without a door.) Only light items, such as clothers or linens, should be stored in the ceiling area. **Maximum load should be no more than 20 lbs.**



**Do not store heavy objects in the Cabinet or on the Shelf which may dislodge and thus become dangerous projectiles during a sudden stop.**

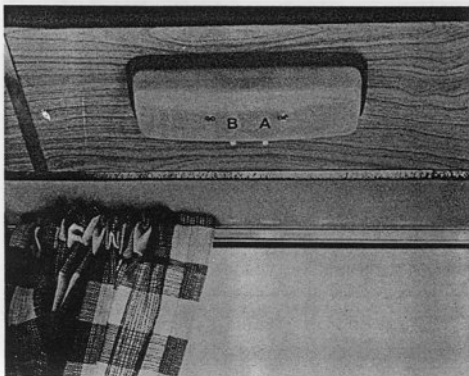

### Ceiling Lamp

To light up your nights for cooking and reading, your Campmobile comes equipped with an overhead lamp.

The ceiling lamp has three 10-Watt bulbs and is actuated by two push buttons. To use the ceiling lamp, first pull out the interior light knob on the dashboard, to the right of the steering wheel. When button (A) is pushed, one bulb is switched on. When button (B) is pushed, the other bulbs are switched on.

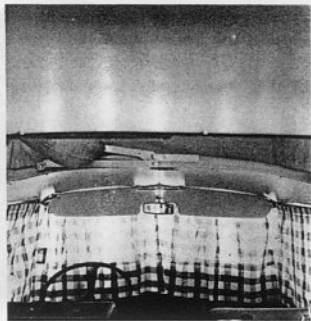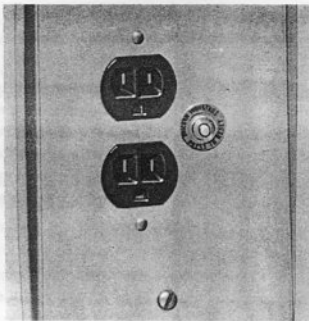

### Electrical Receptacle (110—125 Volts A.C.)

To make use of the regular house current available at many campsites, your Campmobile is equipped with an electrical receptacle which has a built-in circuit breaker.

On the outside of the vehicle, below the louvered window, there is a three-prong connector. On the inside of the vehicle, next to the dinette table, you will find two three-prong outlets.



A 15-Ampere A.C. cord is standard equipment with your Campmobile. It enables you to plug into campsite electrical outlets through the electrical receptacle.

### Interior Curtains

The all-around curtains cover all the windows in the Campmobile, even the windshield. With them, you can have as much privacy as you want! They can be snapped in place by the use of the snap fasteners provided on the window sills and wall panels.

**Safe driving requires that you have an unobstructed view of the road at times while driving. Remember to reposition the curtains so that you have adequate vision all around.**

Dry cleaning is the best method for cleaning the interior curtains. They can also be hand-washed with mild soap in lukewarm water.

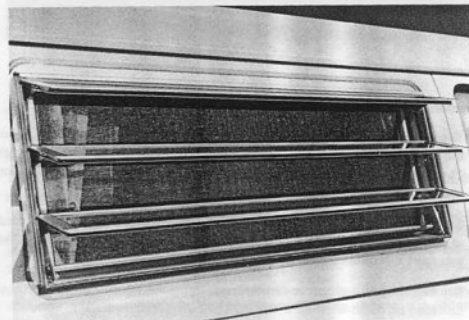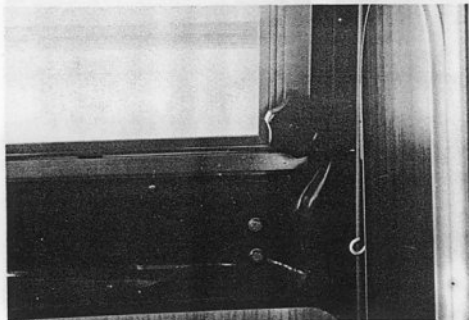

### Louvered Windows

For added ventilation, just open the side louvered windows and enjoy fresh air!

The Campmobile is equipped with two louvered (jalousietype) windows, one on the sliding door, the other on the opposite side of the vehicle, above the dinette table. Each louvered window has a removable screen. To remove the screen, slightly raise the screen and pull the bottom of the screen out of the window frame. To install the screen, reverse this procedure.

We recommend that you keep the louvered windows closed when the vehicle is in motion. These windows were designed to be used at the campsite only. Prolonged driving with the louvers open could weaken the pane hinges.

## OPTIONAL EQUIPMENT


### 1. Camping Equipment

The "Camping Equipment" option includes an icebox cabinet, more storage area, increased seating, a child's hammock and a rear lid screen.

#### Icebox Cabinet

The icebox cabinet is almost a complete kitchen. It combines sink, utensil compartment, icebox, water tank and pump, grocery shelf and plenty of counter space in one compact unit behind the front passenger seat.

The **sink** is made of stainless steel. It comes complete with a drainage and vent system. The upper part of the vent pipe extends through the top of the vehicle. A raised plastic cap on the roof provides weather protection for the vent opening while allowing the sink drain to be ventilated. The drain pipe from the sink extends to the bottom of the vehicle. Water from the sink drains onto the ground, so be mindful of where you drain your sink water.

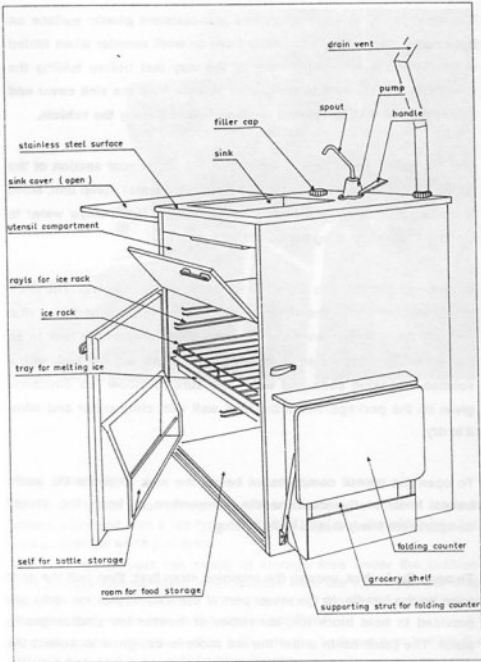

The **sink cover**, with a scratch and mar-resistant plastic surface on both sides, also serves as a **utility table** or **work counter** when folded down. Turn the water spout out of the way first before folding the cover inboard. **Be sure to remove all objects from the sink cover and return the cover to the closed position before driving the vehicle.**

The 7½ gallon **water tank** is located in the upper rear section of the icebox unit. The filler cap is located next to the water pump unit. Move the pump handle up and down to pump water. Don't allow water to stand in the tank for long periods of time.

We recommend that you drain the tank after every after trip. The drain tap is located under the vehicle body. Screw the tap back on after draining the tank, but leave the filler cap open to allow the tank to air out. Should standig water develop an odor, flush out the tank with a solution of baking soda and water. Be sure to follow the directions given on the package. Rinse the tank well with clear water and allow it to dry.

To open the **utensil compartment** below the sink, depress the push-botton knob in the door handle. **Remember to keep the utensil compartment firmly closed while driving.**


To open the **icebox**, unsnap the retaining strap first; then pull the door open by the handle. In the upper part of the icebox, two ice racks are provided to hold block ice, ice cubes or freezer ice packckages in place. The catch basin under the ice racks is designed to collect the melted water and to drain it to the outside through a separate tube.

Inside the door is a **shelf for bottle storage**. The **food storage compartment** is spacious enough to hold your perishable items and anything else you wish to keep cold.

When filling the icebox, be sure not to overfill the food storage area. Remember to leave enough room so that the icebox door can be shut securely without compressing any of the contents.

We recommend you use unbreakable plastic bottles and food containers. Avoid glass containers on camping trips. Any items placed in the icebox should be tightly sealed to prevent spills.

**Remember to keep the retaining strap on the icebox door festened when the vehicle is in motion. This will prevent the door from accidentally opening and letting the contents spill out.**

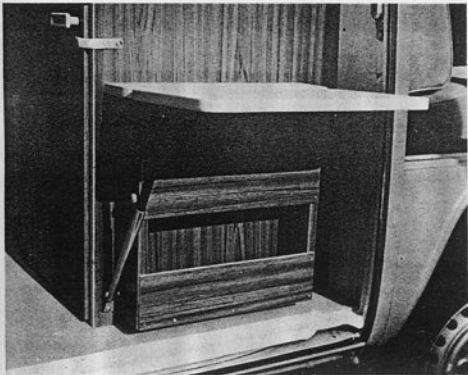

#### Grocery shelf and folding counter

The **grocery shelf** and **folding counter** are located on the right side of the icebox cabinet. The grocery shelf is suitable for storing dry goods, such as canned soups and spices, and other items which do not have to be kept cold. The folding counter folds out, providing an ideal location for a camp stove. **Remember to lower the folding counter before closing the sliding door.** Push in the button lock in the table support to lower the folding counter.



#### Front Bench Seat

The front bench seat provides another seat at the dinette table. It comes equipped with a lap-type safety belt, and can therefore be used by a passenger while you drive.


The front bench seat has plenty of storage area under the cushion. This storage compartment is accessible from the top. Open the snap fastener to lift the cushion. When replacing the seat cushion, close the snap fastener to secure the seat in position.

A quick-access storage well is built into the backrest just behind the driver's seat and is accessible from the top.



### Clothes Closet

The closet comes complete with clothes hanging rod, hooks, and a full-length mirror on the back of the door. Depress the push-button release in the door handle to open the clothes closet.

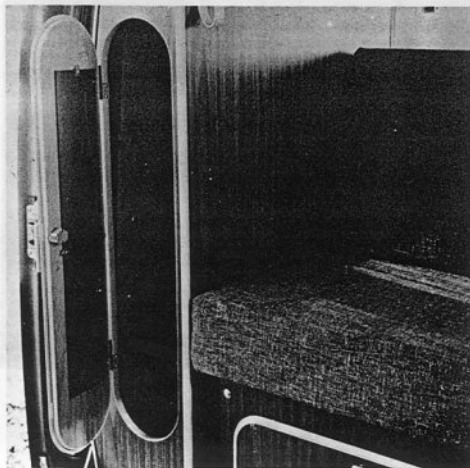


### Linen Closet



A roomy linen closet is in the rear wall next to the clothes closet. It comes complete with door and dividing shelf and is best accessible through the rear lid of the vehicle. To open the linen closet, first depress the push-button release in the door handle.

### Child's Hammock

The hammock provides comfortable sleeping for a small child. It is rolled up and stored over the clothes closet, held in place by a plastic retaining strap.

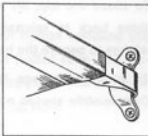

The child using the hammock should weigh no more than 90 pounds. To use the child's hammock, unsnap the retaining strap and remove the hammock. Unroll the hammock and attach it to the four mounting attachments over the driver's seat and front passenger seat (two on the front side pillars and two on the door posts).

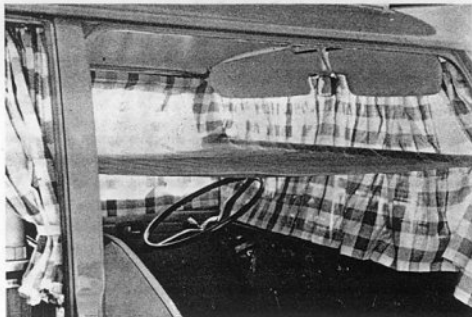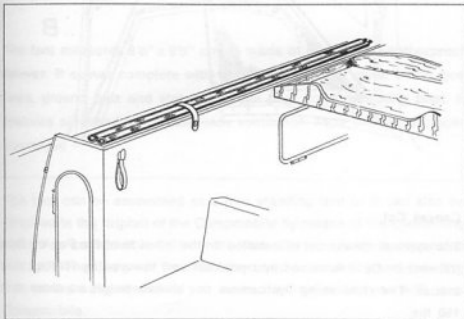

To take down the child's hammock, just unhook it, roll it up and stow it away over the clothes closet. Resnap the retaining strap to keep the hammock securely in place.

### Rear Lid Screen

The rear lid screen and the louvered windows form an excellent flow-through ventilation system for comfortable sleeping at night. It allows you to keep the rear lid open, while keeping annoying insects out of the Campmobile.

The rear lid screen can best be installed with the rear lid open. To install the net, simply press the snap fasteners in the proper locations. The lid can be closed with the screen installed.

Do not drive with the rear lid open to preclude the possibility of exhaust fumes entering the vehicle.




## 2. Camping Equipment with Pop-up Roof

This equipment option includes everything we have described so far plus the Pop-up Roof, an additional cot for a child, and a luggage rack.


### Pop-up Roof

The entire roof of Campmobiles equipped with this option is covered by a fiberglass-reinforced polyester top. The larger forward section of the roof (illustration A) is the actual elevating Pop-up Roof. To raise this section, release the three rubber latches (arrows in illustration B). As soon as the latches have been disengaged, simply push the top until the strut supports at the rear of the top be locked into position.

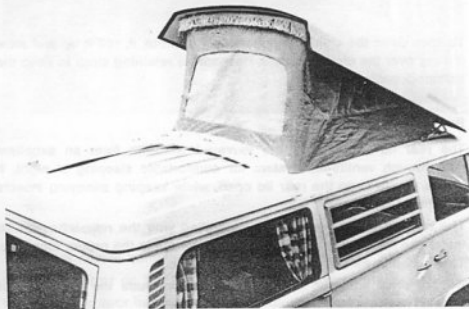

To close the top, lift the top slightly, pull the locking struts on both sides back to release them and lower the top. Attach the rubber latches to secure the top.

To prevent damage to the top and sides of the Pop-up Roof, the Campmobile should not be driven with the top in the elevated position.

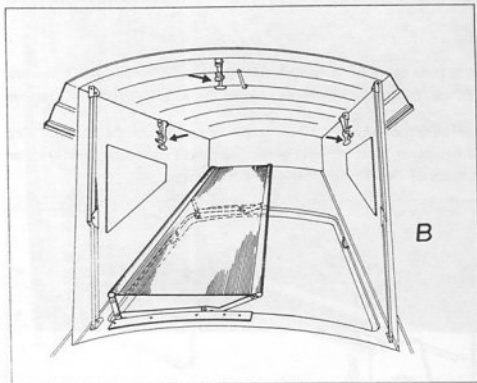

### Canvas Cot

The optional canvas cot is installed on the left side of the Pop-up Roof (illustration B). It is raised into position and lowered by folding steel braces. The child using the canvas cot should weigh no more than 150 lbs.

## **Luggage Rack**

The rear section of the roof with the Pop-up Roof option contains the luggage rack (illustration A). It is equipped with buffer rods and tie-down hooks to facilitate loading and securing baggage. The luggage rack is accessible through the rear flap of the Pop-up Roof.

Any baggage carried on the roof luggage rack should be securely tied down. Commercially available spider straps will keep cargo from moving around.

## **3. Camping equipment with Pop-up Roof and Tent**

This is the most comprehensive equipment option and includes all the the above items, plus the free-standing, sidemounted tent.

### **Campmobile Tent**

The tent measures 6'6" x 9'8" and is made of heavyduty weatherproof canvas. It comes complete with vinyl floor, external metal frame, guy lines, ground pins and stakes, storage bag, and connecting boot. It features screened doors and side ventilation flaps with easy zipper operation.

The tent can be assembled as a free standing tent or it can also be attached to the driprail of the Campmobile by means of the connecting boot. You can drive away from the tent after you have disconnected the boot. The design of the tent allows you to leave the tent standing free at the campsite while you make daytime excursions with your Campmobile.

### **Before you assemble the tent:**

Find a level spot, preferably on high ground, which allows for natural drainage of rainwater.

If campsite rules permit, dig a trench approximately 6" wide and 6" deep around the tent to channel rain water away from your campsite.

It would be a good idea to practice assembling and disassembling the tent at home before you attempt to use it on a camping trip.

**To assemble the tent:**

a) Assemble the front part of the frame which consists of telescopic tubular frames poles (8) and (9), connecting angle supports (marked green) (2) and (3), center piece (1) and two ridge tubes (4) (illustration A).

NOTE: Don't extend the telescopic poles (8) and (9) just yet. It is easier to join the front and rear sections of the frame and attach the tent with the frame at this height.

b) Assemble rear part of frame, which consists of telescopic tubular frame poles (8) and (9), angle supports (marked red) (6) and (7), center piece (5) and two ridge tubes (4).


c) Connect front and rear portion of frame with roof tubes (4).

d) Lay the tent canvas (10) below the framework, spread it out and attach the canvas loops to the frame (illustration B).

e) Extend corner poles (8) and (9) until tent bottom touches the ground evenly on all sides.



f) Then use ground pins (11) to fasten tent bottom to ground. Attach and tighten guy ropes (12) with stakes (13).

g) The front door (14) can be folded up and supported by rods (15), guy lines (12), and stakes (13) to form an awning. It can also be rolled up and tied above the door opening.

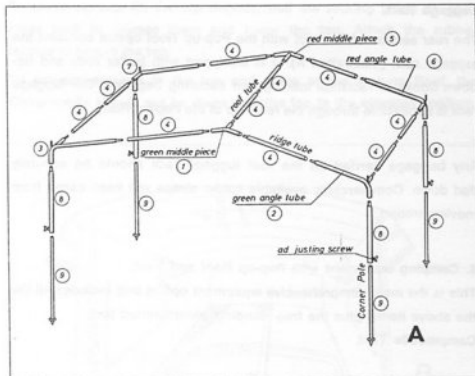


**To attach the tent to the Campmobile:**

- h) Unzip the rear door, roll up the flap, and tie it above the opening.
- i) Open the sliding door and drive the vehicle next to the rear of the tent, leaving about six inches between the tent wall and the side of the Campmobile.
- j) Align the rubber seal on the sliding door post with the front edge of the tent rear flap opening.

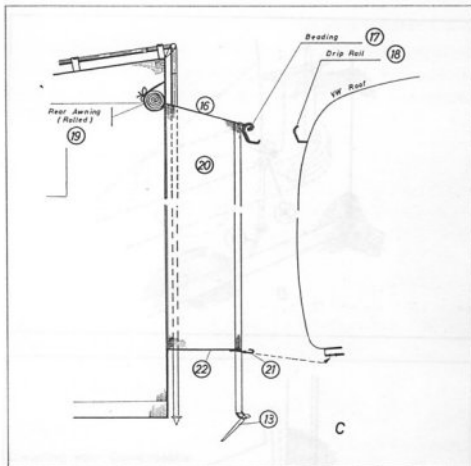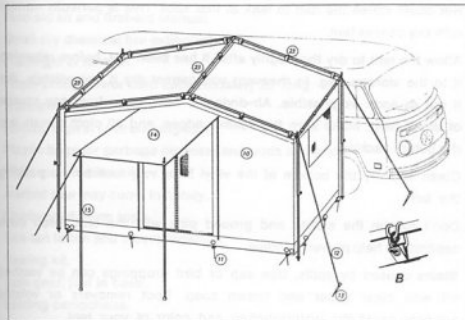

- k) To connect the boot (16), snap the seal (17) on to the diprail (18) of the vehicle (illustration C).

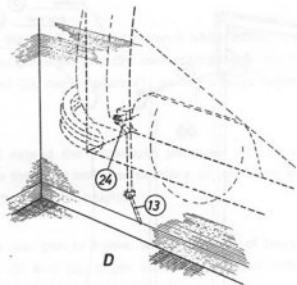

1. Fasten the sides of the connecting boot (20) to the ground with stakes (13). Fasten the bottom flap (22) to the vehicle with the center hook (21) (illustration C), the rear hook (24) (illustration D), and the front hook (25) (illustration E).

When you plan to drive away from the tent, remember to release the center, front and rear hooks (21, 24 and 25) and unfasten the bottom flap of the connecting boot (22) and the top seal (17) from the Campmobile.

To disassemble the tent, just reverse the assembly procedure.

In the event of heavy rain, untie one of the loops (23) attaching the tent to the frame on each side. This will prevent water from collecting on the roof of the tent.


Remember not to push up from the inside of the tent to dislodge water that has collected. Touching the inside of the tent while it is wet could cause the tent to leak at that spot. This is perfectly normal with any canvas tent.

Allow the tent to dry thoroughly after it has been wet, before returning it to the storage bag. In the event you cannot dry it immediately, dry it out as soon as possible. Air-drying is best, away from any source of direct heat. Make sure the seams, edges, and all cloth panels are dry before packing.

Clean and dry the bottom of the vinyl floor very well before packing the tent.

Don't roll up the stakes and ground pins with the tent, keep them separate to help prevent mildew.

Stains caused by spills, tree sap or bird droppings can be washed off with clear water and brown soap. Spot removers or volatile solvents could the waterproofing and color of your tent.

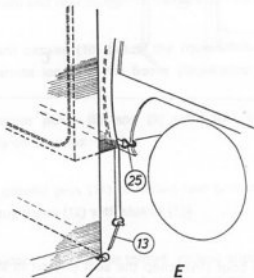

## HINTS

### What to take along

Camping out can be a lot of fun, and to make sure you have a lot of fun, here are a few suggestions for your next trip. This list is not complete and can be tailored to your individual needs.

First-aid kit and first-aid manual.

Small dry chemical fire extinguisher.

Flashlight or lantern.

Three-prong power cord approximately 25' long.

Waterproof matches.

Folding shovel (entrenching tool).

Plastic bags for garbage disposal and odds and ends.

Water-purification kit.

A small saw may come in handy.

Lightweight nylon rope.

Sun-tan lotion and insect repellent.

Sewing kit.

Rain gear, just in case.

Folding campchairs.

Games and puzzles for the children.

### Cleaning your Campmobile


The cabinets and upholstery in your Campmobile can be cleaned by wiping them with a damp cloth. For heavy dirt and stains, use VW A11-Purpose Cleaner (part number ZVW 243 101), available at your Authorized VW Dealer.

Follow the instructions on the container.

When cleaning cabinets, floors and upholstery, never use gasoline, kerosene, naphtha, nail polish remover or any other volatile solvents. They may be toxic or flammable and therefore hazardous. Keep all cleaning agents out of the reach of children.

## DO-IT-YOURSELF HINTS

Should you wish to remove a component, you can do so. Following are suggested procedures for removing and installing certain components of the Campmobile's equipment.

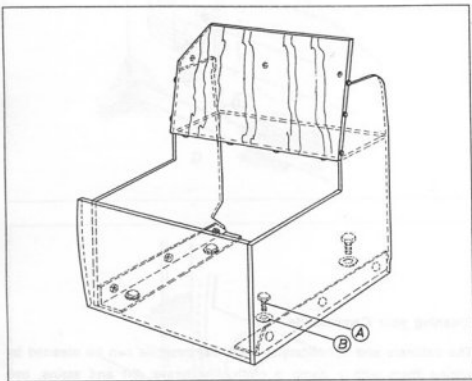


### Front Bench Seat

#### Removing

1. Lift seat cushion and remove.
2. Loosen and remove four bolts and washers (A & B).
3. Remove unit from vehicle.

To reinstall the front bench seat, reverse the procedure.

Exercise extreme caution when working on any part of the Campmobile to prevent accidental injury. If in doubt about any procedure, have it done by your authorized VW dealer or any other qualified mechanic.

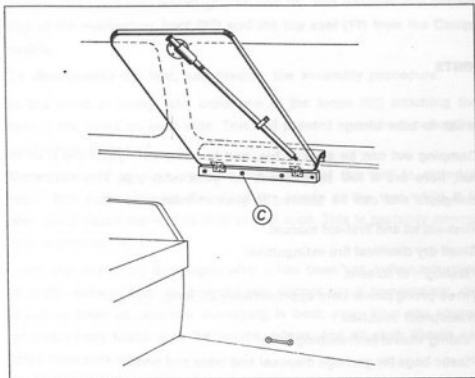

### Dinette Table

#### Removing

1. Loosen and remove four screws (C).
2. Remove unit from vehicle.

To reinstall the dinette table, reverse the procedure.



### Icebox Cabinet


#### Removing

1. Loosen joints (A & B) and remove upper section of vent (C) by pushing up, twisting it to the side, and pulling it out of the ceiling.
2. Loosen and remove screw which attaches unit to floor on inboard side of cabinet.
3. Loosen and remove nuts and washers which attach unit to passenger seat.

4. Remove unit from vehicle by lifting straight up and out.

5. Tie or attach lower vent section (D) to vehicle so that it does not drag on the ground.

**To install,** locate drain tubes and vent in holes in floor and reverse above procedure.

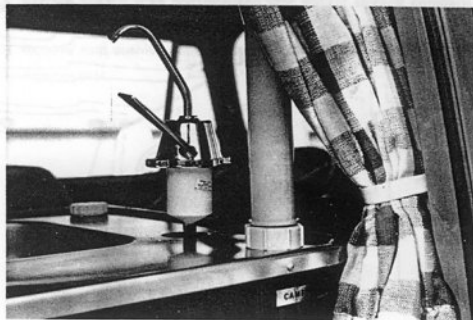

### Water pump


#### Removing

1. Remove two screws holding pump.
2. Lift pump and pull hose (E) off (secure hose so that it does not fall into icebox cabinet).

#### Installing

1. Attach hose (to make hose easier to push on, moisten the adaptor with water or glycerine).
2. Locate pump and install two screws.



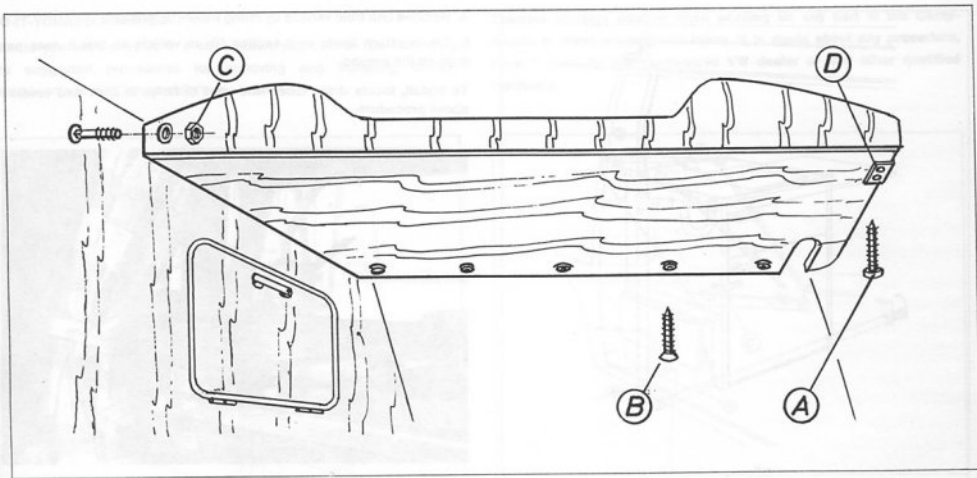


### Ceiling Cabinet or Ceiling Shelf

#### Removing

1. Take two screws (A) out of shelf bracket on right side.
2. Remove nut and washer (C) and push bolt gently back into area over linen closet and remove it.

3. Remove five screws (B) from roof frame.
4. Carefully pry shelf bracket (D) down with a screwdriver and take shelf out.

**To install,** reverse the above procedure.

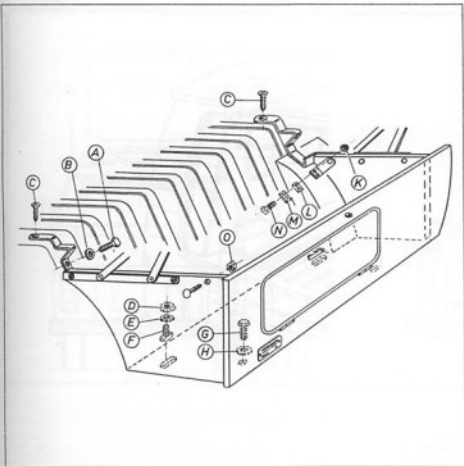

## Rear Bench Seat

### Removing


Before the rear bench seat can be removed, the icebox cabinet, the front bench seat, the dinette table and the rear mattress must be removed.

1. Release seat cushion retaining clamp, lift cushion and secure it with a support.

2. Remove two nuts (D) and washers (E) from bolts in floor plate; remove two bolts (G) and washers (H) from floor plate.
3. Remove nuts (K) from two bolts in bracket on wheel housing and press bolts and plate out.
4. Detach left and right brackets from engine cover panel by removing bolts and washers (A, B, C).
5. Remove nut (O) from bolt retaining side wall of storage compartment to clothes closet. Press bolt out.
6. Remove seat cushion support and fold cushion down.
7. Remove seat.

### Installing

To install reverse the above procedure, taking care to replace rubber seal on wheel housing bracket and check hinge mechanism of seat cushion for proper function. Re-fasten retaining clamp to hold cushion in place.

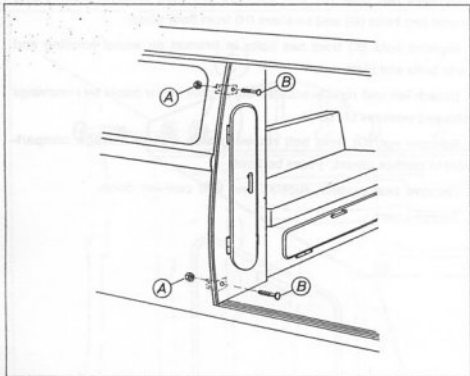


## Clothes / Linen Closet

### Removing

The clothes/linen closet cannot be removed until the icebox cabinet, front bench seat, dinette table, ceiling cabinet, rear bench seat and rear mattress have been removed.




1. Unscrew the two hexagonal nuts (A) and remove dome headed bolts (B) from the front closet wall next to the sliding door frame.
2. Remove metal screws (C) from rear upper part of cabinet.
3. Unscrew hexagonal (D) and remove spring washer. Remove dome headed bolts (F) from angle plate.
4. From rear door, swing cabinet with brackets sideways: from sliding door, pull it forward and lift out carefully.

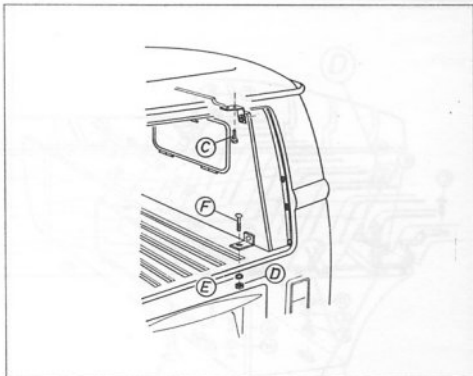


### Installing

1. Install cabinet against the side panel so that the two front brackets contact the sliding door frame.
2. Insert the two dome headed bolts (B), and tighten hexagonal nuts (A).
3. Insert metal screw (C).
4. Insert dome headed bolts (F), install spring washer and tighten hexagonal nut (D).

# Dimensions

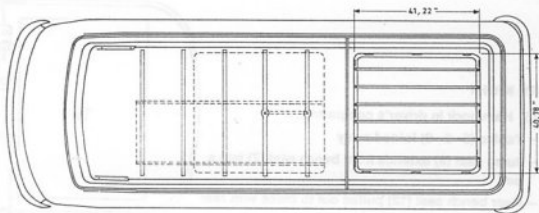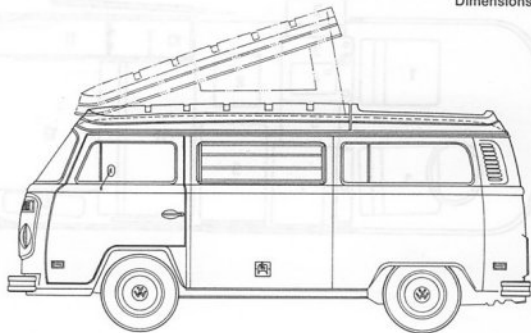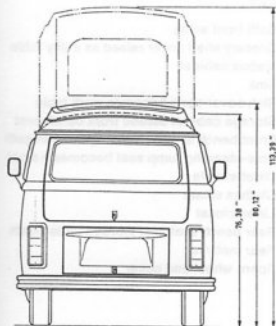

Floor Plan

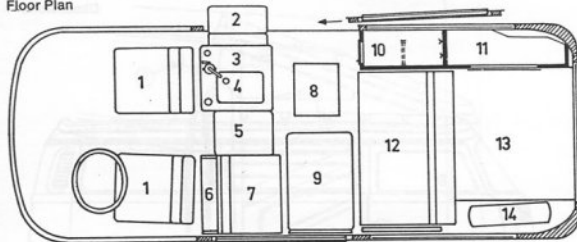


# BY DAY

1. Split front seats
2. Grocery shelf cover raised as utility table
3. Icebox cabinet
4. Sink
5. Sink cover open becomes work table
6. Storage cabinet behind front bench seat
7. Front bench seat with storage underneath
8. Free-standing jump seat becomes a stool
9. Dinette table
10. Clothes closet
11. Linen closet
12. Rear bench seat with storage underneath
13. Rear mattress
14. Spare wheel and cover

## BY NIGHT

15. Hammock in driver's compartment
- Tables (5—2—9) folded away
- Jump seat (8) extends front bench seat (7) into a bed
- Rear bench seat (12) pulled out to make with rear mattress (13) a large double bed

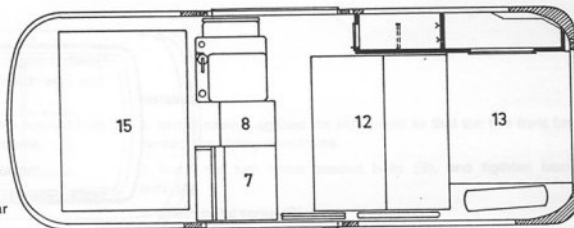

WESTFALIA-WERKE FRANZ KNOBEL & SÖHNE KG · 4832 WIEDENBRÜCK



May not be reproduced or translated in whole or in part without the written consent of Volkswagenwerk. Specifications subject to change without notice. All rights reserved.

42-00-2960-1

Printed in Germany 8. 72