

Volkswagenwerk AG



Troubleshooting Guide


for Engines with
Electronic Fuel Injection
MPC (manifold pressure controlled)

Type 3/all
Type 4/Manual Transmission
Type 4/Automatic Transmission
(up to Oct. 1973)

© 1974 Volkswagenwerk AG, Wolfsburg
All rights reserved, Printed in Germany
2. 74 42-00-4950-1 4. 48. 530. 406. 23

Contents

<p>Starting trouble</p> <ul style="list-style-type: none">● Engine does not start● Cold engine does not start● Hot engine does not start● Engine starts but stops again after a short time		<p>Starting trouble</p>
<p>Idling trouble</p> <ul style="list-style-type: none">● Rough idle during warm-up● Hunting (surging) at idle at all temperatures● Hot engine stalls at idle● Rough idle in driving range, (Automatic Transmission)● Idle irregular (like misfiring)● Idle too high		<p>Idling trouble</p>
<p>Hesitation trouble</p>		<p>Hesitation trouble</p>
<p>Poor output, top speed too low</p>		<p>Poor output/ top speed too low</p>
<p>Fuel consumption too high</p>		<p>Fuel consumption too high</p>
<p>Engine misfiring</p> <ul style="list-style-type: none">● Misfiring only when electrical components are switched on● Misfiring at all times		<p>Engine misfiring</p>
<p>CO value too high</p>		<p>CO value too high</p>
<p>Wiring diagrams</p>		<p>Wiring diagram</p>

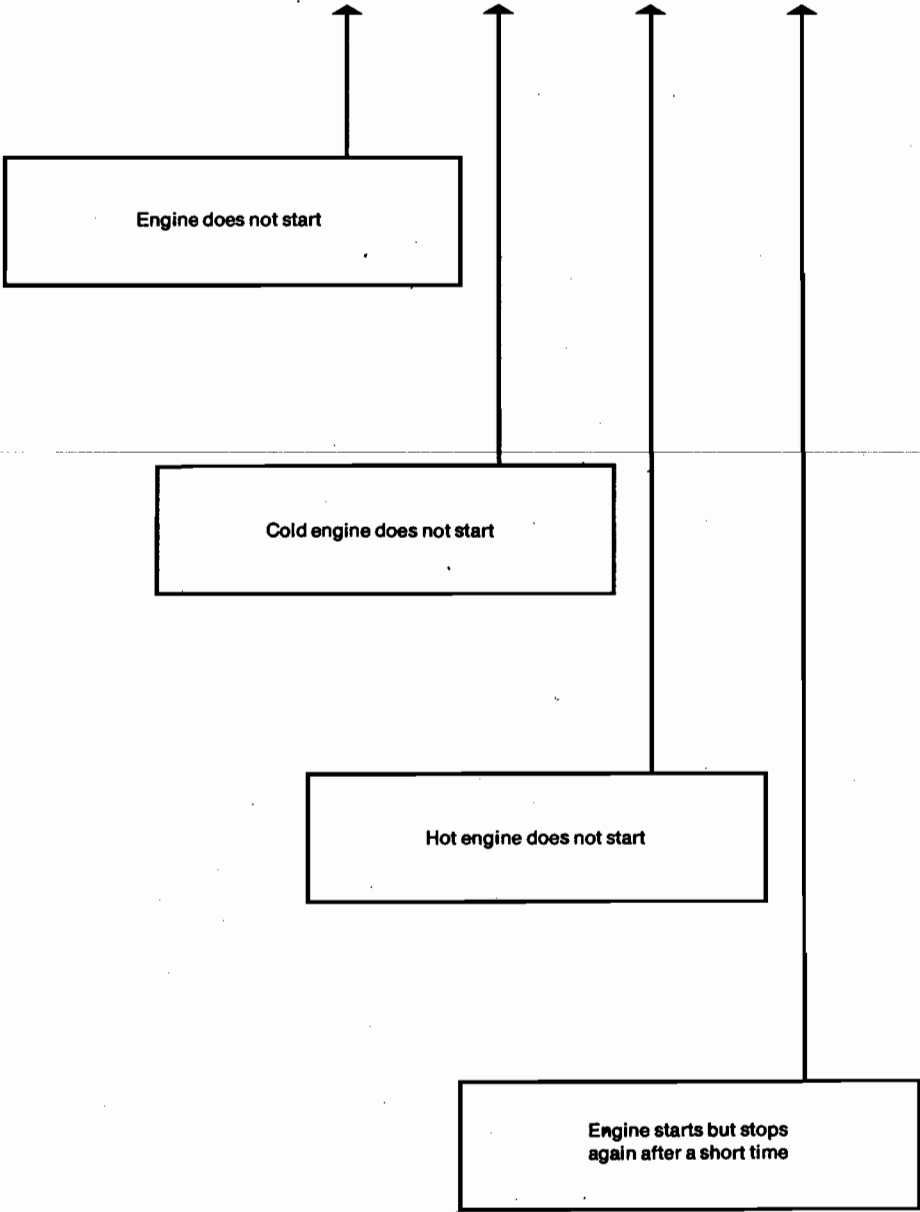


Starting trouble

Note

Following defects may be found despite visible sparking at spark plug connectors:


- Distributor cap (damp, cracked, burnt by tracking)
- Rotor defective
- Loose connections on coil
- Spark plugs or connectors defective
- Ignition timing incorrect (breaker points)
- Ignition cables poorly connected
- Arcing at ignition cables on distributor (through the rubber caps)
- Voltage at terminal 15 on coil too low (minimum = 9 volts)
- Condenser defective

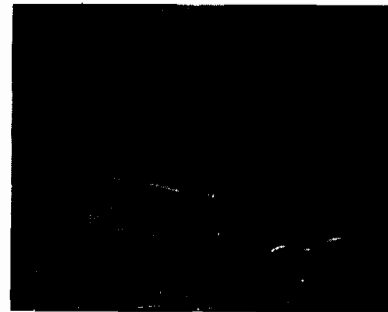

Check cold start valve for sealing

Note

- Detach cold start valve from intake air distributor but leave it connected to ring main.
- Switch ignition on and off several times and check if fuel is delivered.

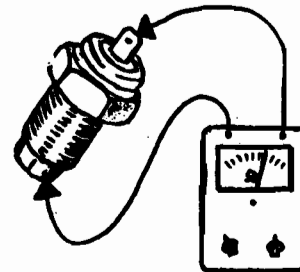

Note

Thermoswitch should not show any continuity above specified cut-in temperature.

Cut-in temperatures are:


- 311906 161 = -12 to -18°C (10 to 0°F) (Aug. 67 to July 69)
- 311906 161A = 0 to +10°C (32 to 14°F) (Aug. 69 to March 70)
- 311906 161C = -6 to -14°C (21 to 7°F) (from April 70)
- 311906 161B = -2 to -8°C (28 to 18°F) (Service use only up to March 70)


Engine does not start

Starti
troub

Test conditions:

- Correct starting procedure.
- Fuel in tank.
- Starter is turning fast enough (battery voltage).

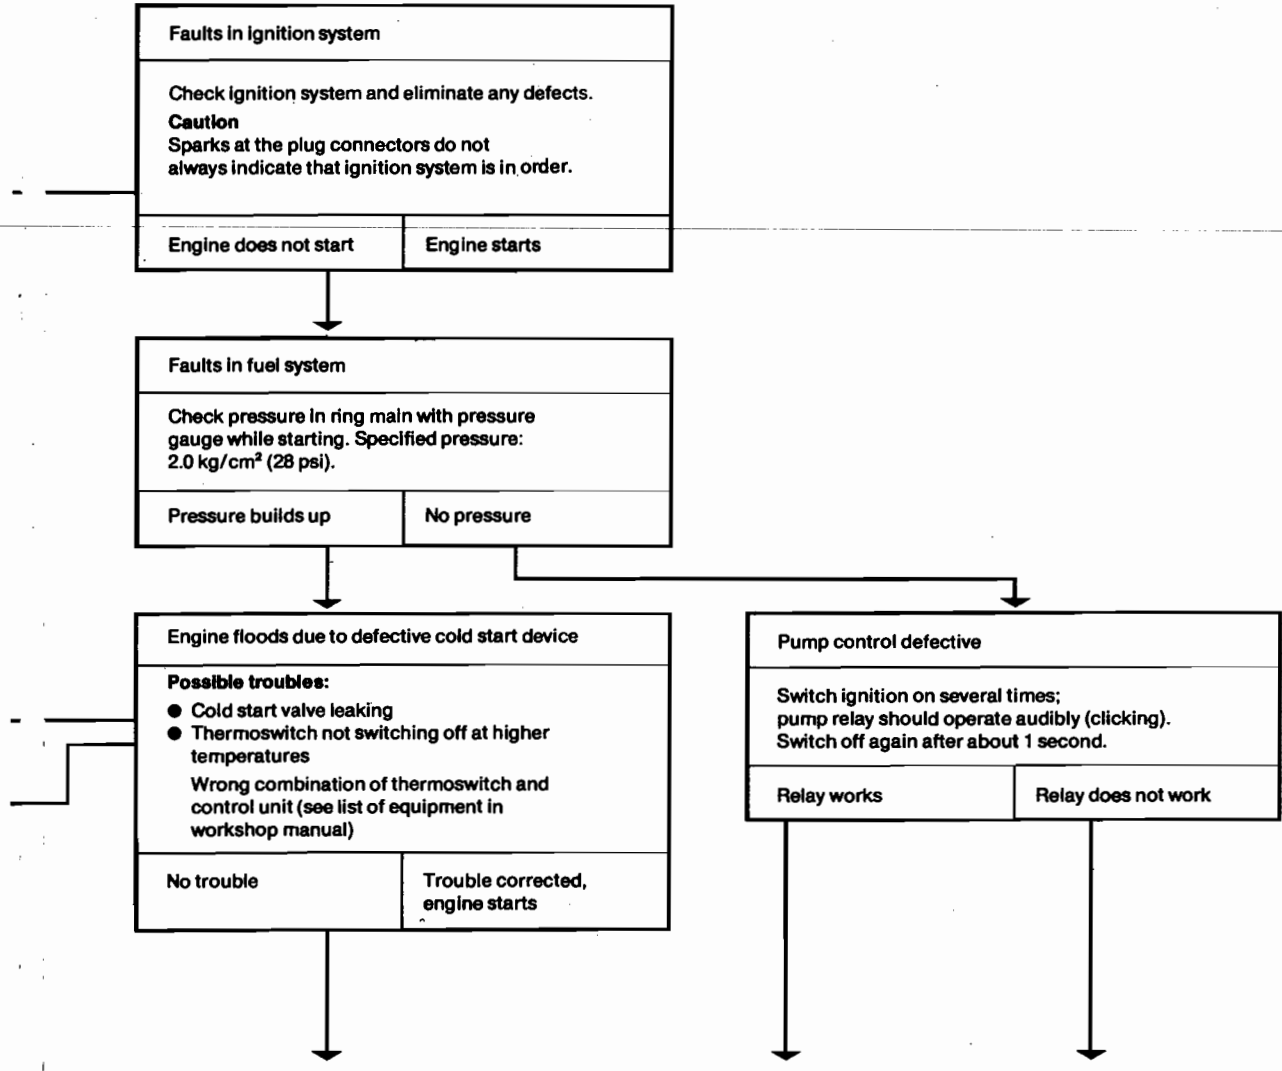

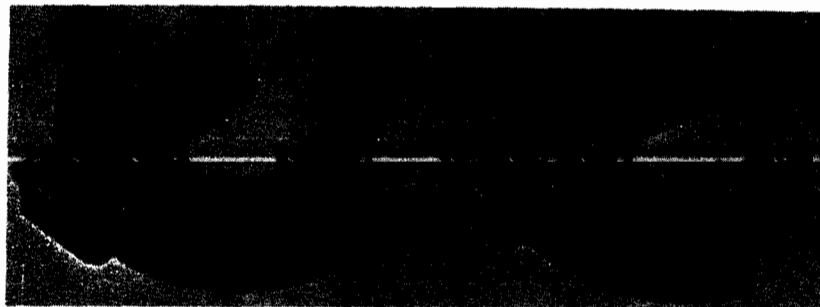

without deflector plate

with deflector plate



Note
On older vehicles the distributor trigger contacts
with oil deflector can be service installed:
Introduced in production: July 1971
● Type 3 from Chassis No. 3112252242
● Type 4 from Chassis No. 4112059500

Starti
troub

Trouble in electrical part of injection system	
Connect tester VW 1218 and run through test program.	
No trouble	Trouble located and corrected




Clean or replace trigger contacts in distributor.

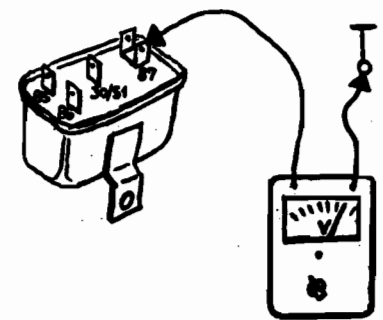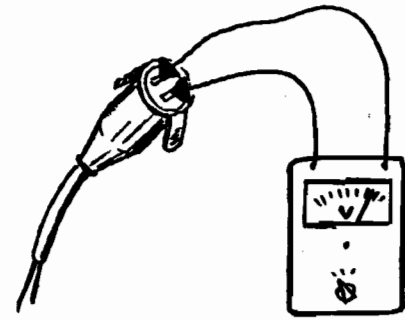

Engine does not start (cont'd from page 5)



Startin
troubl

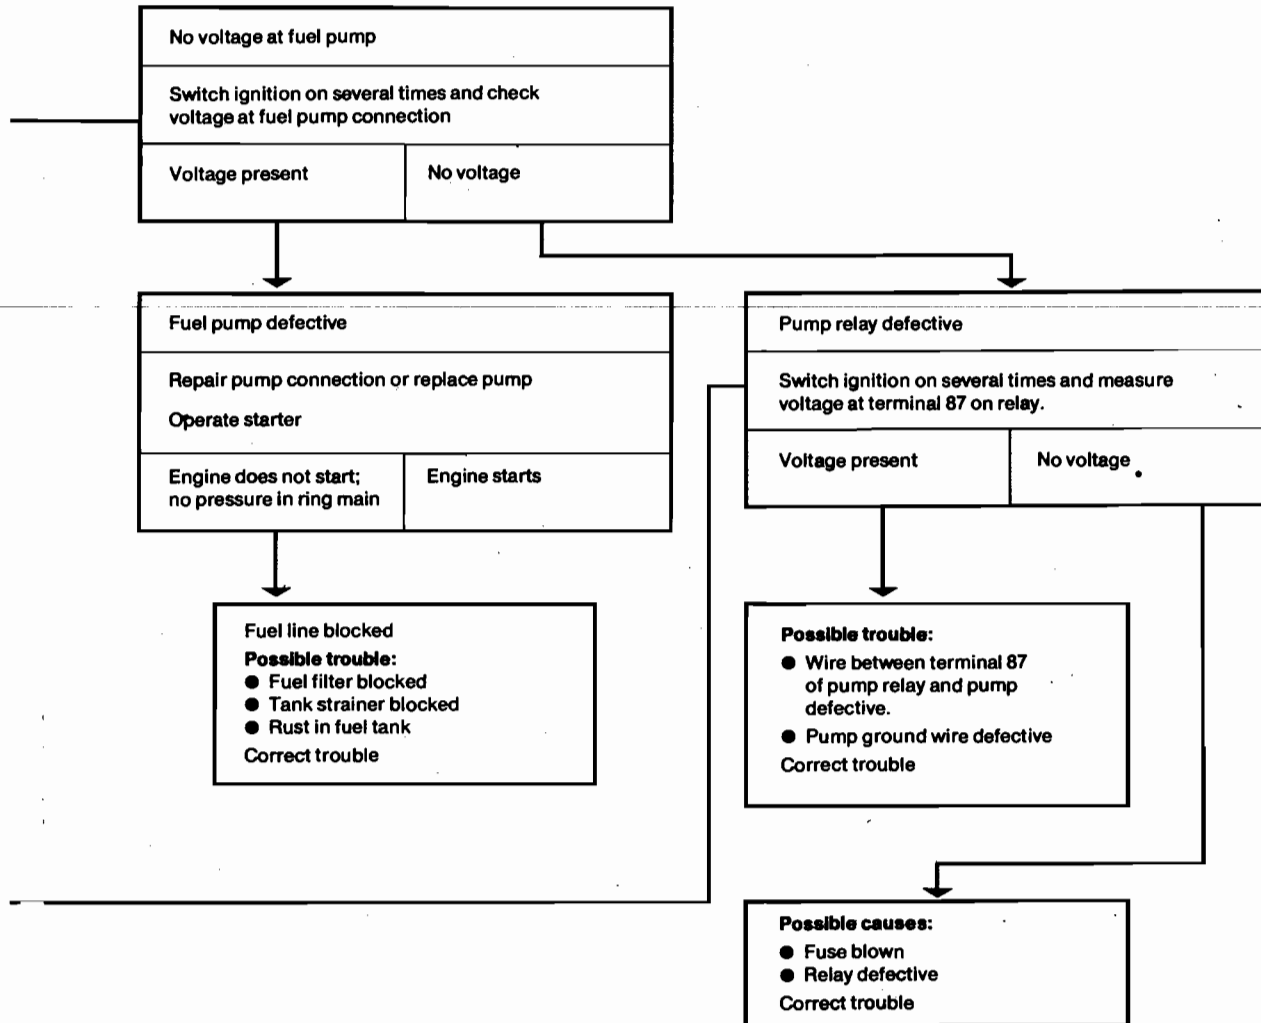


Note

The voltage supply relay is located as follows :


- Type 3 Sedan : on left under rear seat
- Type 3 Squareback : on left under rear seat
- Type 4 Four door Sedan : on left of engine compartment
- Type 4 Wagon : on control unit

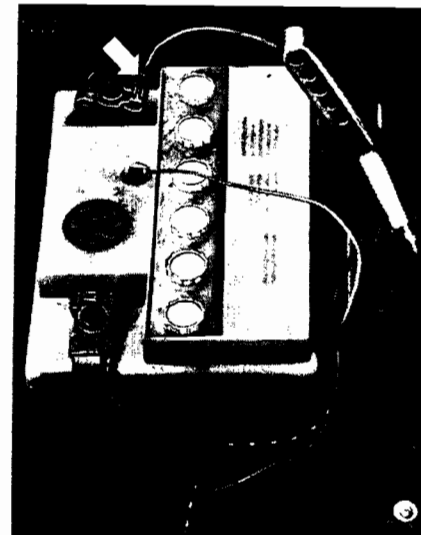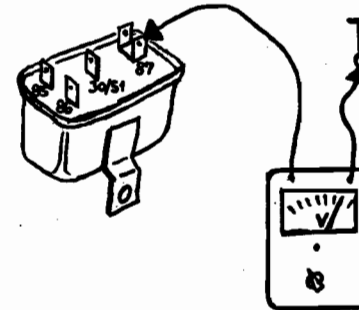

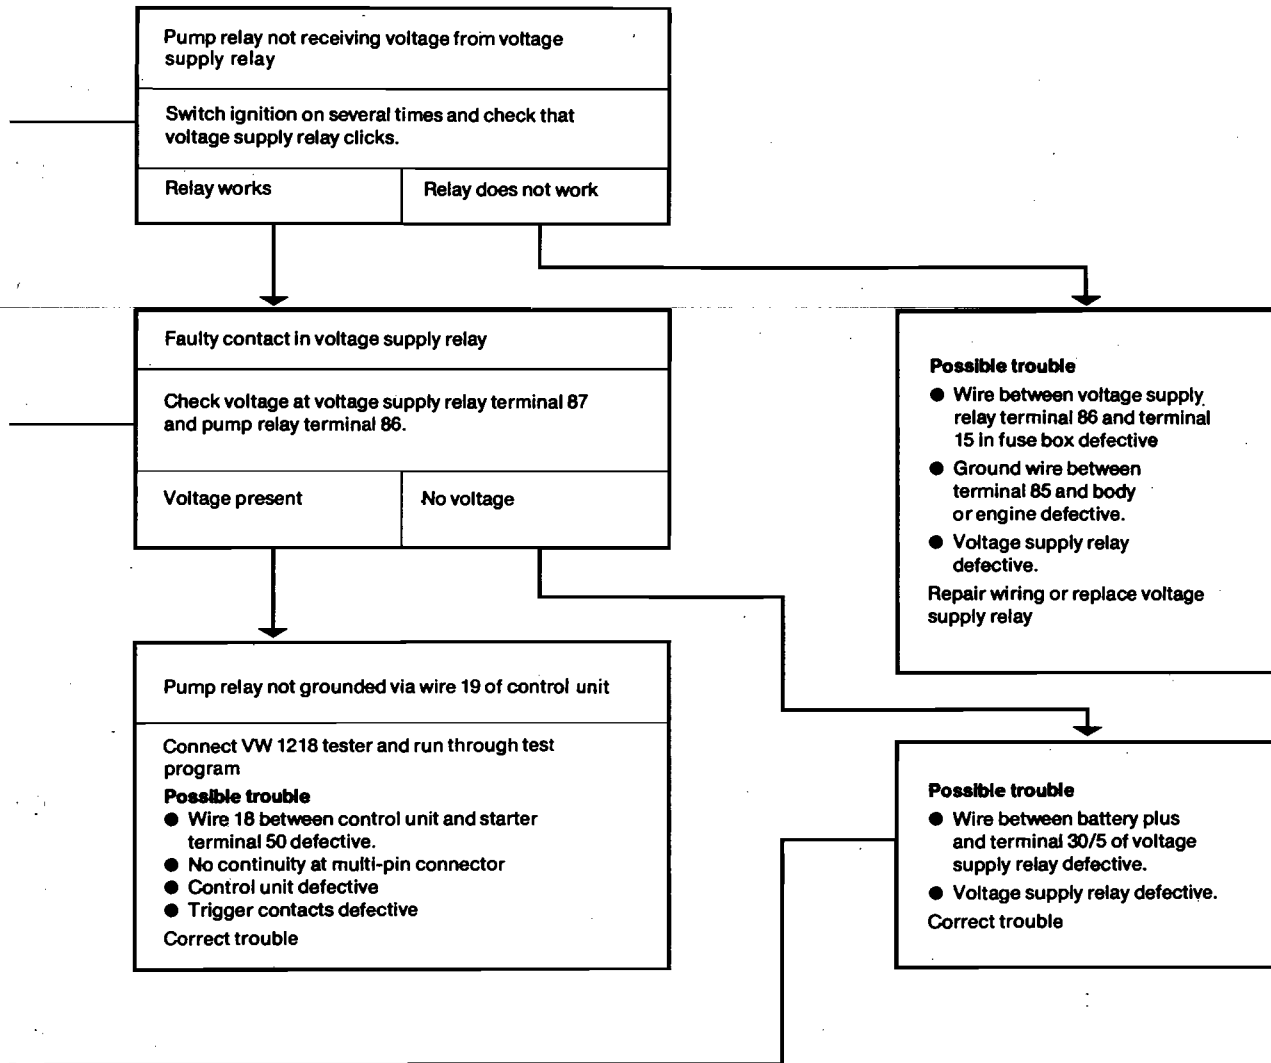

Starting engine

- Gear shift lever in neutral
- Do **not** press accelerator pedal
This holds true for a cold engine and an engine at operating temperature no matter what the outside temperature is
- Switch on ignition and start engine
- At outside temperatures below 0°C (32°F) press clutch pedal before starting.

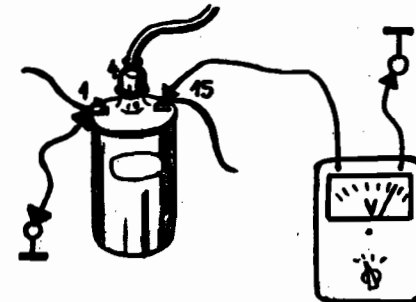



Cold engine does not start

Starti
troub

Test condition:

- Fuel in tank

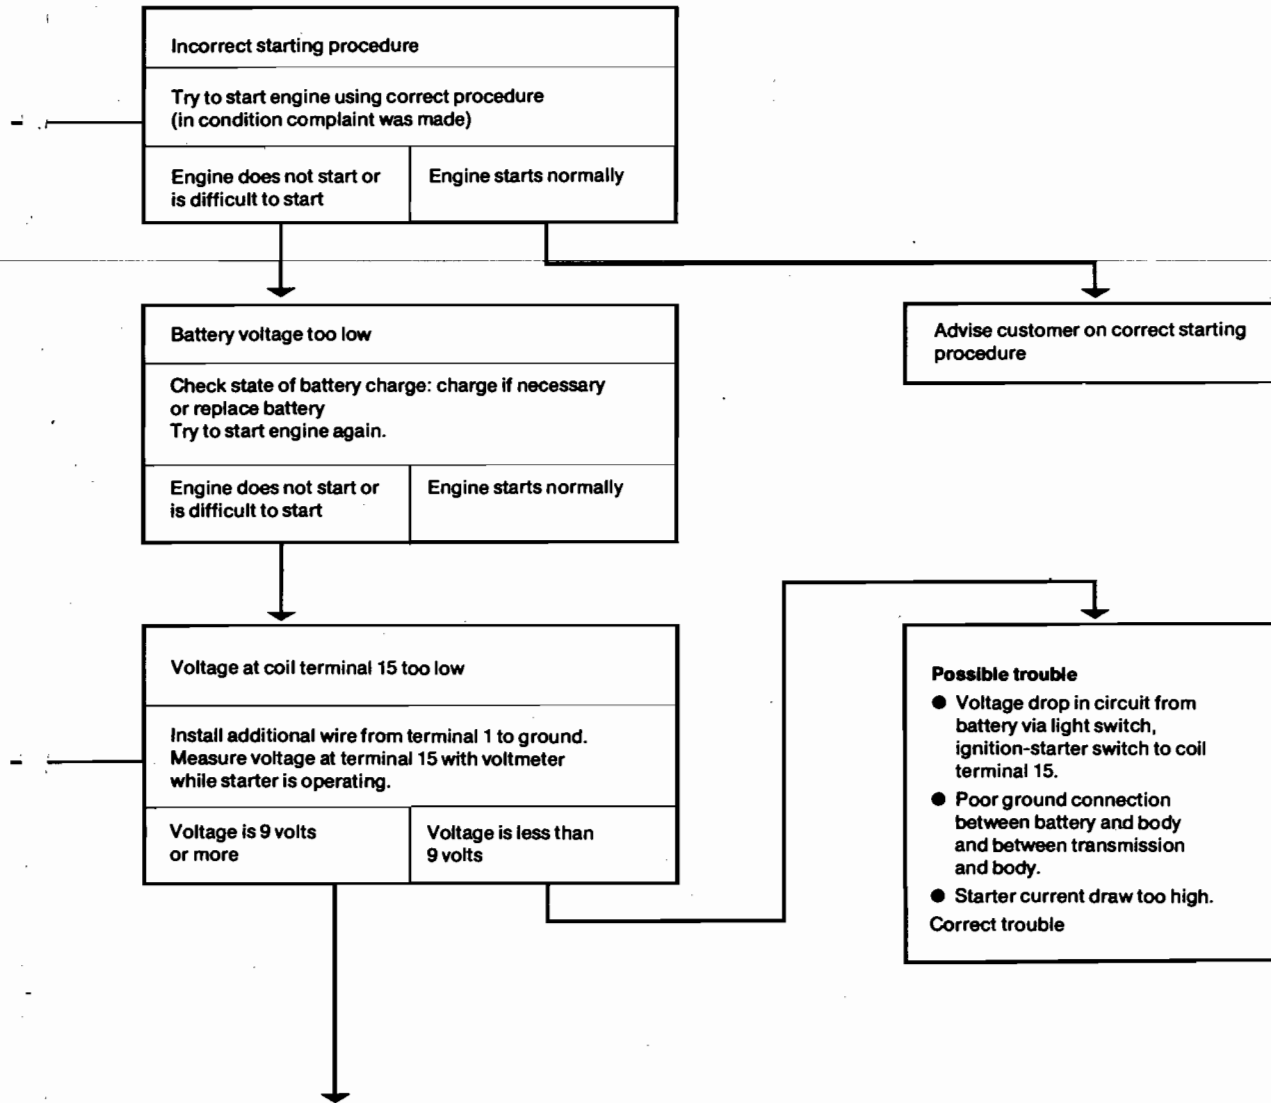

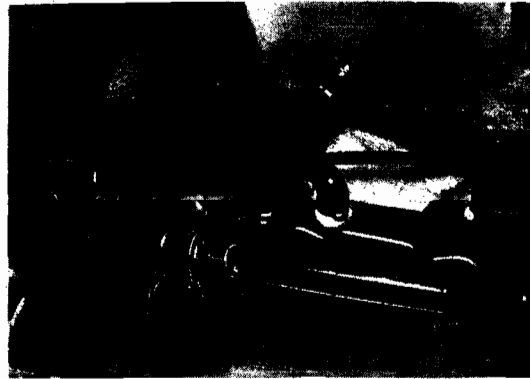

Test instructions:

Cold start valve and wiring:


- Detach cold start valve from intake air distributor but leave it connected to the ring main.
- Pull connector off thermostat and connect to ground.
- Pull wire off terminal 1 on coil
- Operate starter briefly and check if cold start valve injects fuel (catch fuel with rag).

**Warning
Fire hazard**

Thermostich can only be tested at very low ambient temperatures or when switch has been cooled down to actuating temperature in a refrigerator.

Actuating temperatures:

- 311 906 161 = -12 to -18°C (10 to 0°F)
(Aug. 67 to July 69)
- 311 906 161A = 0 to +10°C (32 to 14°F)
(Aug. 69 to March 70)
- 311 906 161C = -6 to -14°C (21 to 7°F)
(from April 70)
- 311 906 161B = -2 to -8°C (28 to 18°F)
(For service installation only up to March 70)

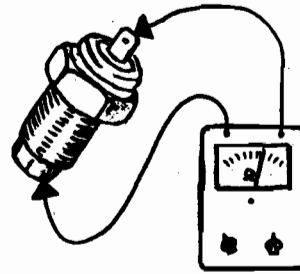

Starting
trouble


Trouble in cold start device	
<p>Possible trouble:</p> <ul style="list-style-type: none"> ● Cold start valve wire detached from terminal 50 of solenoid. ● Wire detached from thermoswitch. ● Incorrect combination of thermoswitch and control unit. (see list of equipment in workshop manual) ● Cold start valve or thermoswitch defective. 	
Replace cold start valve or thermoswitch as required.	
No trouble	Trouble found and corrected



Trouble in electrical part of injection system	
<p>Connect VW 1218 tester and run through test program.</p> <p>Possible trouble:</p> <ul style="list-style-type: none"> ● Control unit defective ● Temperature sensors I and II defective ● Pressure sensor defective ● Trigger contacts defective <p>Correct trouble</p>	

Starting engine

- Gear shift lever in neutral
- Do **not** press accelerator pedal
This holds true for a cold engine and an engine at operating temperature no matter what the outside temperature is
- Switch on ignition and start engine
- At outside temperature below 0°C (32° F)
press clutch pedal before starting



Cold engine does not start

Test conditions:

- Correct starting procedure being used
- Fuel in tank

Starting
trouble

Valve clearance incorrect	
Adjust valves properly with engine cold . Warm engine up and carry out starting tests.	
Engine difficult to start	Engine starts normally





Pressure in ring main too high (mixture too rich)	
Check pressure with gauge while operating starter and set to 2 kg/cm ² (28 psi) if necessary. Try to start engine again.	
Engine difficult to start	Engine starts normally



Control unit or pressure sensor making mixture too rich	
Connect tester 1218 and run through test program. Correct trouble and try to start engine.	
Engine difficult to start	Engine starts normally



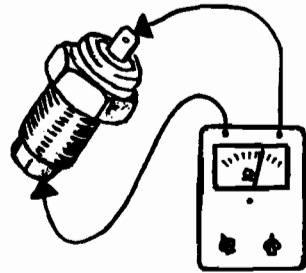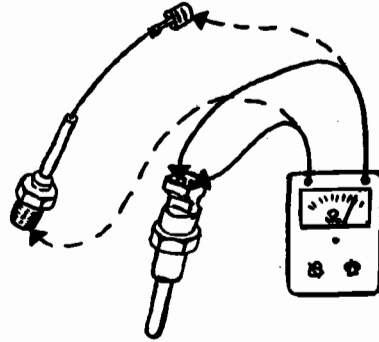

Note
 The thermoswitch should not show any continuity above the specified switch-on temperature.

Actuating temperatures:

- 311906161 = -12 to -18°C (10 to 0°F)
 (Aug. 67 to July 69)
- 311906161A = 0 to +10°C (32 to 14°F)
 (Aug. 69 to March 70)
- 311906161C = -6 to -14°C (21 to 7°F)
 (from April 70)
- 311906161B = -2 to -8°C (28 to 18°F)
 (For service installation only up to March 70)

Start
troub


Resistances of temperature sensors I + II too high despite OK indication (mixture too rich).	
Remove temperature sensors. Let them cool down to room temperature and measure resistance with ohmmeter: <ul style="list-style-type: none"> ● Sensor I not more than 300 Ω ● Sensor II not more than 2.5 k Ω Replace defective sensors and try to start engine again.	
Engine difficult to start	Engine starts normally



Engine floods due to defective cold start device	
Possible trouble: <ul style="list-style-type: none"> ● Cold start valve leaking ● Thermostitch does not switch off at higher temperatures Correct trouble, try to start engine again.	
Engine difficult to start	Engine starts normally



Injectors leaking		
Remove injectors but leave them connected to the ring main. Switch ignition on and off several times without starting engine <table border="1" style="float: right; margin-left: 20px;"> <tr> <td>Warning Fire hazard</td> </tr> </table>		Warning Fire hazard
Warning Fire hazard		
Have second mechanic check if more than two drops are ejected by each injector per minute. Replace leaking injectors.		

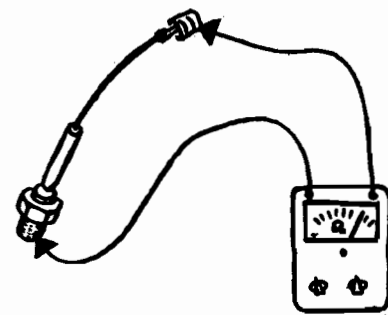

Engine starts but stops again after a short time

Starting
trouble


Trouble in electrical part of injection system	
Connect tester VW 1218 and run through test program	
Possible trouble: <ul style="list-style-type: none">● Control unit defective● Temperature sensor II (cylinder head) defective● Pressure sensor defective	
No trouble	Trouble corrected

Temperature sensor II defective despite OK indication	
Remove sensor, let it cool down to room temperature and measure resistance with an ohmmeter. Specified value: 1.5 to 2.5 k Ω	
Resistance clearly too high	Resistance OK

Auxiliary air regulator defective
Check air flow through regulator with engine cold If there is no flow or a restricted flow, replace auxiliary air regulator

Replace temperature sensor II

1. The first part of the document discusses the importance of maintaining accurate records of all transactions. It emphasizes that this is crucial for ensuring the integrity of the financial statements and for providing a clear audit trail. The text also mentions that proper record-keeping is essential for identifying and correcting errors in a timely manner.

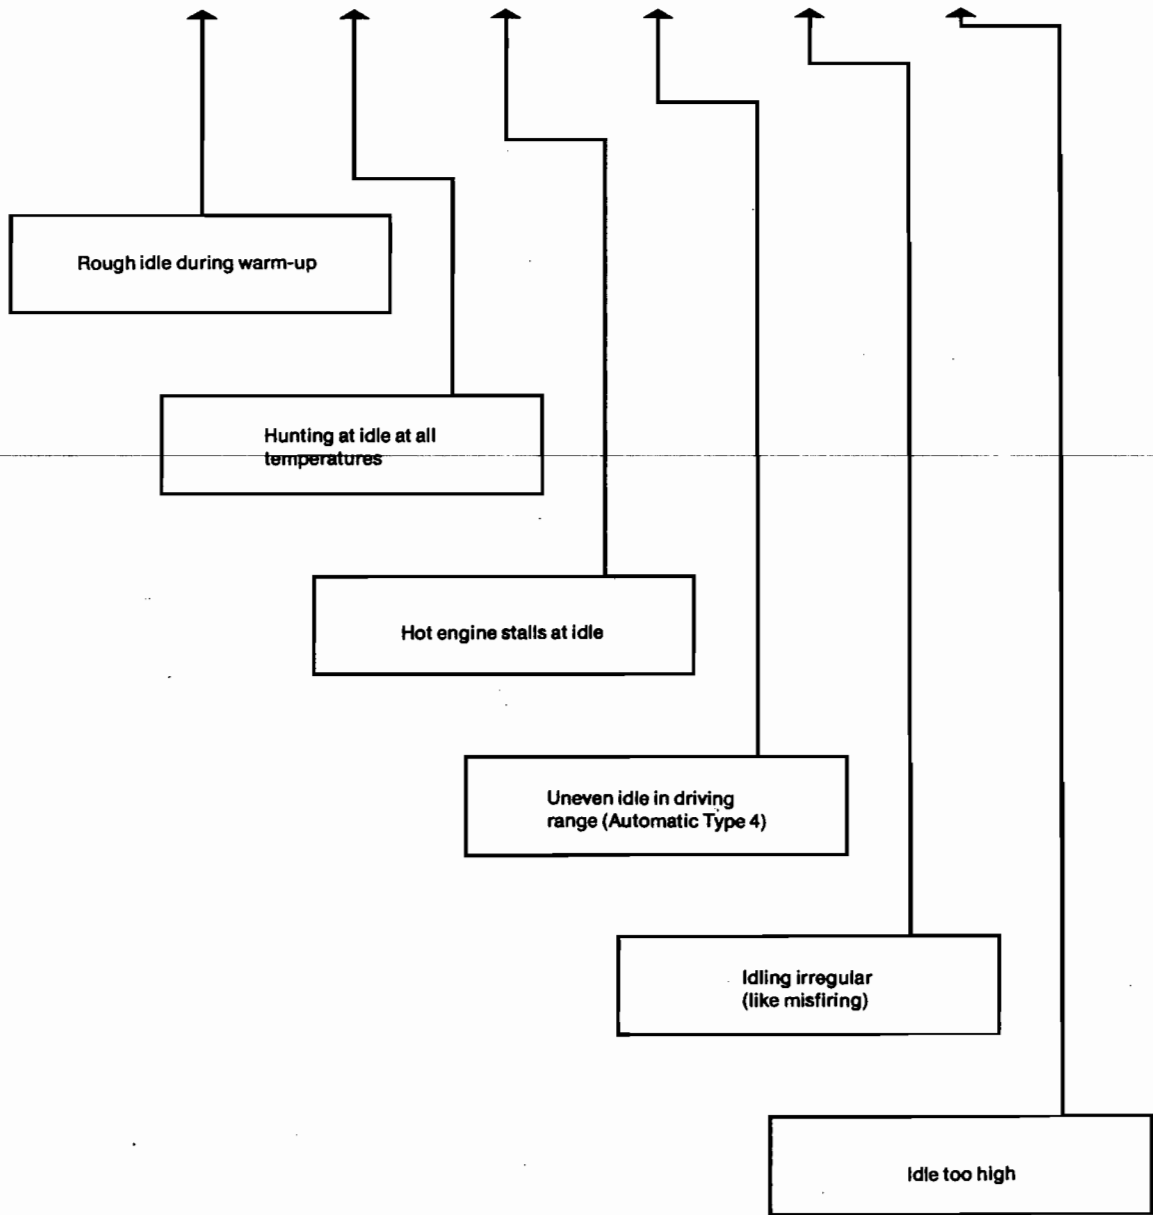


Idling
trouble

Rough Idle during warm-up

Test conditions:

- Valve clearance and ignition timing correct (very important).
- Idling speed of warm engine within specified tolerances.
- Let engine cool down to ambient temperature before starting test.

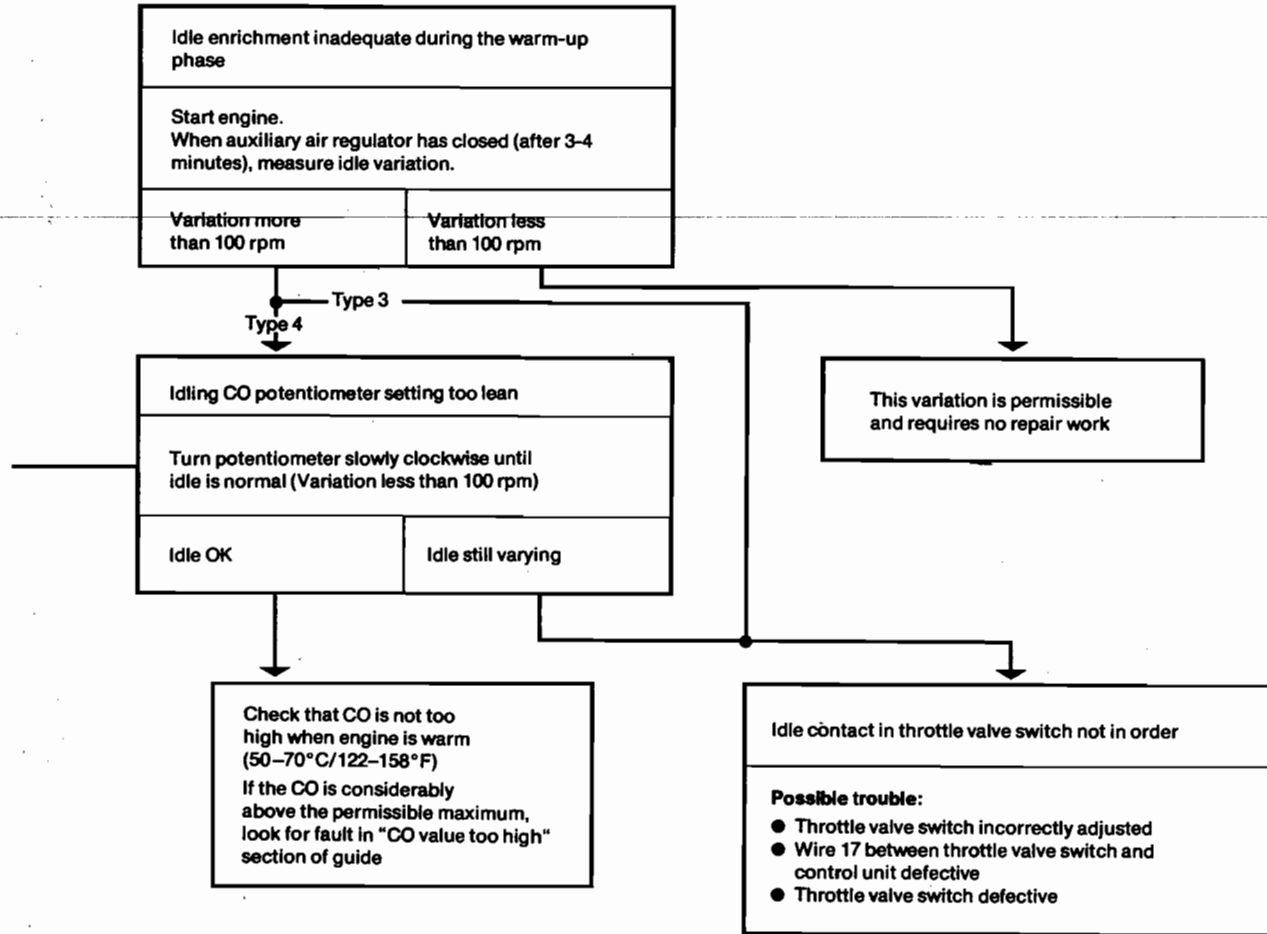

Idling trouble

Faint, illegible text, possibly bleed-through from the reverse side of the page.



Hunting at idle at all temperatures

Note


This point concerns only vehicles with deceleration fuel cutoff

- Type 3 up to Chassis No. 3112500000
- Type 4 up to Chassis No. 4112100000

Test condition:

- Engine warm (50–70°C/122–158°F)
- Engine running at idle

Idling
trouble

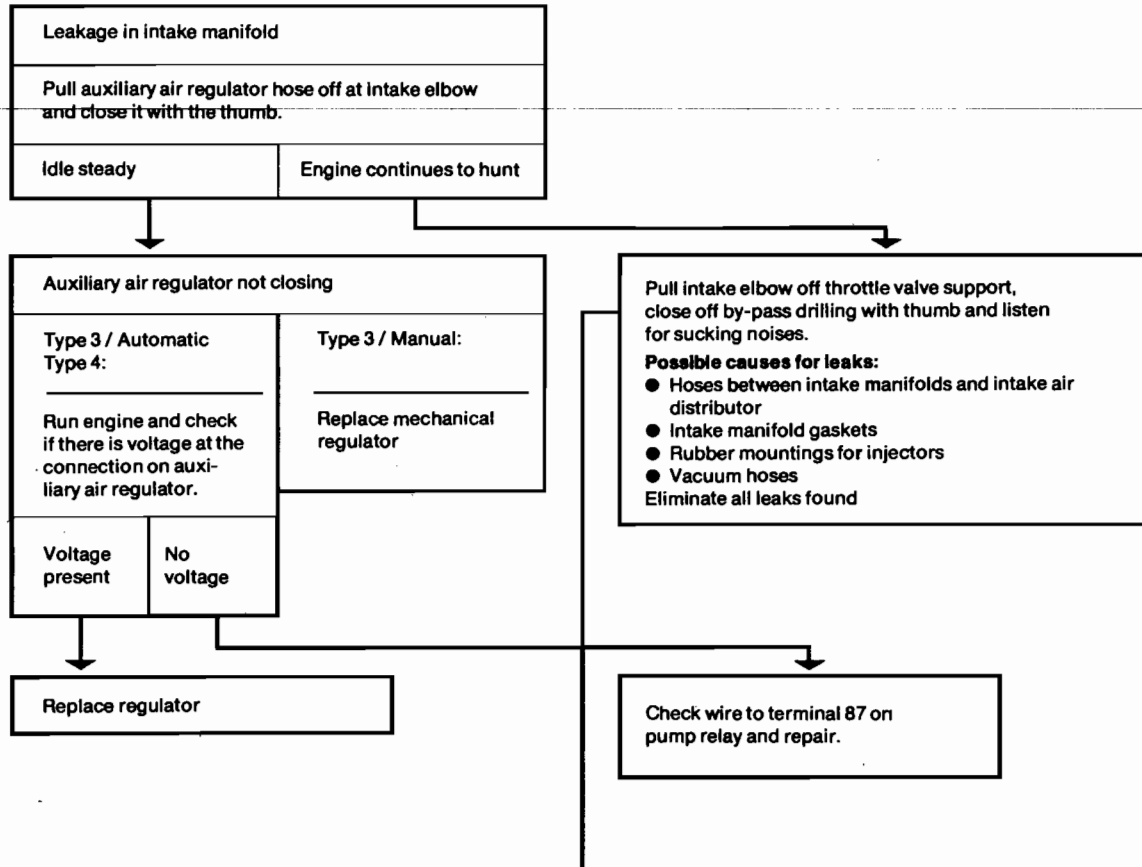

Hot engine stalls at idle

Test condition

- Engine cold

Valve clearance incorrect

Check clearance and – if necessary – set exactly (very important).
Warm up engine and check if it will idle properly

Engine stalls

Engine idles properly

Idling
trouble

Trouble in electrical part of injection system

Connect tester 1218 and run through the guide

Possible trouble:

- Throttle valve switch incorrectly adjusted
- Control unit defective
- Pressure sensor defective (too lean)

Correct trouble

**Idling speed regulator
(only Type 4/Automatic Transm.)**



Note

Engine oil temperature must be 50–70°C (122–158°F).

Regulator must be adjusted with engine running.

Adjustment

1 – Set idle to 850–900 rpm.

2 – Apply parking brake and select driving range.


In this condition idle should be
approximately 600–700 rpm. Play at "a" should
be 0.5–1.0 mm (0.02–0.04 in.)

3 – Adjust play as required on M 5 screw (arrow).


Uneven idle in driving range (Automatic Type 4)

Test conditions:

- No variation in idle with lever at "N"
- Idle speed with engine warm 850–900 rpm

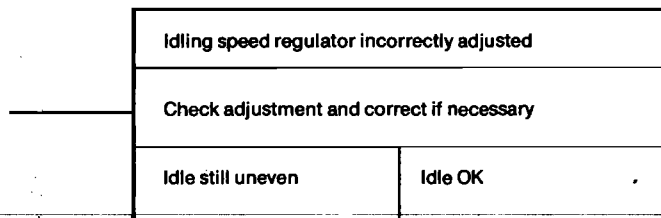

Idling
trouble

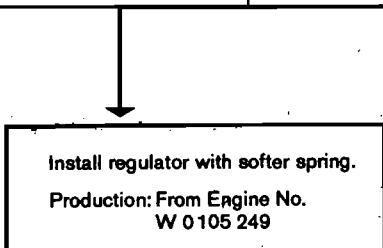




- 1 – Pressure sensor connector
- 2 – Connector for temperature sensor II
- 3 – Connectors for injectors.

Note

The area near the plug connector for No. 3 cylinder on the Type 4/Wagon is particularly critical.

Repair instructions:

- a – Pull wires off pressure sensor, temperature sensor II (cylinder head) and injectors for cylinders 3 and 4
- b – Route wiring behind fuel line on pressure regulator (see illustration).
- c – Connect wires again.



Idle irregular (like misfiring)

Test conditions:

- Engine warm (50°–70°C/122–158°F)
- Engine running at idling speed


Inductance from ignition system	
Check if the injection system wiring is coming into contact with the high tension ignition cables (see instructions on left)	
Route wiring so that it is as far as possible from ignition cables	
Idle still irregular	Idle OK

Idling trouble

Trouble occurs only when heater is switched on	
Switch heater off and watch idle	
Idle still irregular	Idle OK when heater is switched off

Inductance from some other source
Possible trouble: <ul style="list-style-type: none">● Powerful radio station in immediate vicinity● Two-way radio on vehicle near engine
No remedy normally required


Trouble in heater electrical system
Possible cause: <ul style="list-style-type: none">● Defective condenser in combustion air blower Replace combustion air blower.

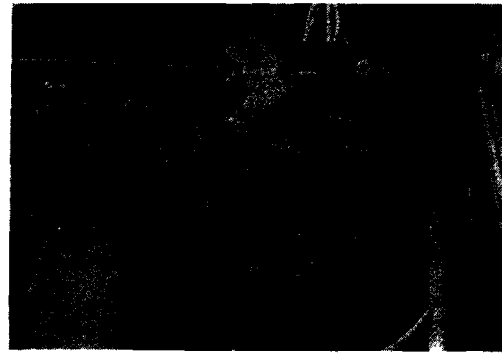


Idle too high

Test conditions:


- Engine warm (50–70°C/122–158° F)
- Tachometer connected
- Engine running at idle

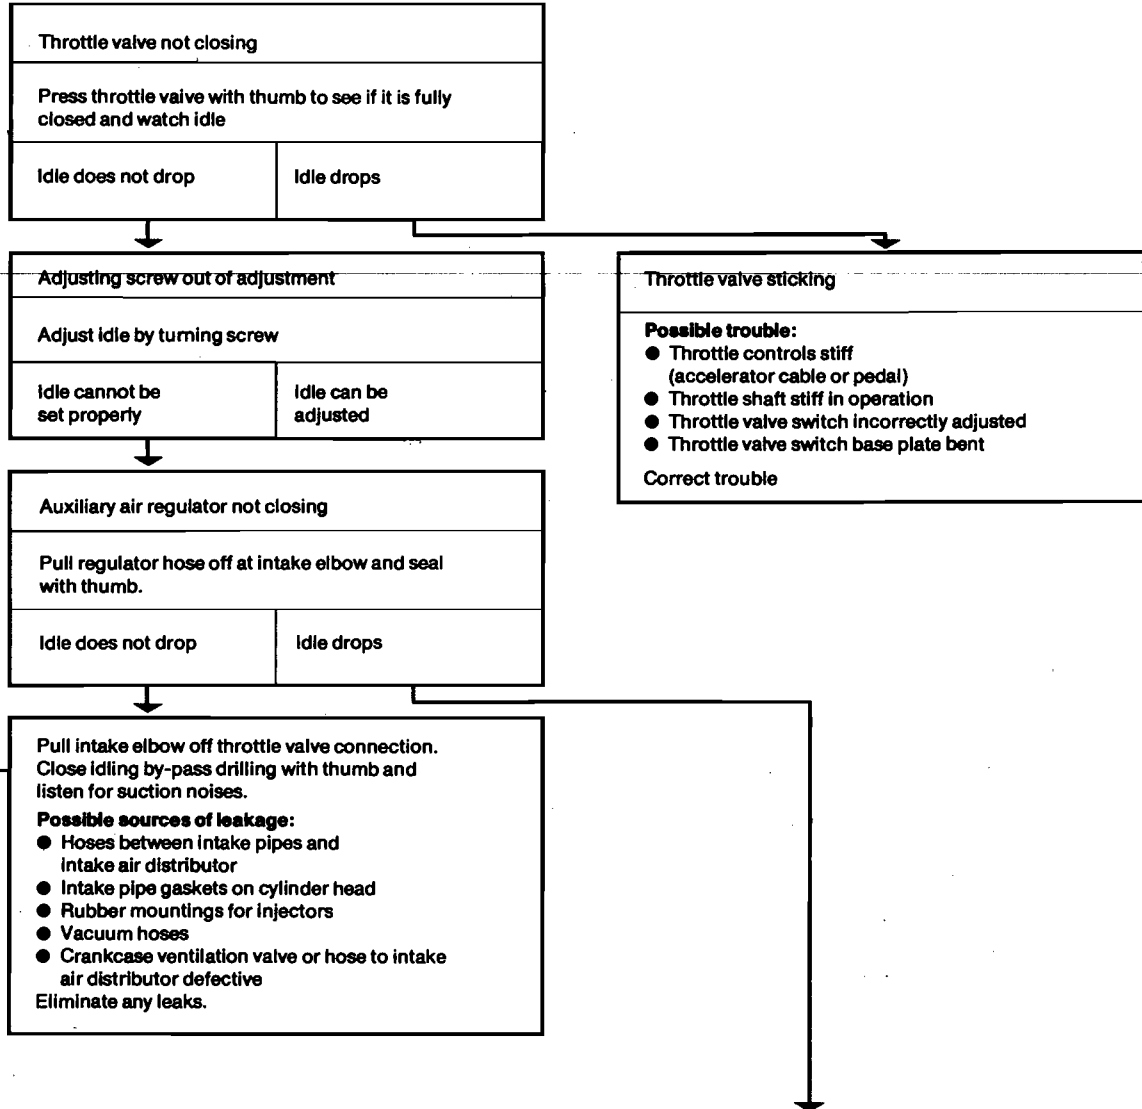

Idling trouble

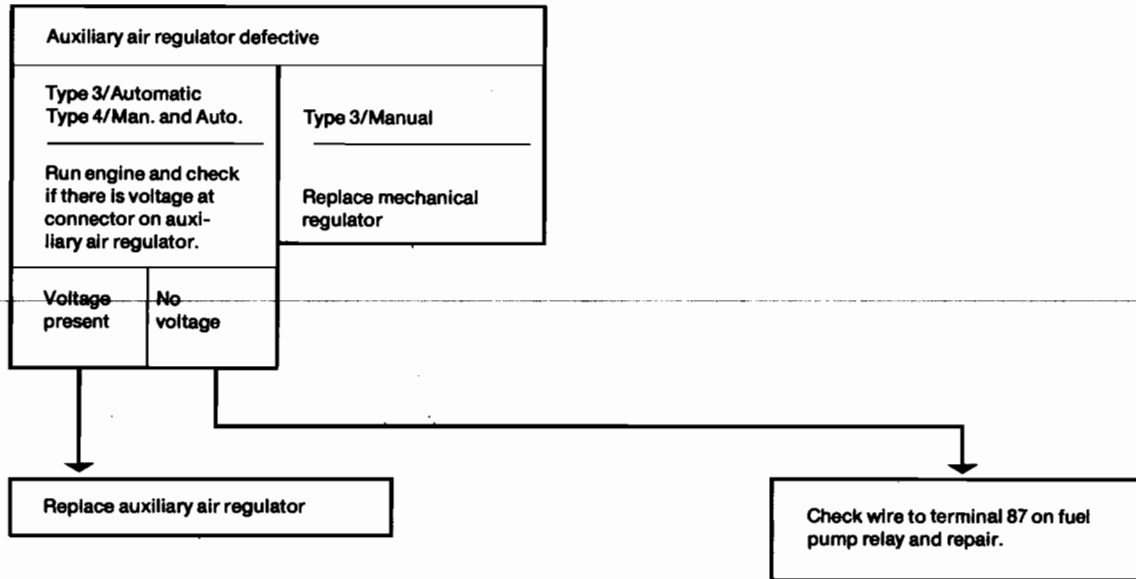

Idling
trouble

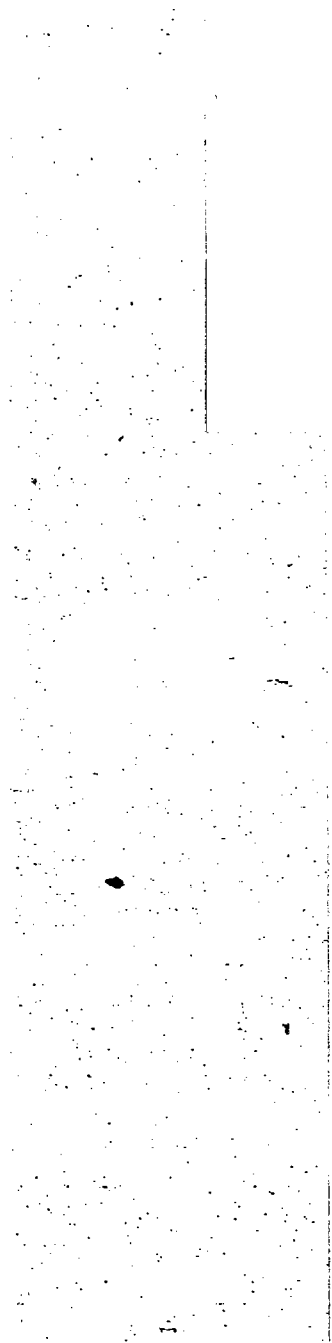

Hesitation trouble

Test condition:

- Vehicle reaches maximum speed
(otherwise see "Poor output")


Acceleration enrichment ineffective	
Switch ignition on and open throttle slowly by hand.	
Listen whether injectors click (20 times)	
Clicking heard	No clicking heard

Trouble in electrical part of injection system	
Connect tester VW 1218 and run through test program	
Correct any trouble found and road test vehicle	
Progression still not satisfactory	Performance on road test OK

Mechanical trouble in pressure sensor	
Check by using a new pressure sensor and road test vehicle again.	
Progression still not satisfactory	Performance on road test OK

Wires on throttle valve switch faulty or switch defective
Check wiring connections and repair as necessary, otherwise replace switch.

Hesitation trouble

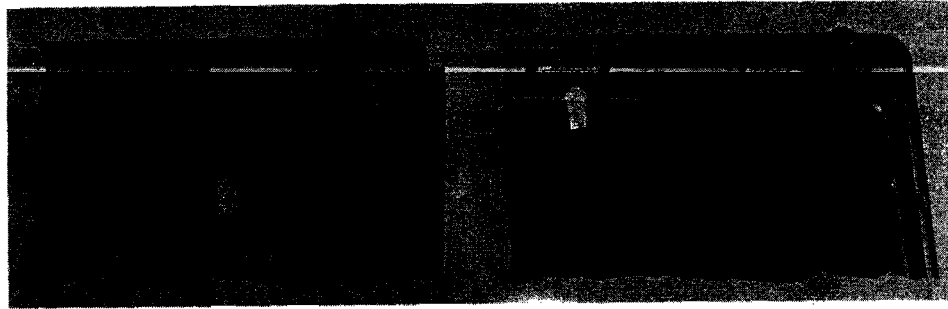

Incorrect matching of control unit and temperature sensor (mixture too weak)	
Check matching The service temperature sensors I (311906081 B) and II (022906041 A) must not be installed in vehicles which have control units with yellow, brown or black stickers	
Parts match	Parts do not match

Defect in ignition system

Possible trouble:

- Contact breaker
- Ignition timing
- Spark advance settings
- Spark plug gaps

Correct trouble

Install correct temperature sensor as shown in list of equipment in workshop manual.

Hesitation trouble

Road testing instructions:

- Increase tire pressures to 3 psi above normal tire pressure
- Engine and transmission must be warm
- Level, dry asphalt road surface
- Normal wind conditions
- Take average readings from one run in each direction
- Check maximum speed where legally permitted on a measured test stretch (1 mile) with a stop watch
- Find actual speed from table below and compare with speedometer to find variation

Speed table
- for 1 mile stretch

Seconds	mph
58	62
55	65
52	69
48	75
45	80
43	85
40	90
38	95
36	100

Possible trouble in Ignition system:

- Distributor cap (damp, cracked, burnt by tracking)
- Rotor defective
- Ignition timing incorrect (breaker points)
- Condenser defective
- Loose connections on coil
- Ignition cables poorly connected
- Spark plugs or connectors defective
- Centrifugal spark control defective
- Arcing at ignition cables on distributor (through protective caps)

Poor output / top speed too low

Test conditions:

- Speedometer reading normal (see instructions on left)
- Tire size and type equivalent to standard
- Wheels turning freely (brakes, bearings)


Faulty engine adjustment	
<p>Procedure:</p> <ul style="list-style-type: none"> ● Check valve clearance with engine cold and adjust if necessary ● Check accelerator cable adjustment. (Throttle must be fully open with pedal at full throttle). ● On Type 4 up to model year 71; Check that crankcase ventilation control flap moves freely. ● Check ignition timing and adjust if necessary. 	
No trouble	Trouble corrected

Troubles in ignition system	
<p>Check ignition system and eliminate any faults found.</p> <p>Caution Visible sparks do not always prove that the ignition system is in order (see remarks on left).</p>	
No trouble	Trouble corrected

Road test	
Output poor	Output O.K.

Road test	
Output poor	Output O.K.

Poor output/
top speed
too low

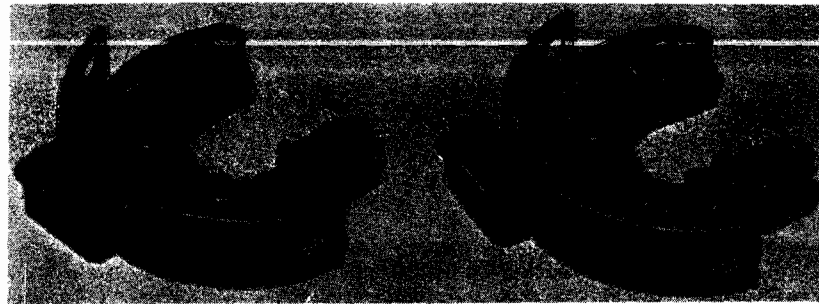

without deflector plate

with deflector plate


Note

On older vehicles the distributor trigger contacts with oil deflector can be service installed.

Introduced in production: July 1971

- Type 3 from Chassis No. 311 2252 242
- Type 4 from Chassis No. 411 2059 500

Poor output / Top speed too low (cont'd from page 43)

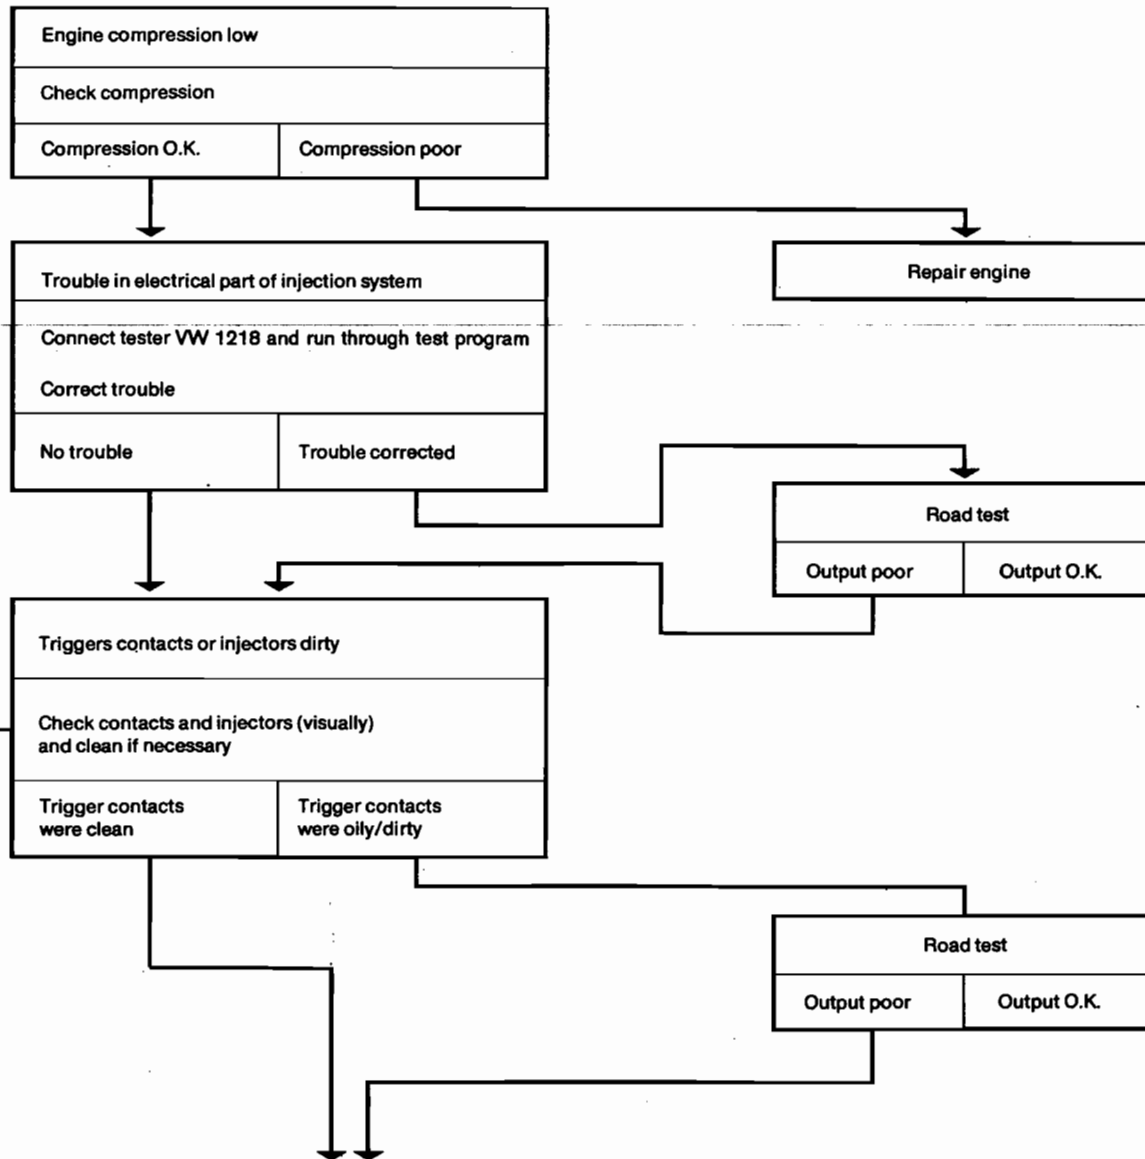


Poor output/
top speed
too low



Note
Abnormal tire wear can indicate
wrong toe adjustment



Poor output / top speed too low (cont'd from page 45)

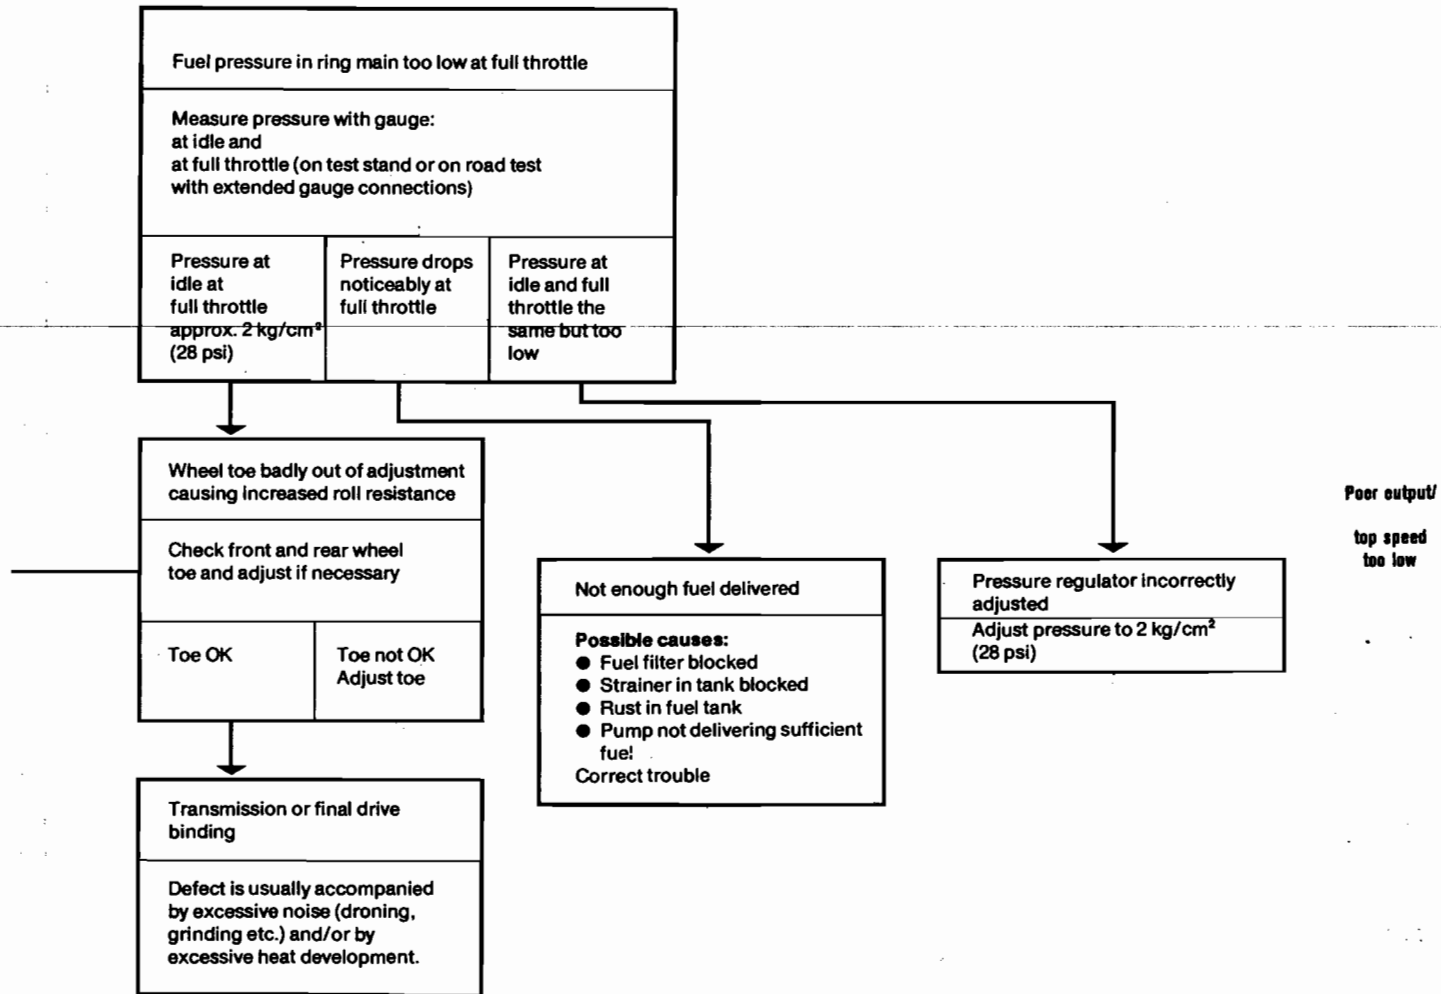


Road testing instructions:

- Where possible customer should be present during road test
- Plan test route to include mixed driving and traffic conditions (equal parts of city traffic, open road and expressway)
- Do not switch heater on during the test
- Measure consumption with a fuel consumption tester or by filling fuel tank exactly before and after test
- Approximate consumption figures for mixed traffic at an ambient temperature above 0°C (32° F) are:
 - Type 3 / Manual approx.
18.7 mpg/US or 23 mpg/Imp.
 - Type 3 / Automatic approx.
17.6 mpg/US or 21.5 mpg/Imp.
 - Type 4 / Manual approx.
17 mpg/US or 20 mpg/Imp.
 - Type 4 / Automatic approx.
16.2 mpg/US or 19.9 mpg/Imp.

Caution




- These figures are only for comparison with figure obtained during road test under given driving and traffic conditions. They are not to be used for comparison with consumption figures given by customer.
- When vehicle is driven short distances in rush hours conditions, consumption can go up to 20 liters for 100 km (11.3 mpg/US or 13.4 mpg/Imp. for 60 miles)
- When discussing fuel consumption, remember that the heater (Type 4) also uses from 0.5 to 3 liters per 100 km (1 to 8 pts/US per 60 miles or 0.8 to 4.6 pts/Imp per 60 miles)

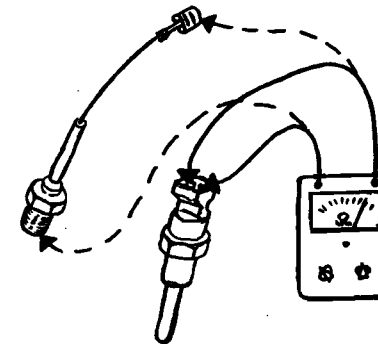

Fuel consumption too high


Test condition:

- Standard tire size and type
- Wheels turning freely (brakes, wheel bearings)
- Ignition timing correct
- Road test has shown clearly that fuel consumption is too high (see remarks on left)

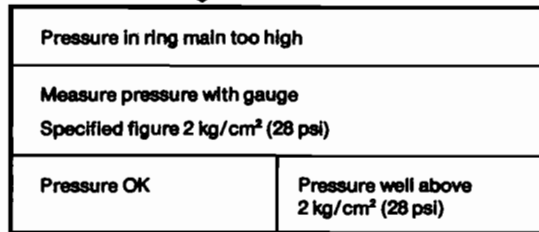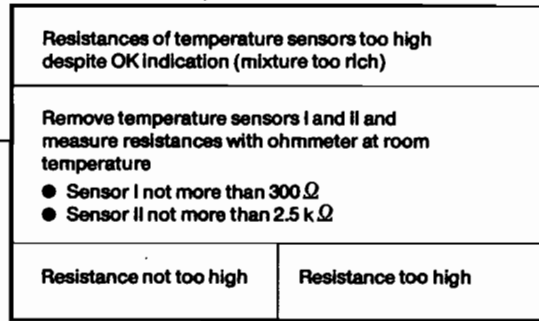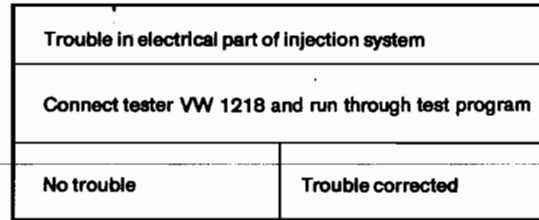


Replace defective temperature sensor

Fuel consumption too high

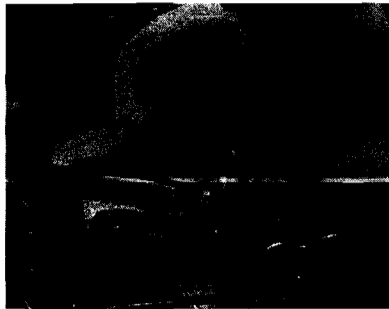


Note

- Detach cold start valve from intake air distributor but leave it connected to the ring main.
- Switch ignition on and off several times and check if fuel is delivered.

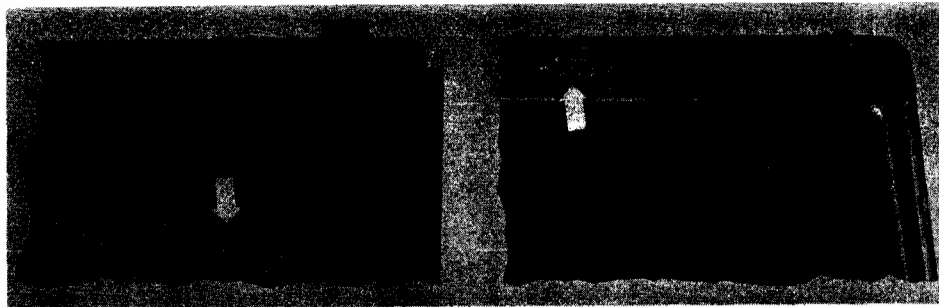

Fuel consumption too high (cont'd from page 49)

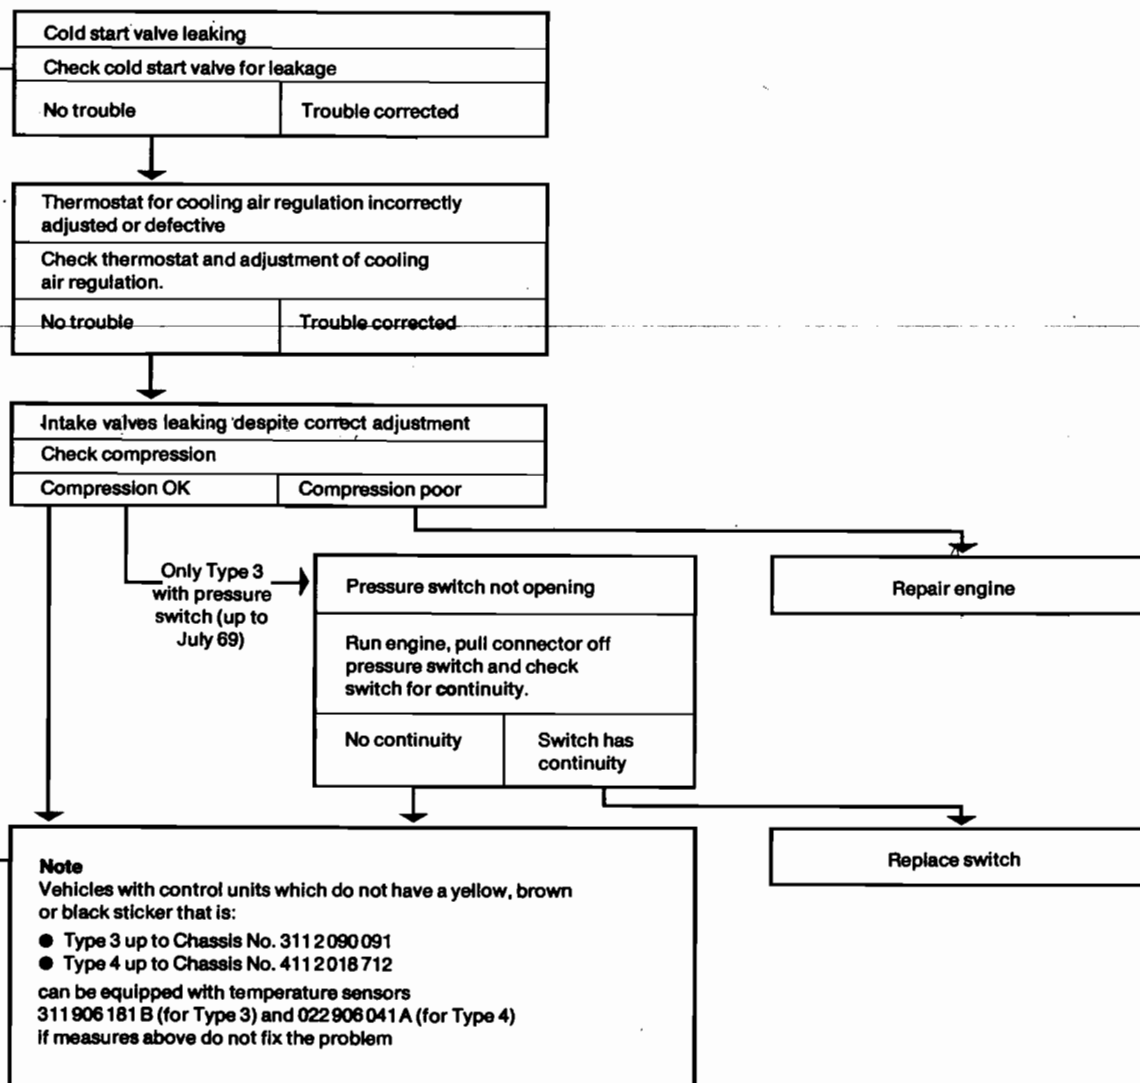

Fuel consumption too high

1. The first part of the document discusses the importance of maintaining accurate records of all transactions. It emphasizes that this is crucial for ensuring the integrity of the financial statements and for providing a clear audit trail. The text also mentions that proper record-keeping is essential for identifying and correcting errors in a timely manner.

2. The second part of the document focuses on the role of internal controls in preventing fraud and misstatements. It highlights that a strong internal control system is necessary to ensure that all transactions are properly authorized, recorded, and reviewed. The text also notes that internal controls should be designed to be effective and efficient, and should be regularly evaluated and updated as needed.

3. The third part of the document discusses the importance of transparency and disclosure in financial reporting. It emphasizes that providing clear and concise information to investors and other stakeholders is essential for building trust and confidence in the company's financial performance. The text also mentions that transparency and disclosure are key factors in determining the company's credit rating and its ability to raise capital.

4. The fourth part of the document focuses on the role of the board of directors in overseeing the company's financial reporting process. It highlights that the board is responsible for ensuring that the financial statements are accurate and reliable, and for providing oversight and guidance to management. The text also notes that the board should have a clear understanding of the company's financial position and should be actively involved in the financial reporting process.

5. The fifth part of the document discusses the importance of communication and collaboration between different departments in the company. It emphasizes that effective communication is essential for ensuring that all transactions are properly recorded and that the financial reporting process is efficient and effective. The text also mentions that collaboration between departments is key to identifying and resolving issues in a timely manner.

Pressure regulator incorrectly adjusted	
Reduce pressure in ring main to 2 kg/cm ² (28 psi)	
Pressure cannot be reduced	Pressure can be reduced



Possible trouble:

- Return line between pressure regulator and tank kinked or blocked
- Pressure regulator defective

Correct trouble

Fuel consumption too high

Engine misfiring only when electrical components are switched on.



Engine misfiring at all times



Engine misfiring

1. The first part of the document discusses the importance of maintaining accurate records of all transactions. It emphasizes that this is crucial for ensuring the integrity of the financial statements and for providing a clear audit trail. The text also mentions that proper record-keeping is essential for identifying and correcting errors in a timely manner.


2. The second part of the document focuses on the role of internal controls in preventing fraud and misstatements. It highlights that a strong internal control system is necessary to ensure that all transactions are properly authorized, recorded, and classified. The text also notes that internal controls should be designed to provide reasonable assurance of the reliability of the financial reporting process.

3. The third part of the document discusses the importance of segregation of duties. It explains that this principle is essential for reducing the risk of errors and fraud by ensuring that no single individual has control over all aspects of a transaction. The text also mentions that segregation of duties should be implemented in a way that is practical and efficient.

4. The fourth part of the document discusses the importance of regular reconciliations. It explains that reconciling accounts is a key component of the accounting process that helps to ensure that the books are balanced and that all transactions are properly recorded. The text also notes that reconciliations should be performed on a regular basis and that any discrepancies should be investigated and resolved promptly.

5. The fifth part of the document discusses the importance of maintaining up-to-date records. It explains that records should be kept for a sufficient period of time to allow for a complete audit and to provide a historical record of the company's financial performance. The text also mentions that records should be stored in a secure and accessible location.

Engine misfiring only when electrical components are switched on

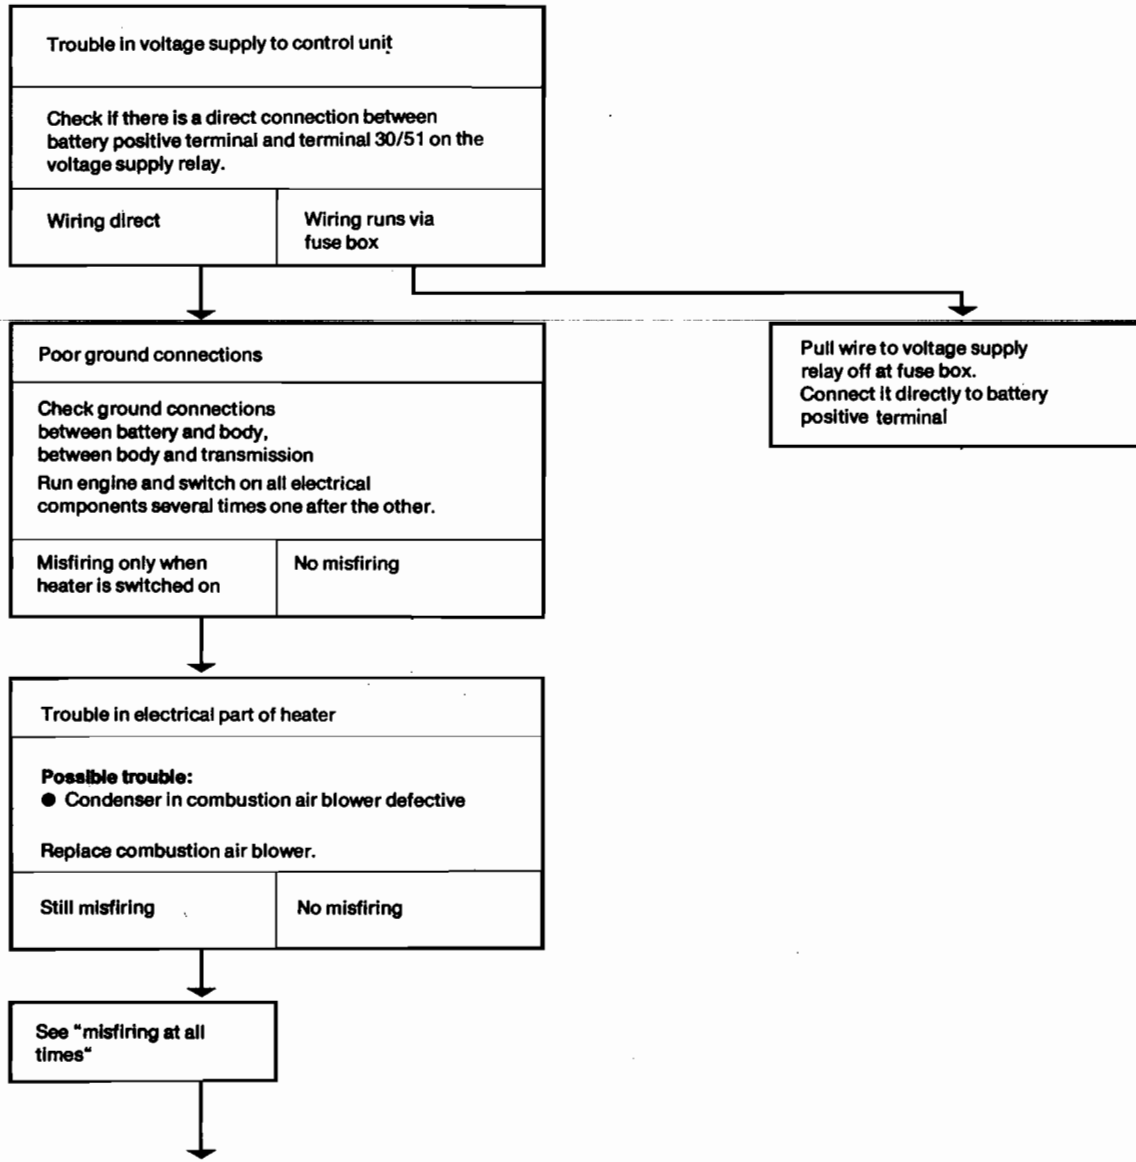

Engine misfiring

Note

If misfiring occurs only after deceleration the engine is probably sucking in oil through the crankcase breather or valve guides (can often be recognized by blue exhaust during deceleration).

In this case check crankcase ventilation system and valve guide wear.

Possible defects in ignition system

- Loose connections on coil
- Distributor cap (damp, cracked, burnt by tracking)
- Rotor defective
- Ignition timing incorrect (breaker points)
- Ignition cables poorly or incorrectly connected
- Spark plugs or connectors defective
- Arcing at ignition cables on distributor (through the rubber caps)
- Condenser defective
- Injection wiring touching ignition cables

Note

When checking connections do not forget the less accessible connections such as

- Voltage supply relay
- Pump relay
- Central ground connection on crankcase
- Wire 30 to voltage supply relay on battery positive (Type 4 only)
- Multi-pin connector on control unit

Engine misfiring at all the times

Test condition:

- Check if misfiring occurs only when electrical components are switched on and off. If so, see page 57.
- Check if misfiring occurs only after deceleration. If so, see remarks on left.


Trouble in ignition system	
Check system and eliminate defects (see remarks on opposite page).	
No trouble	Trouble corrected



Faulty terminal or ground connections in the injection system	
Check all connections systematically for tight fit and corrosion. (see remarks on opposite page).	
No trouble	Trouble corrected



Parts of injection system or wiring defective	
Connect tester: VW 1218 and run through test program During test stages 4 to 11, tap the control unit by hand (to detect loose soldered connections) During all other test stages, move wiring concerned to detect breaks in wires Correct trouble	
No trouble	Trouble corrected



Engine misfiring




without deflector plate

with deflector plate


Note
On older vehicles distributor trigger contacts with oil deflector can be service installed.

Introduced in production: July 1971


- Type 3 from Chassis No. 311 2252 242
- Type 4 from Chassis No. 411 2059 500

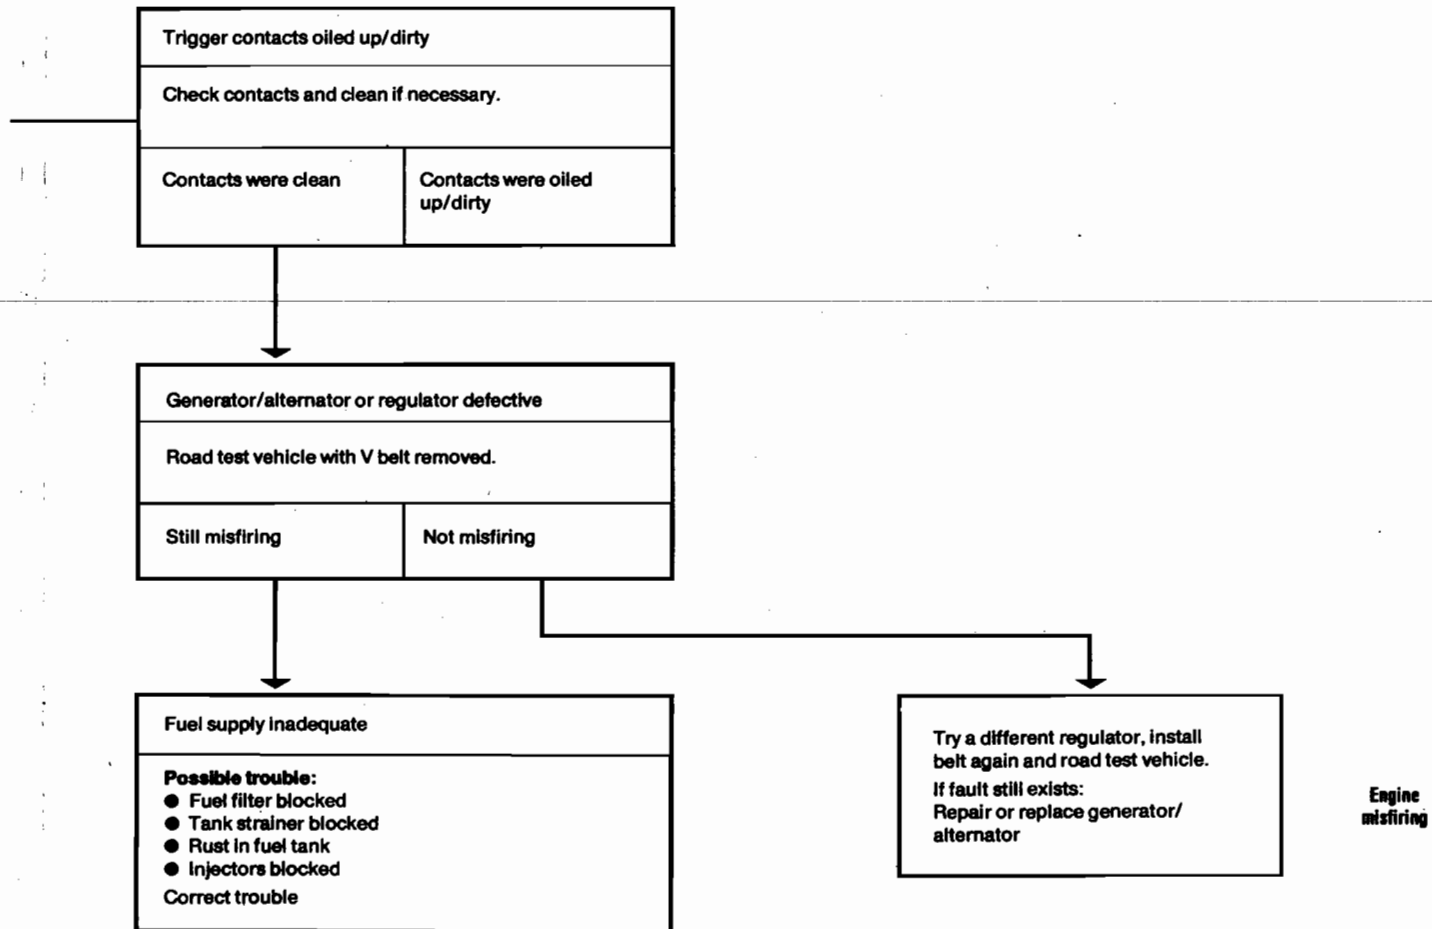

Engine misfiring

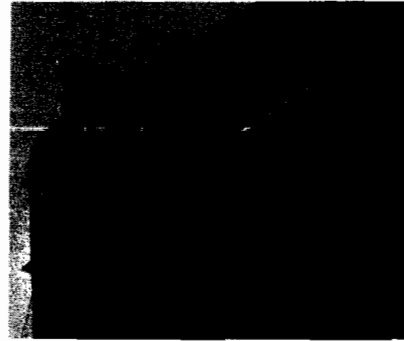

Note
The service installation of a potentiometer (311906019) will not eliminate the fault "CO value too high". This is intended only to improve mixture enrichment (Service remedy for hunting at idling speed).

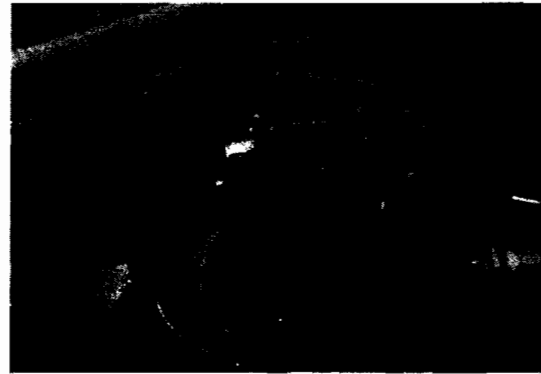

CO value too high

Test conditions:

- Valve clearance and ignition timing correct (very important)
- Engine temperature between 50 and 70°C (122–158° F)

Idling CO potentiometer (if installed)
Incorrectly adjusted

Adjust CO with potentiometer (on control
unit or – if subsequently installed – in engine
compartment; see arrow in illustrations)

CO remains too high

CO can be adjusted

Pressure in ring main too high

Check pressure with gauge.
Specified figure: 2 kg/cm² (28 psi)

Pressure is correct

Pressure well above
2 kg/cm² (28 psi)

Trouble in electrical part of injection system

Connect tester VW 1218 and run through test program

No trouble

Trouble corrected

Only Type 3
with pressure
switch (up to
July 69)

Pressure regulator incorrectly adjusted

Set pressure to 2 kg/cm² (28 psi)

Pressure cannot be
adjusted

Pressure can be
adjusted

Possible trouble:

- Return line between pressure regulator and tank kinked or blocked
- Pressure regulator defective
Repair as necessary


CO value
too high



Mechanical trouble in pressure switch	
Run engine, pull connector off pressure switch and see if CO is reduced	
CO not reduced	CO reduced

Check vacuum pipe to pressure switch or replace pressure switch

CO value too high

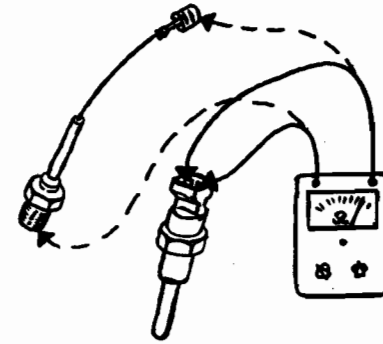

CO value too high (cont'd from pages 63 and 65)

Resistances of temperature sensors too high despite OK Indication (mixture too rich)	
Remove sensors I and II and measure resistance with an ohmmeter at room temperature (about 20°C/68° F)	
<ul style="list-style-type: none"> ● Sensor I not more than 300 Ω ● Sensor II not more than 2.5 k Ω 	
Resistances correct	Resistances too high

Replace defective temperature sensor.

Injectors or cold start valve leaking	
Check for leaks with injectors and cold start valve connected to ring main. Switch ignition on and off several times.	
No leaks found	Leaks found and eliminated

Inlet valves leaking despite correct adjustment	
Check compression	
Compression OK	Compression poor

Repair engine


CO influenced excessively by crankcase breather
Possible causes: <ul style="list-style-type: none"> ● Too much oil in engine ● Oil dilution by fuel ● Pistons, rings and cylinders worn Repair as necessary

CO value too high


[Illegible text block]

[Illegible text block]

88

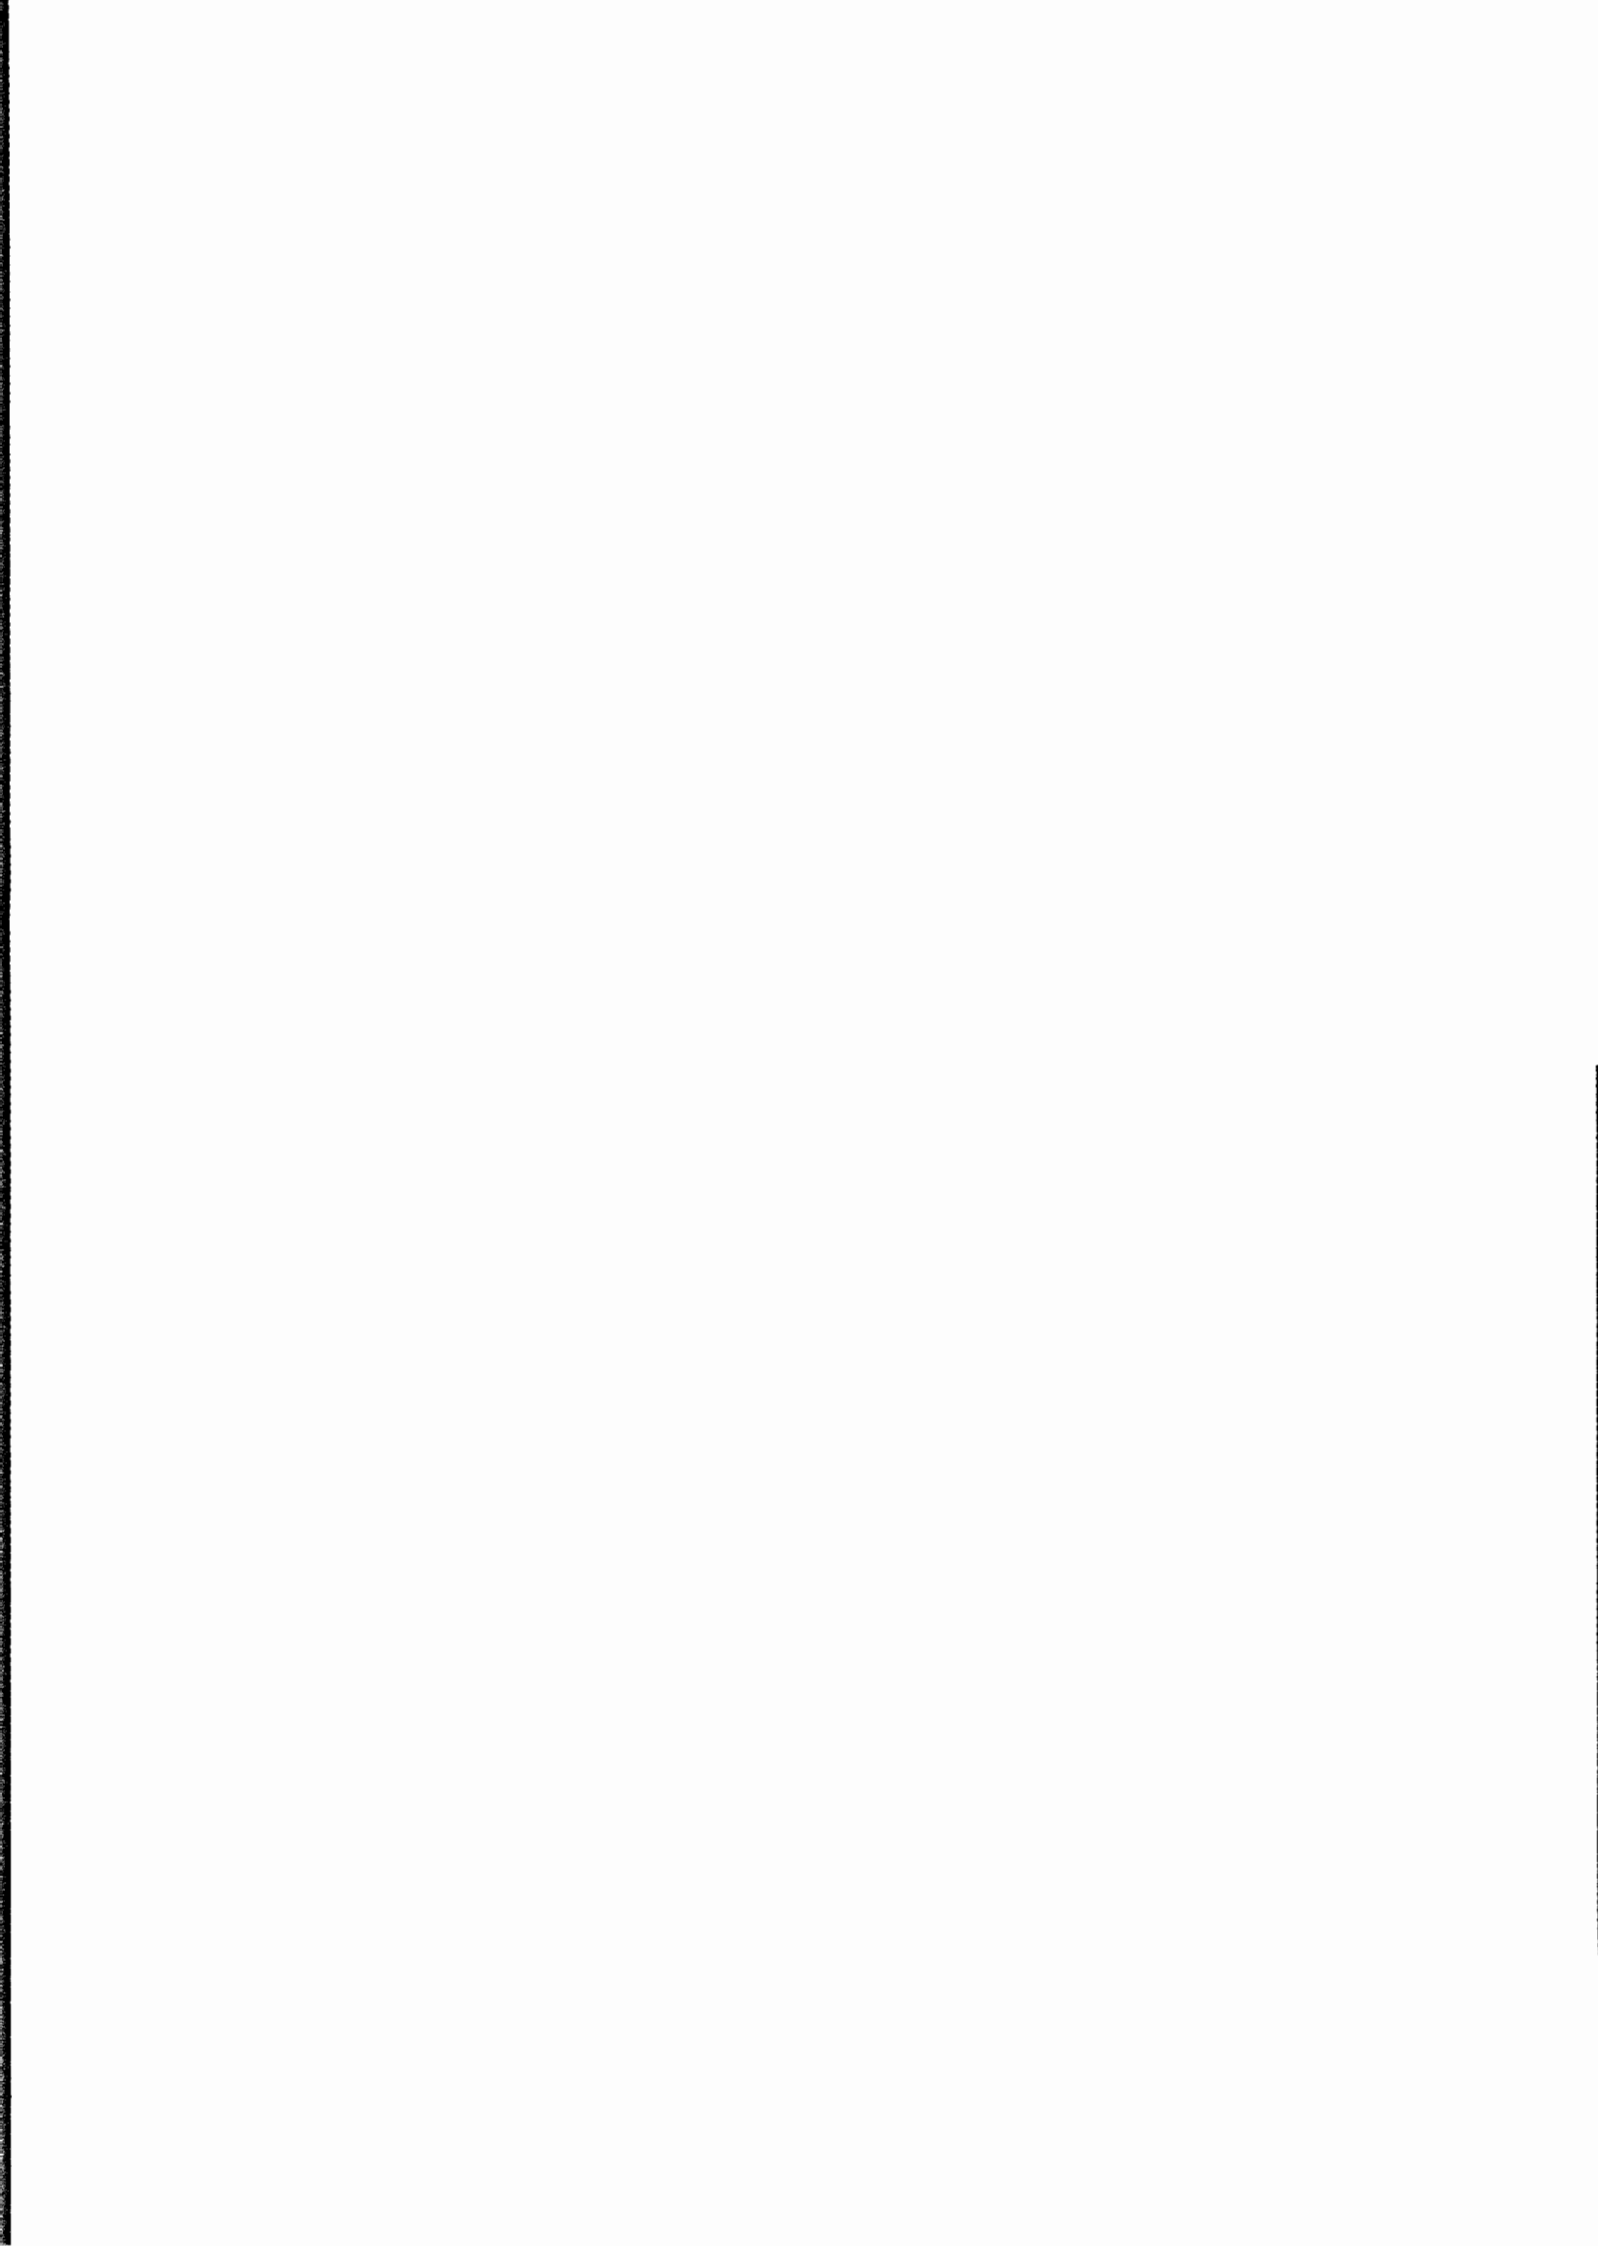


Caution
 Before starting to work on
 any part of electrical system
 disconnect battery ground strap

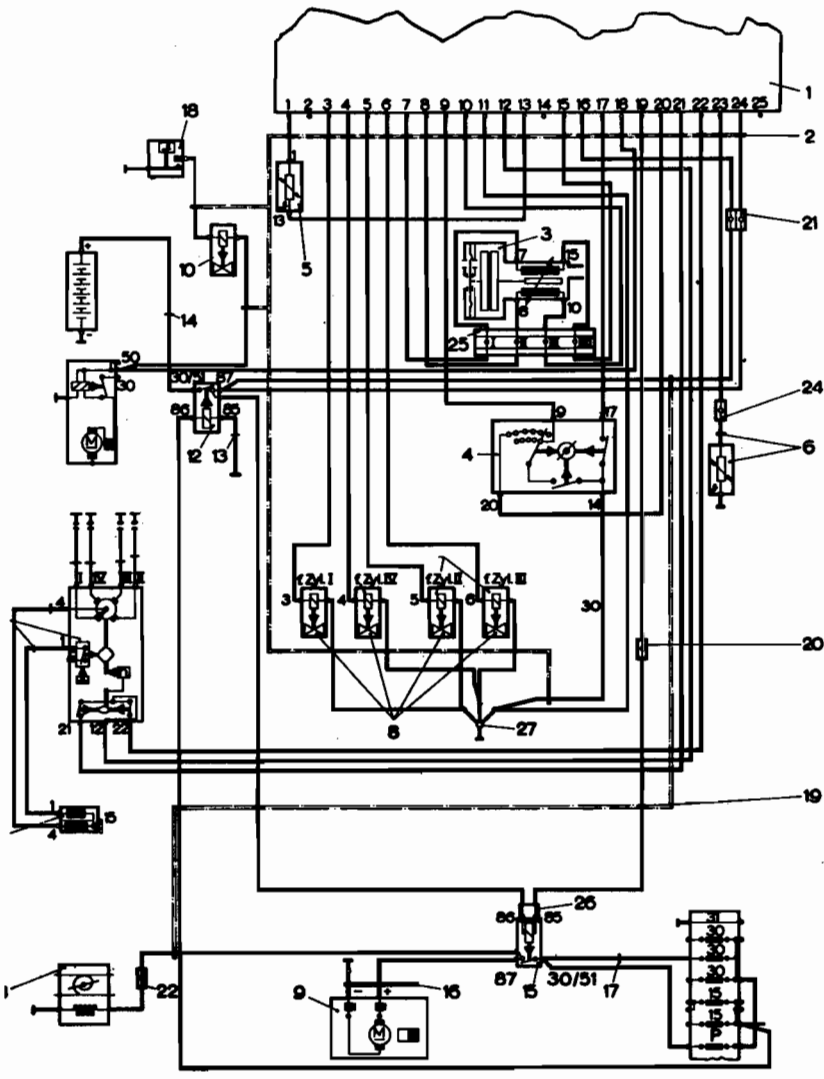



- 1 - Control unit
- 2 - Wiring harness - electronics
- 3 - Pressure sensor with full load diaphragm
- 4 - Throttle valve switch with acceleration enrichment
- 5 - Temperature sensor in intake air distributor
- 6 - Temperature sensor on cylinder head
- 7 - Ignition distributor with trigger contacts
- 8 - Injectors
- 9 - Fuel pump
- 10 - Cold starting valve
- 11 - Ignition coil
- 12 - Voltage supply relay
- 13 - Wiring for voltage supply relay
- 14 - Wiring, battery - voltage supply relay
- 15 - Fuel pump relay
- 16 - Wiring harness - fuel pump
- 17 - Wiring between fuse box and pump relay
- 18 - Thermo switch for cold starting device
- 19 - Wires of main wiring harness
- 20 -
- 22 - } Wire connector - single
- 24 - }
- 21 - Wire connector - double
- 23 - Auxiliary air regulator
- 25 - 4 point connector with intermediate cable
- 26 - Plug housing for pump relay
- 27 - Ground connection on the engine housing

Wiring
 diagram

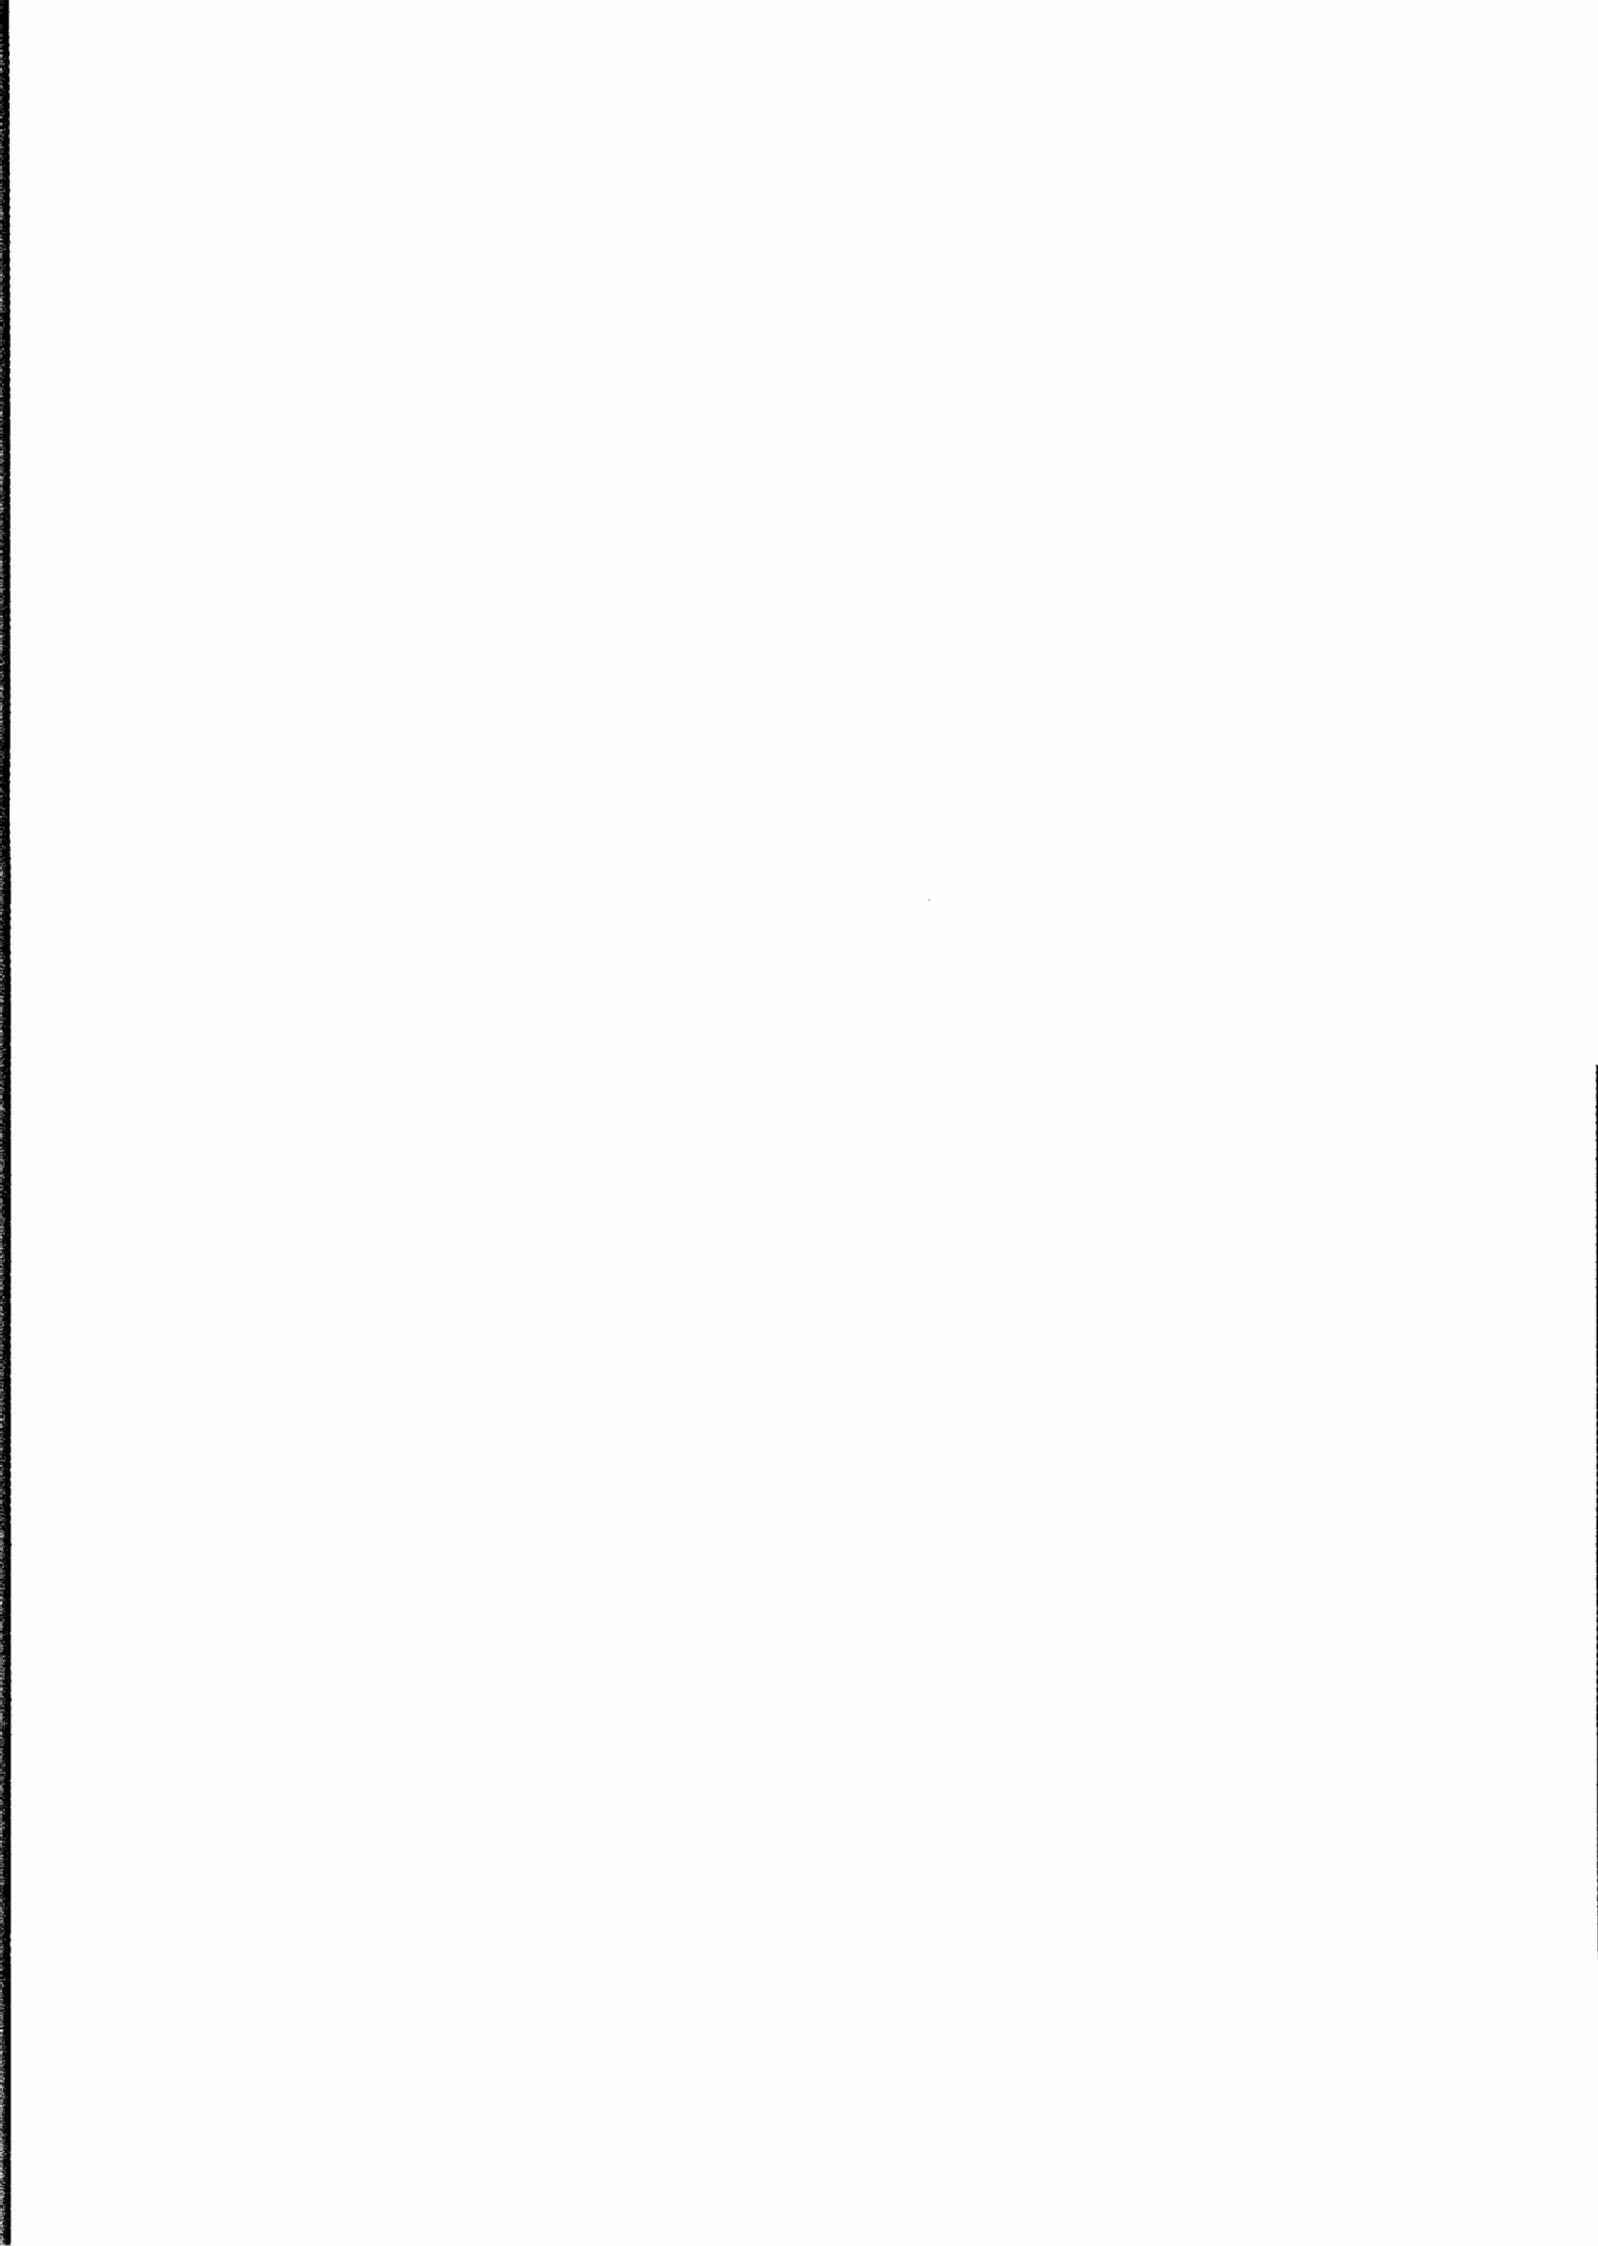


Wiring
diagram

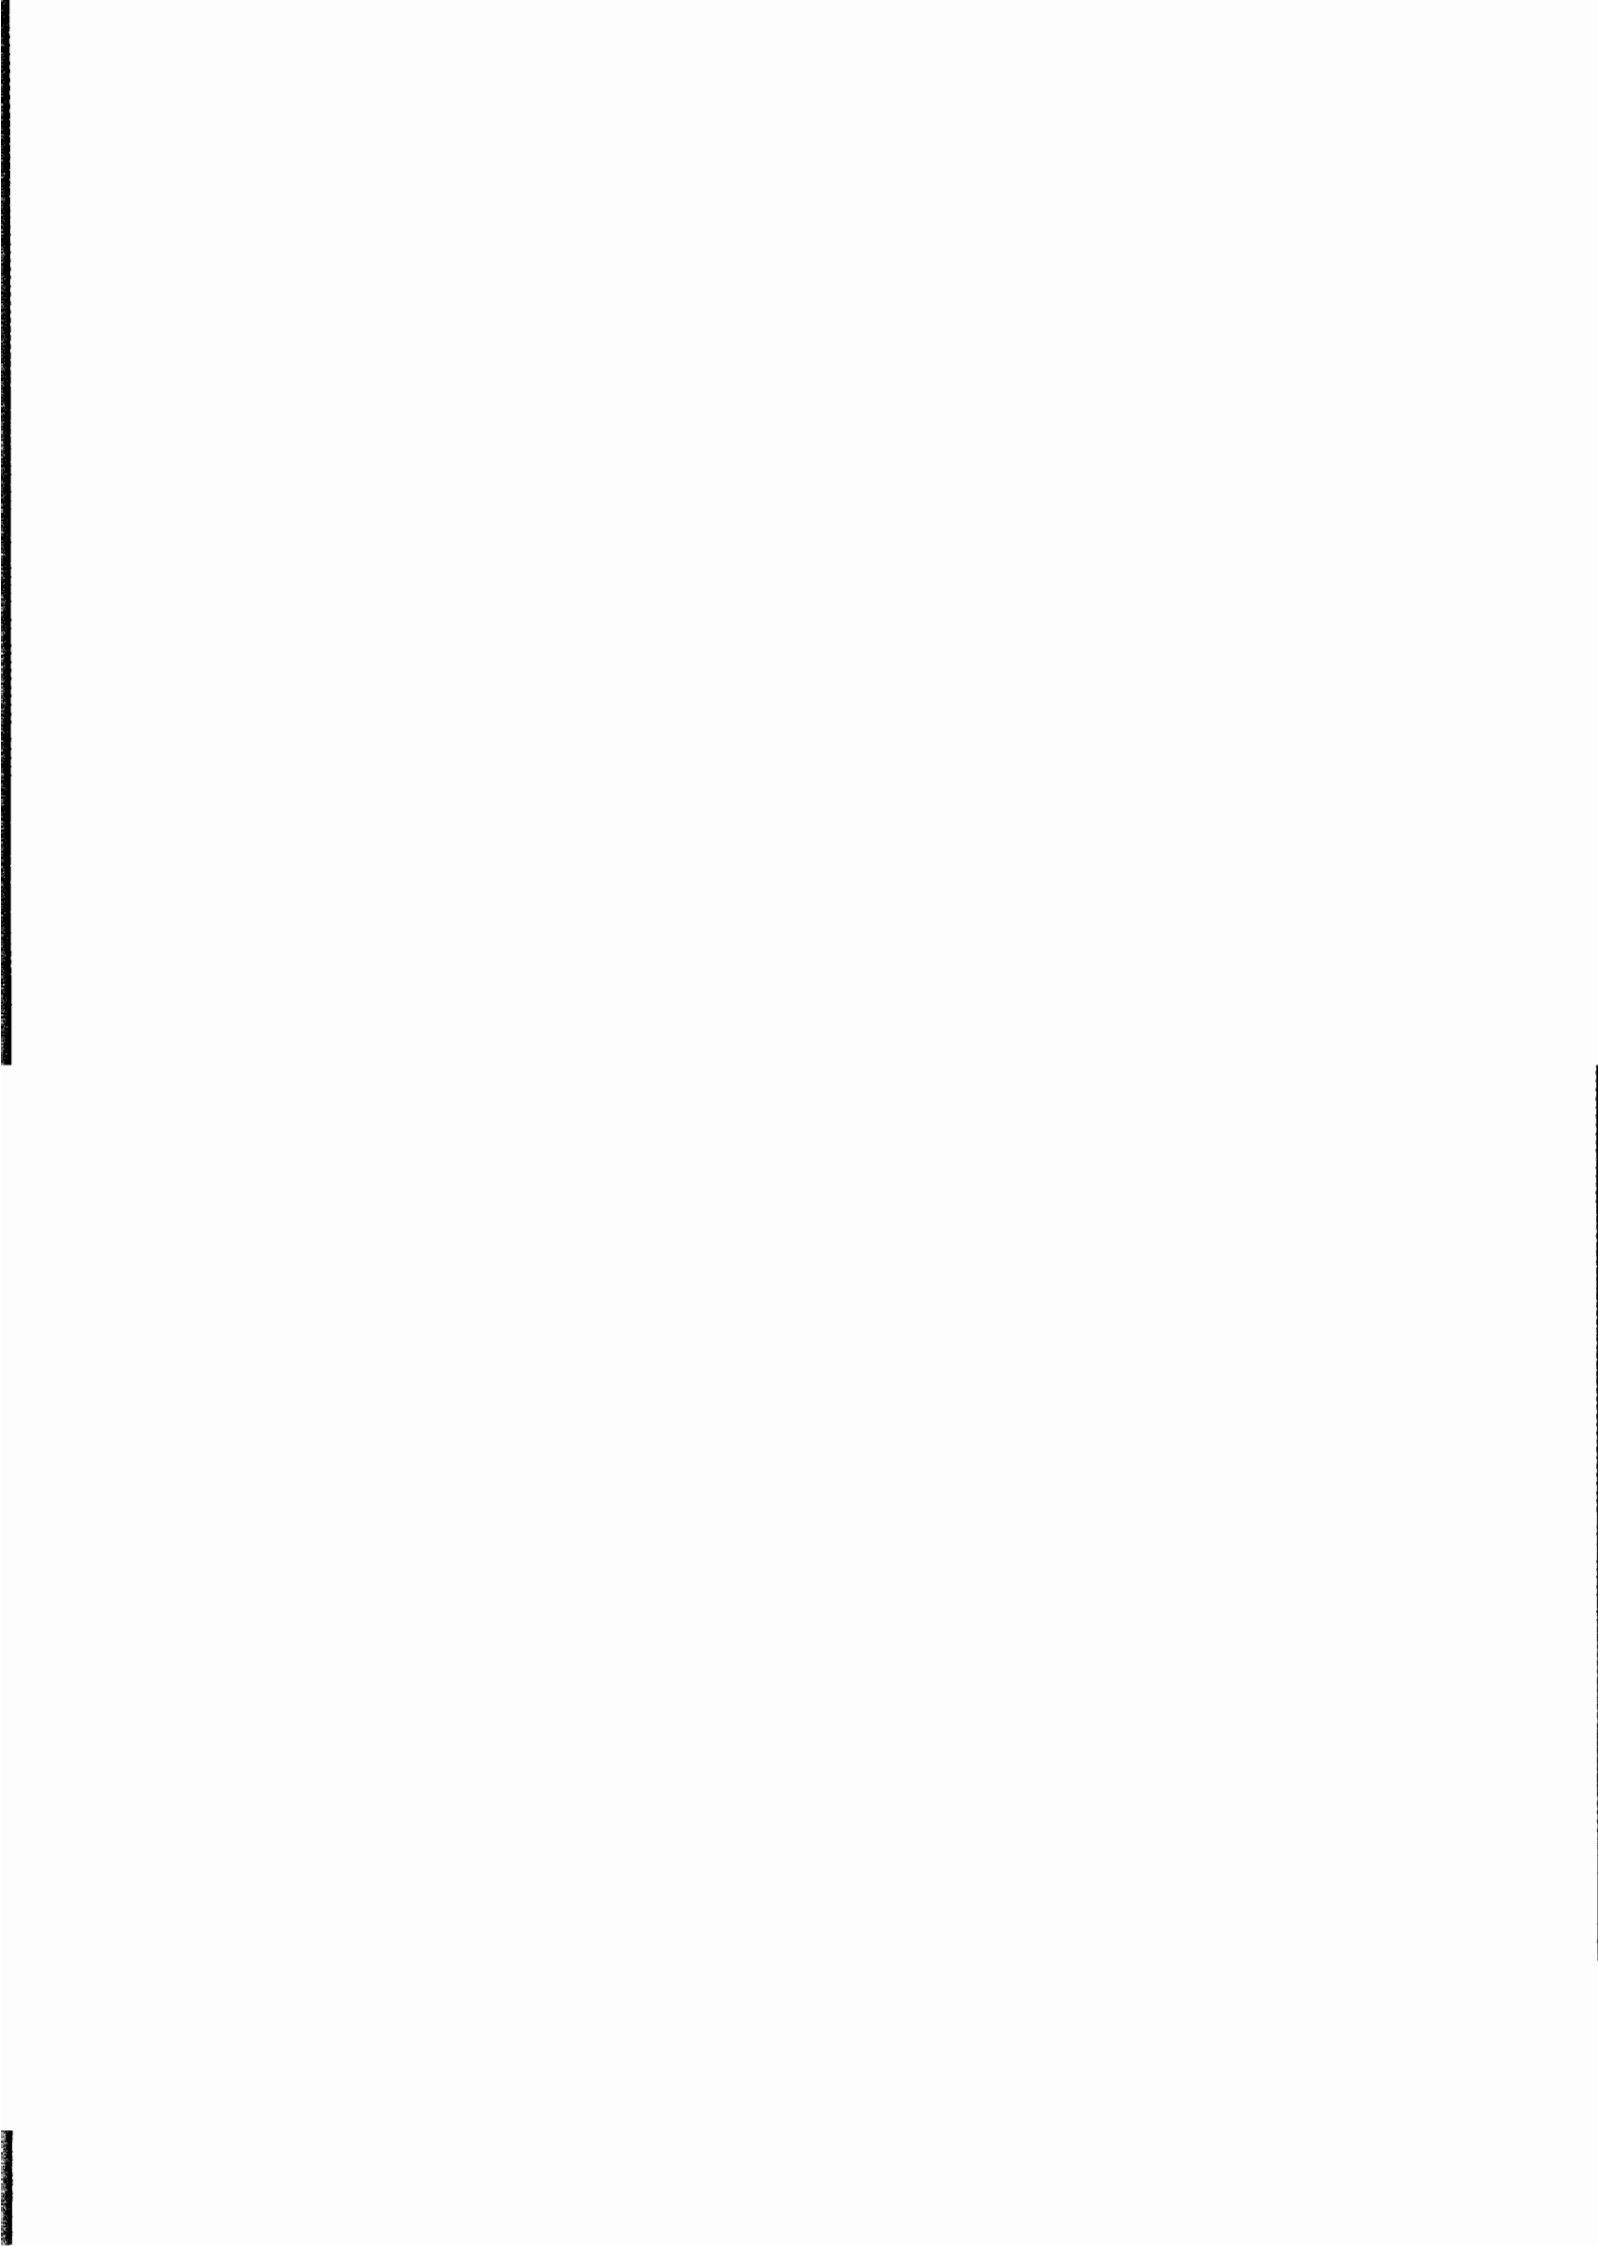

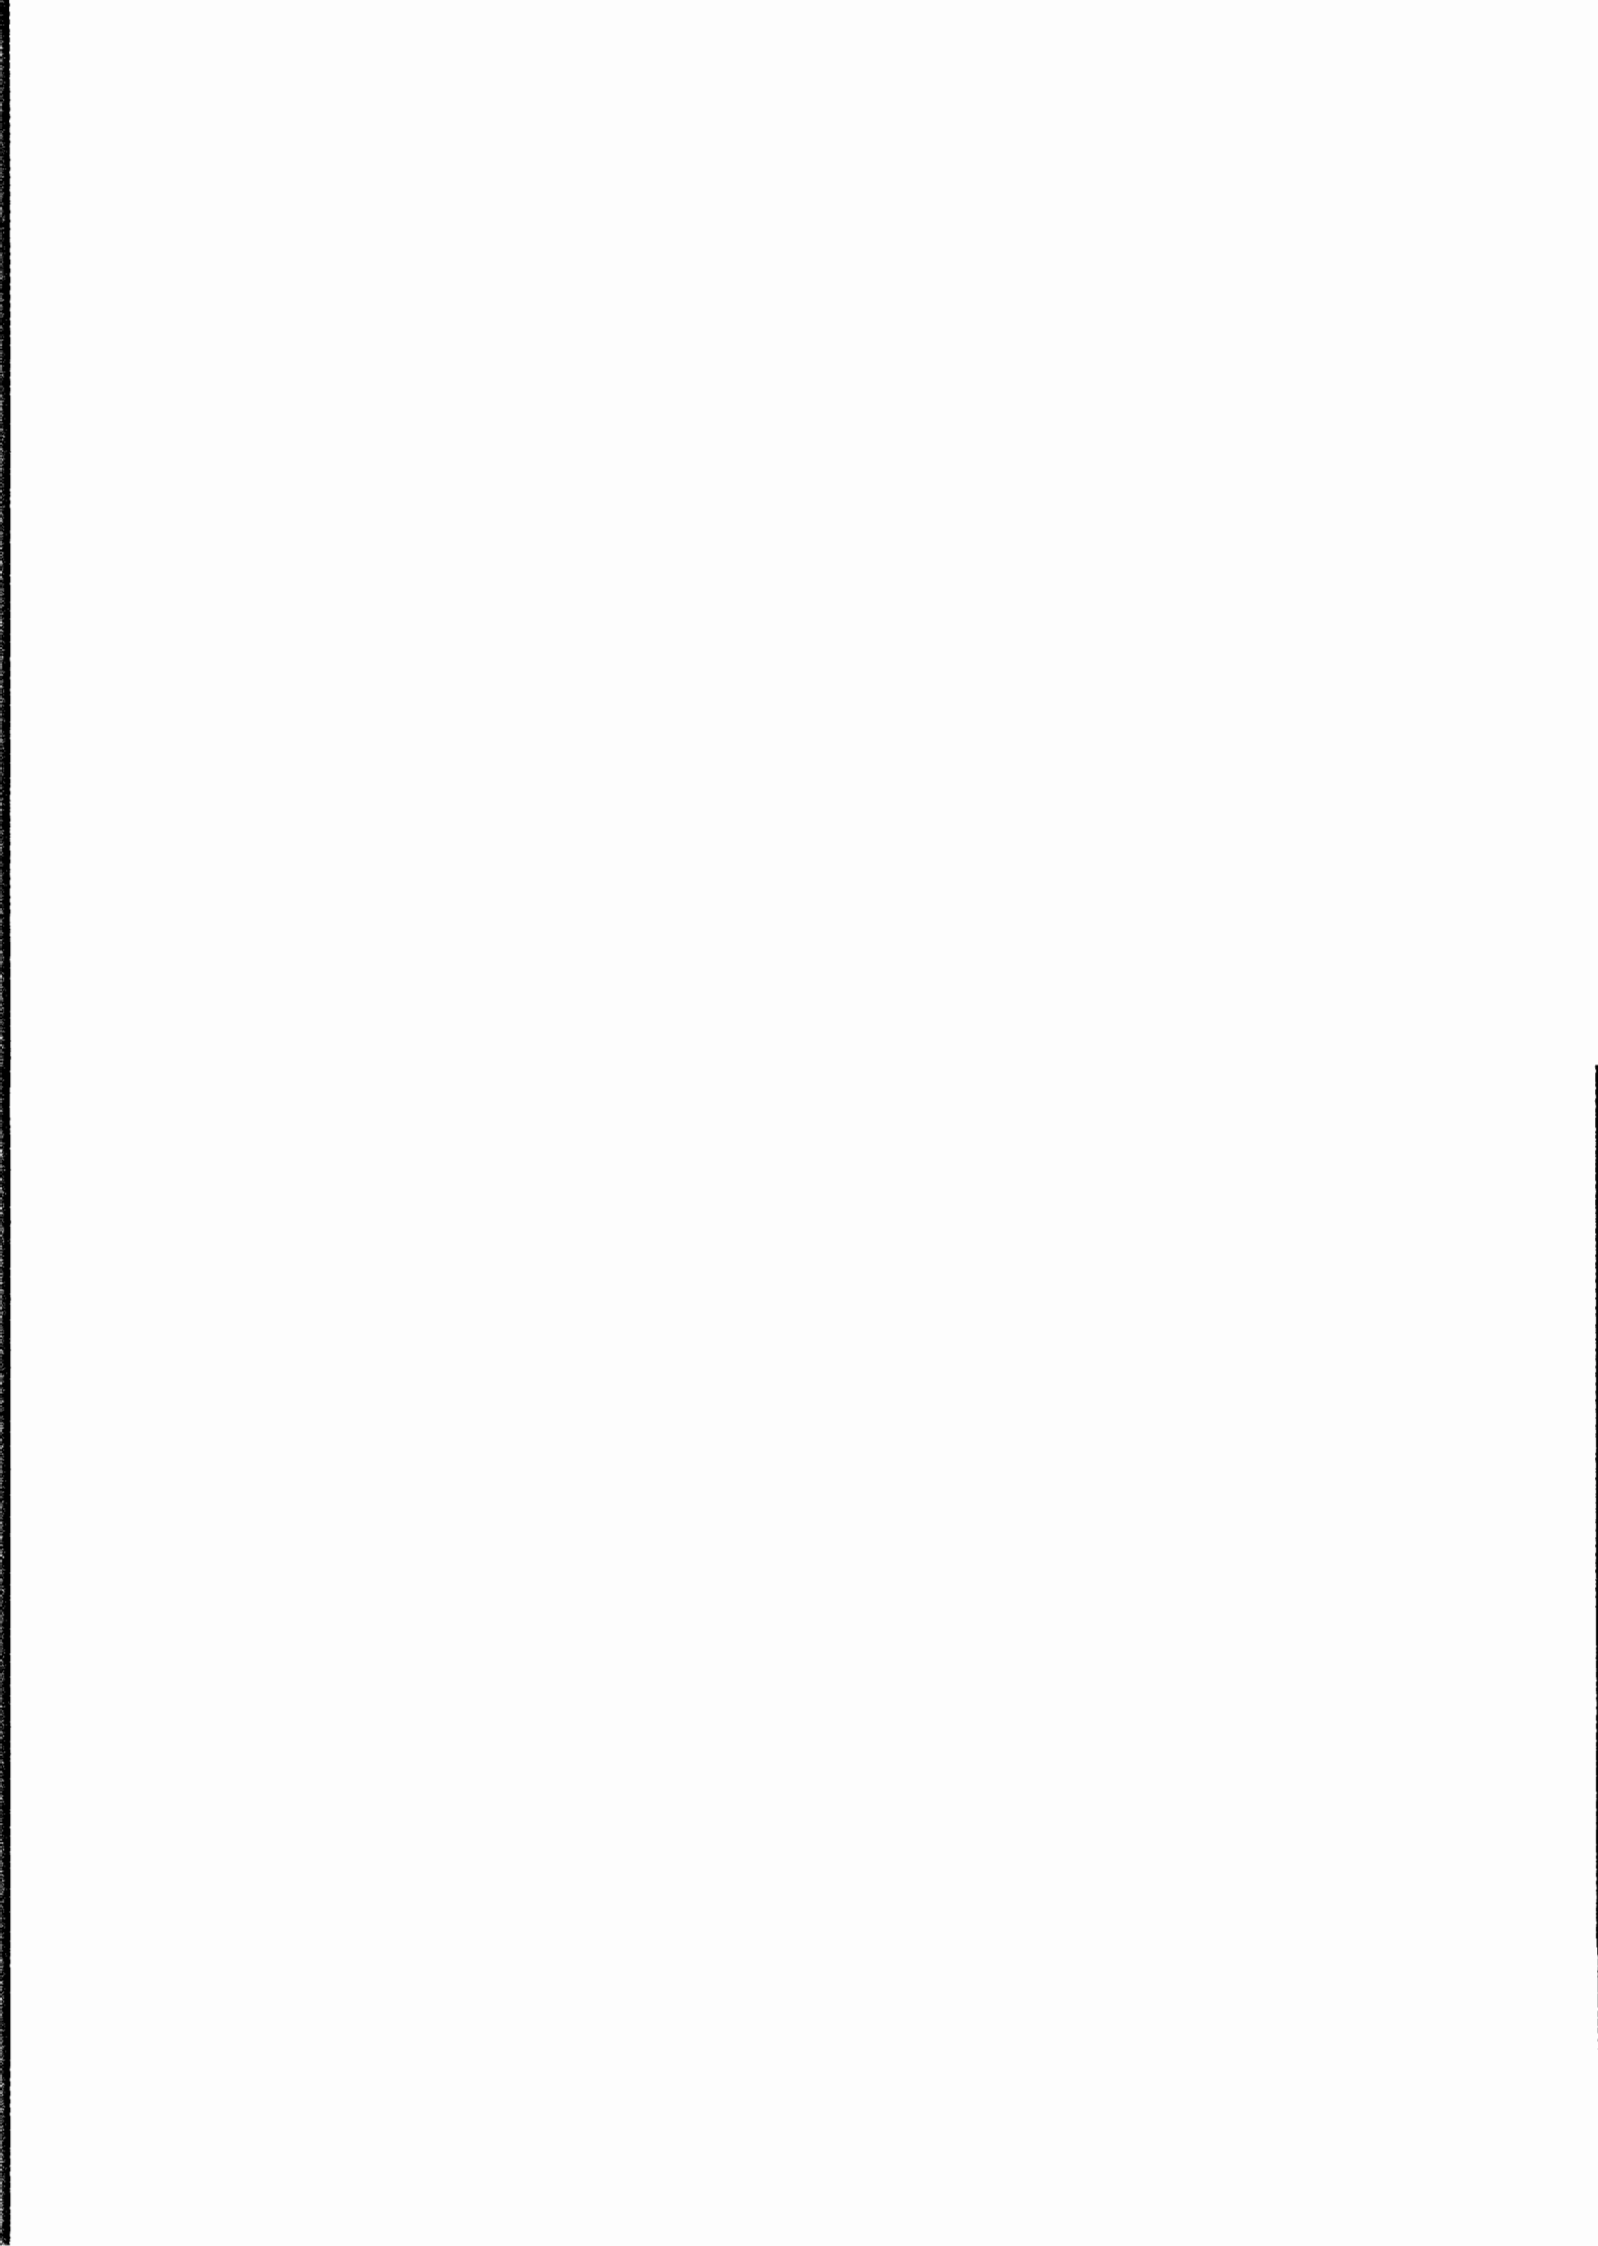


Caution
 Before starting to work on any part of electrical system disconnect battery ground strap

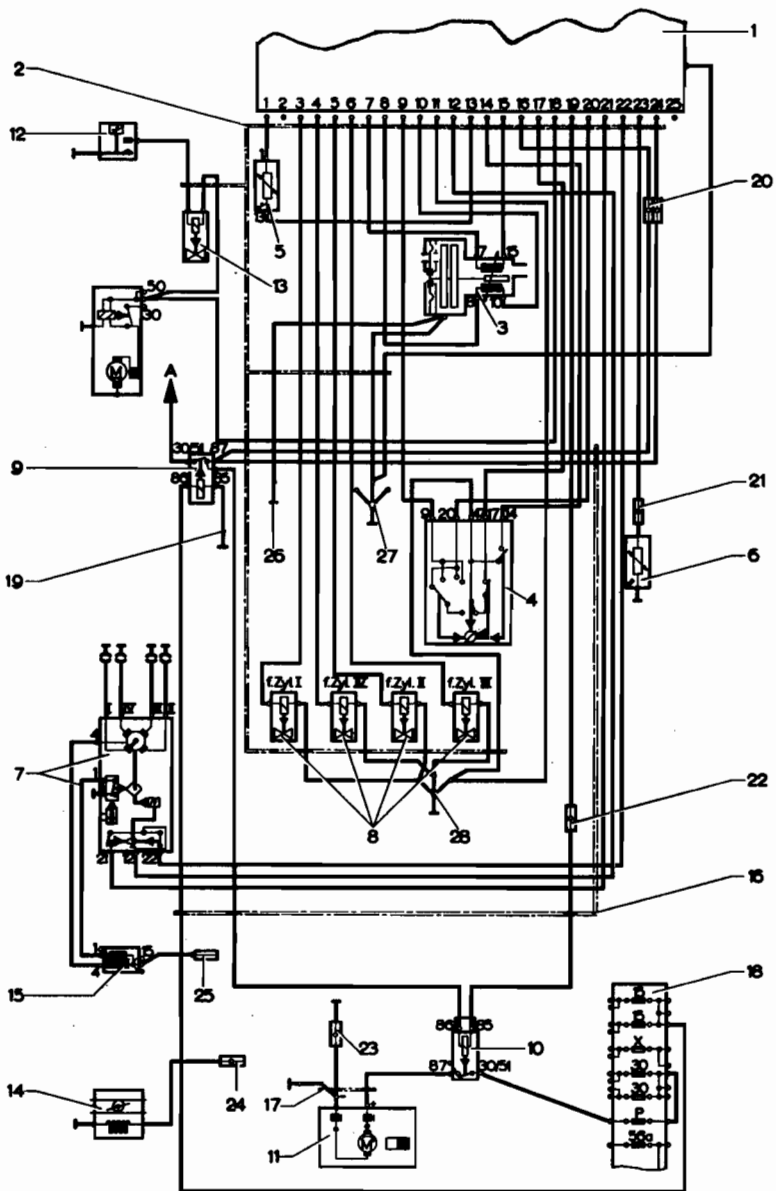



- 1 - Control unit
 - 2 - Wiring harness - electronics
 - 3 - Pressure sensor
 - 4 - Throttle valve switch
 - 5 - Temperature sensor I in intake air distributor
 - 6 - Temperature sensor II on cylinder head
 - 7 - Ignition distributor with trigger contacts
 - 8 - Injectors
 - 9 - Voltage supply relay
 - 10 - Fuel pump relay
 - 11 - Fuel pump
 - 12 - Thermo switch
 - 13 - Cold starting valve
 - 14 - Auxiliary air regulator
 - 15 - Ignition coil
 - 16 - Wiring of main harness
 - 17 - Wiring harness for fuel pump
 - 18 - Fuse box
 - 19 - Wiring for voltage supply relay
 - 20 - Wire connector, double
 - 21 - Wire connector, single
 - 22 - Wire connector, single
 - 23 - Wire connector, single
 - 24 - Wire connector, single
 - 25 - Wire connector, single
 - 26 - Ground cable pressure sensor
 - 27 - Ground connection
 - 28 - Ground connection on engine housing
- A - To battery, positive (+) terminal

Wiring diagram

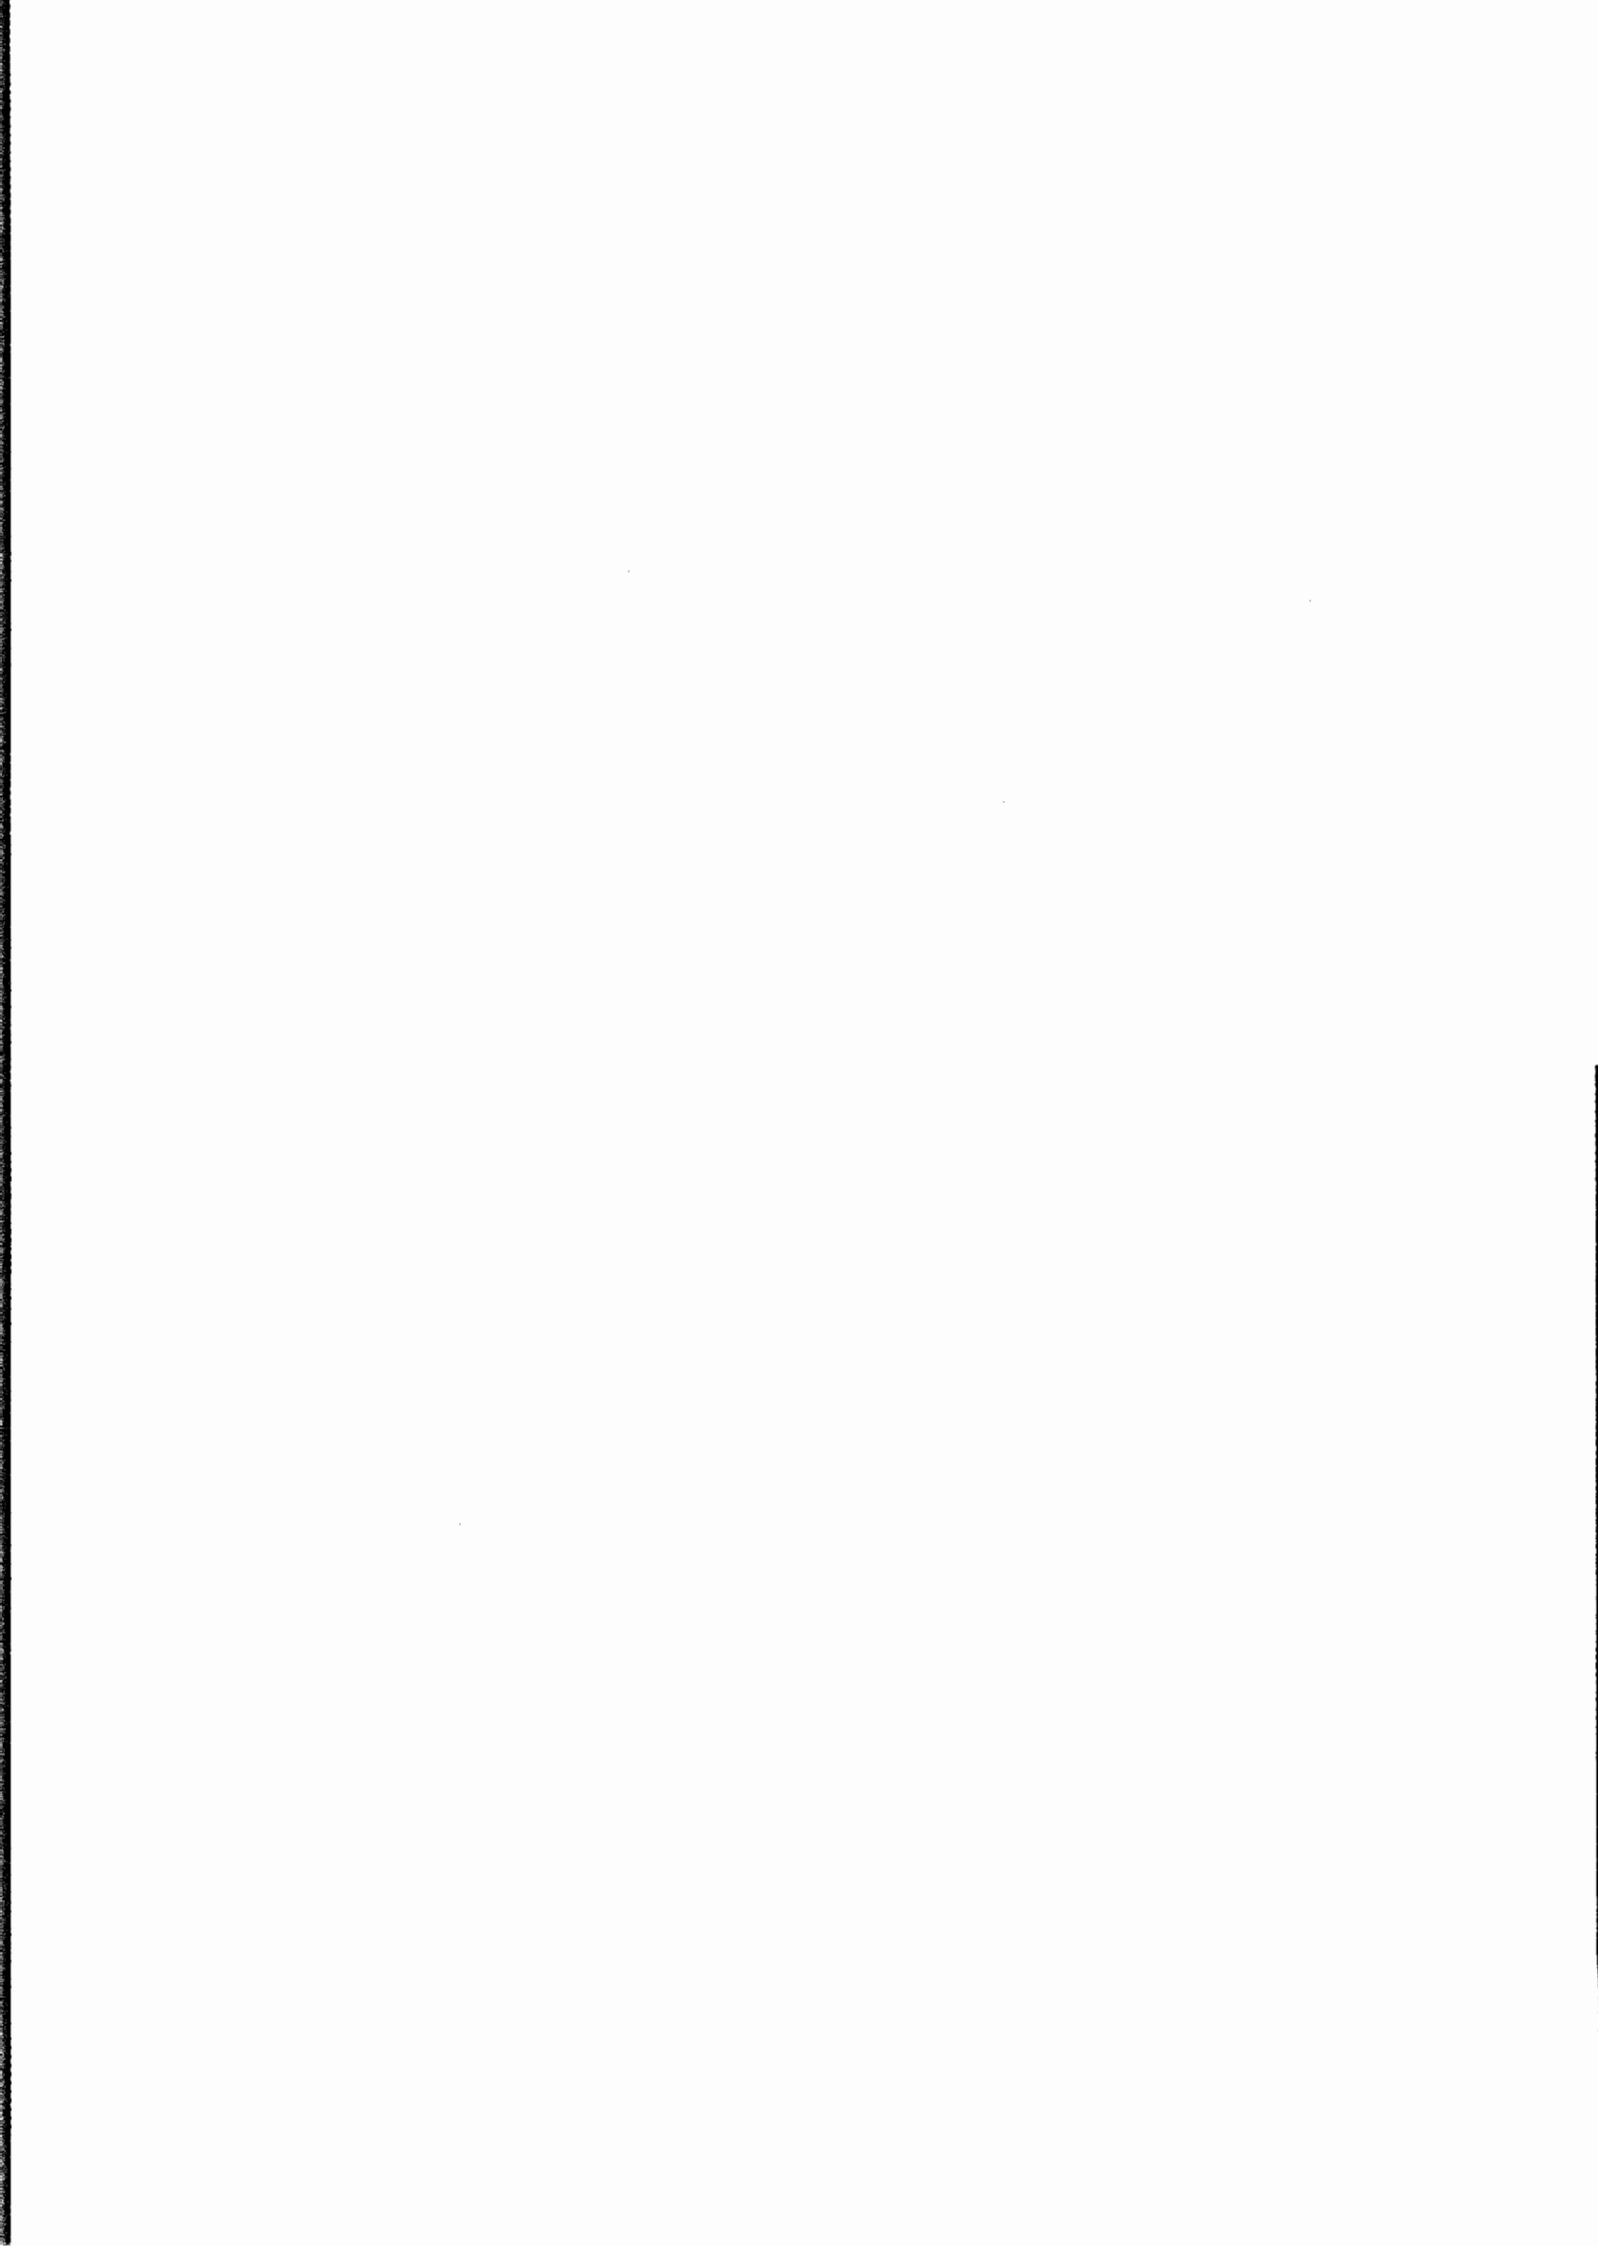


Wiring
diagram

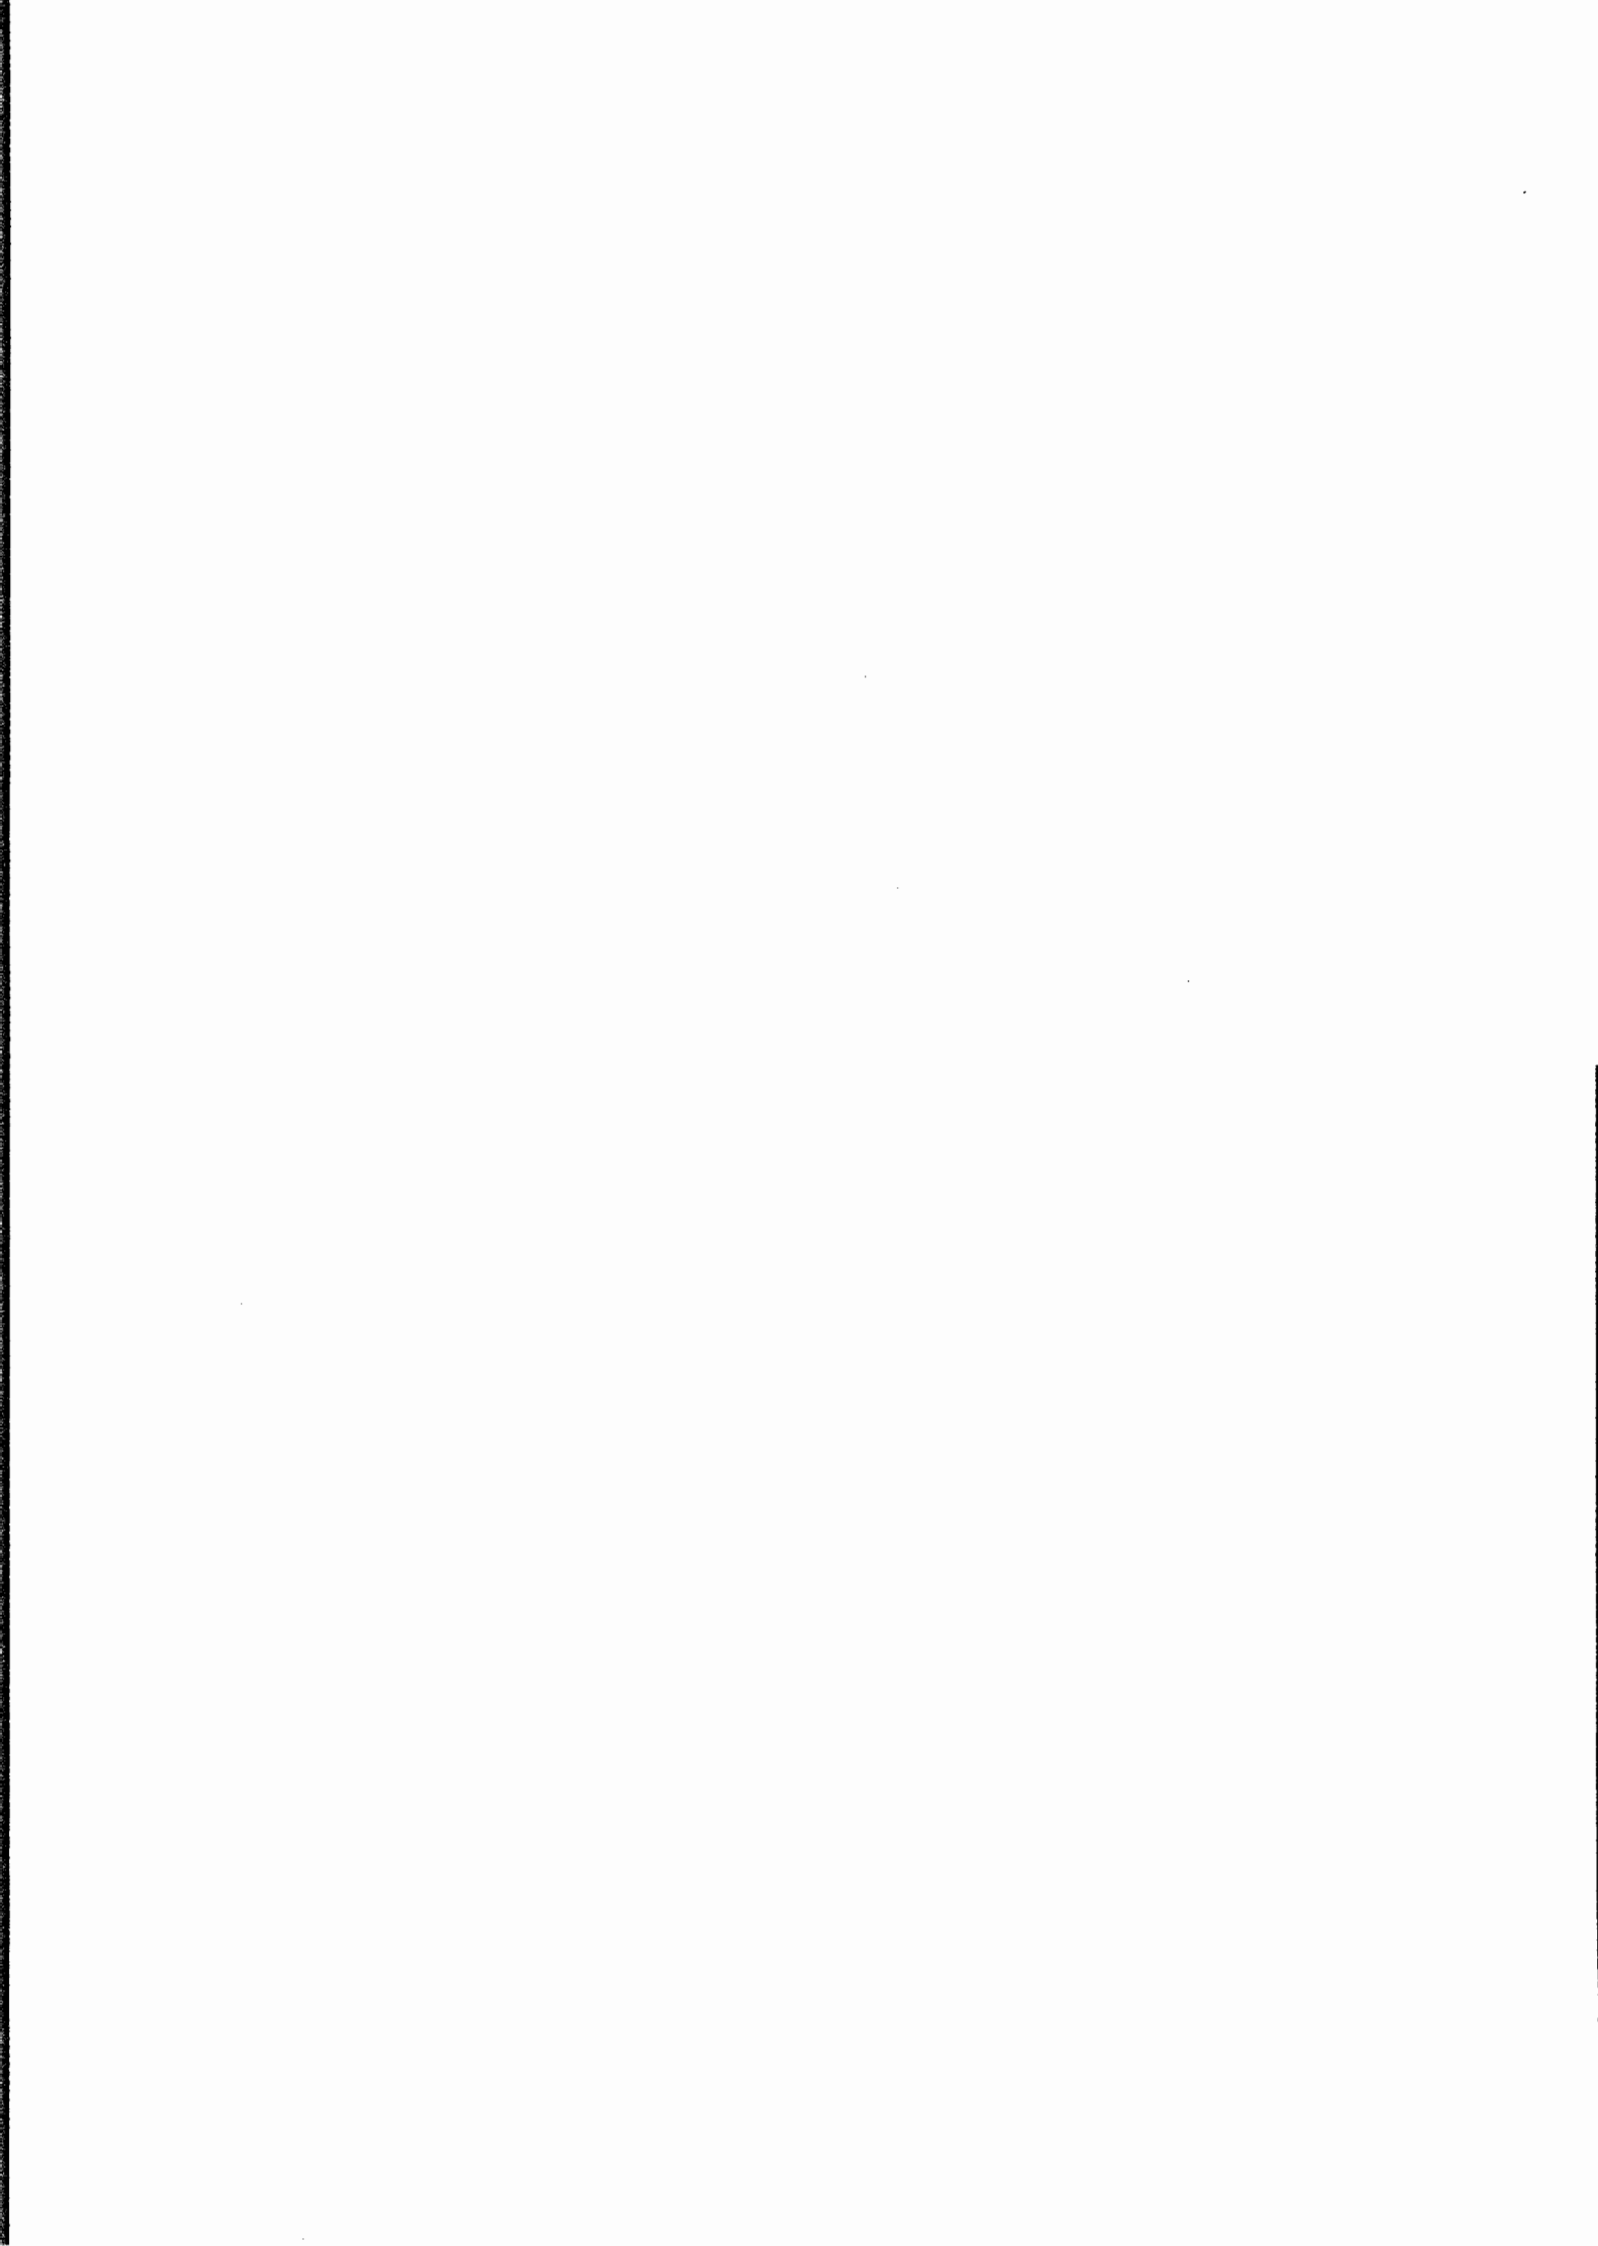

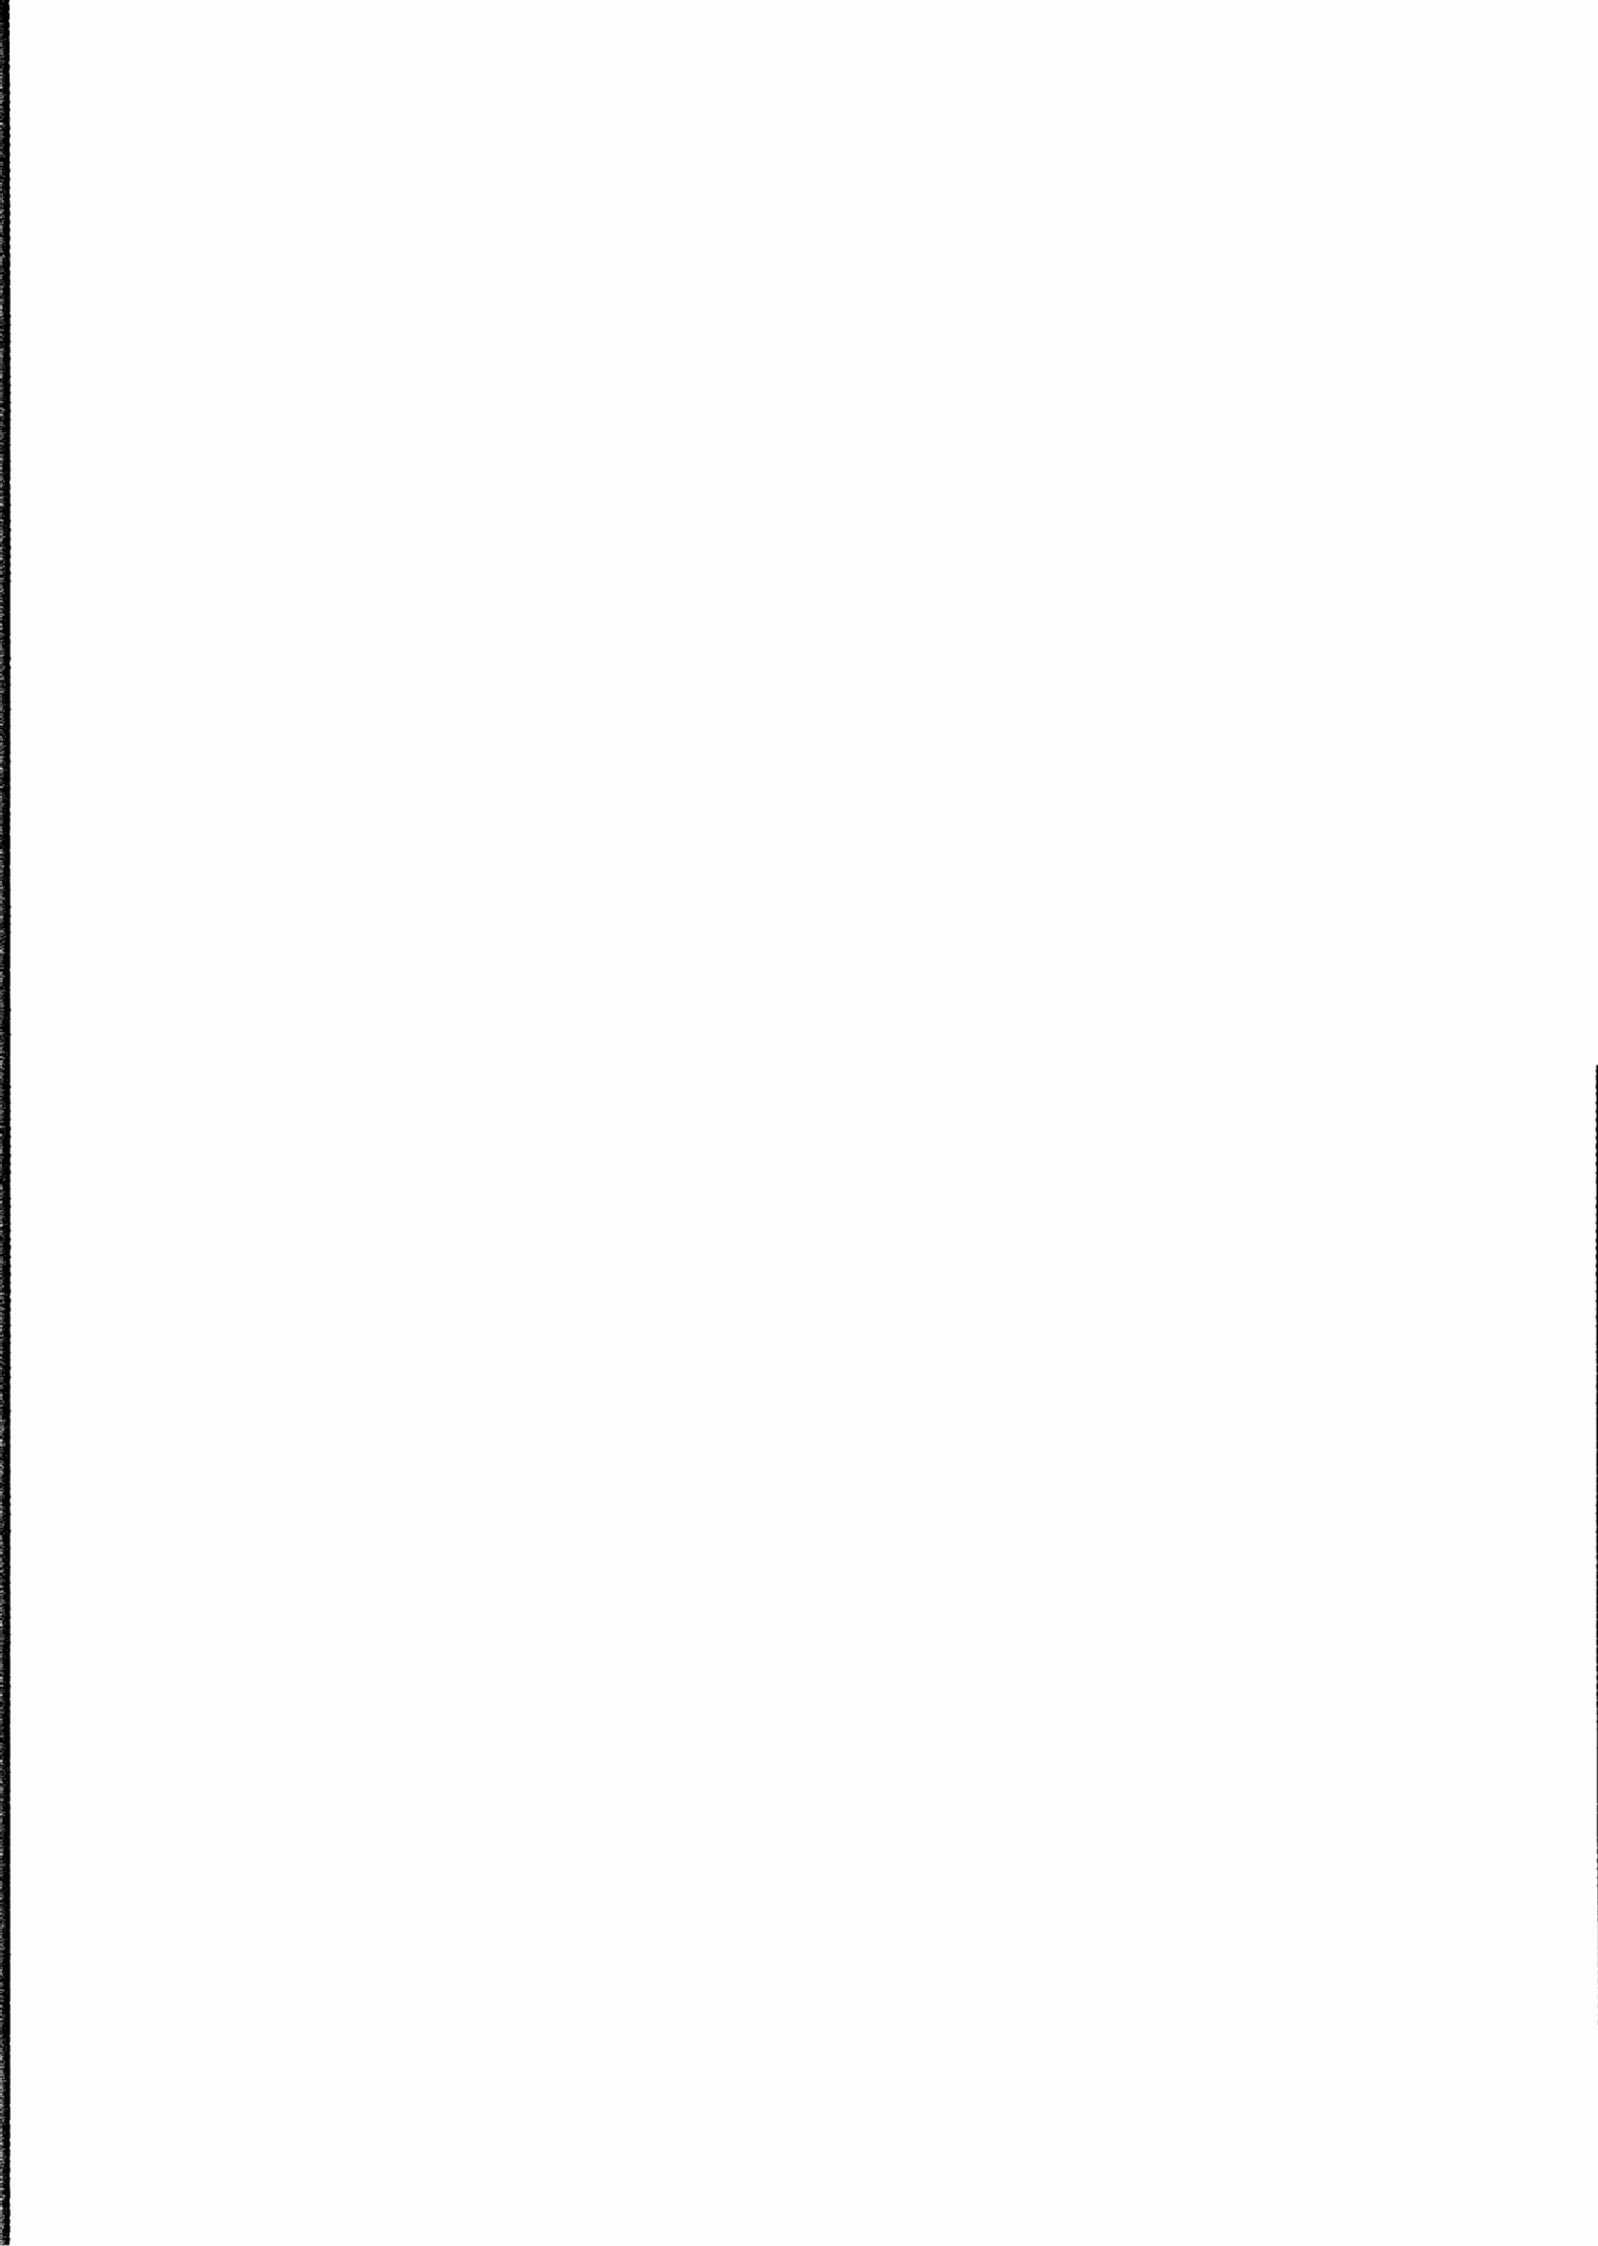

Caution
 Before starting to work on any part of electrical system disconnect battery ground strap

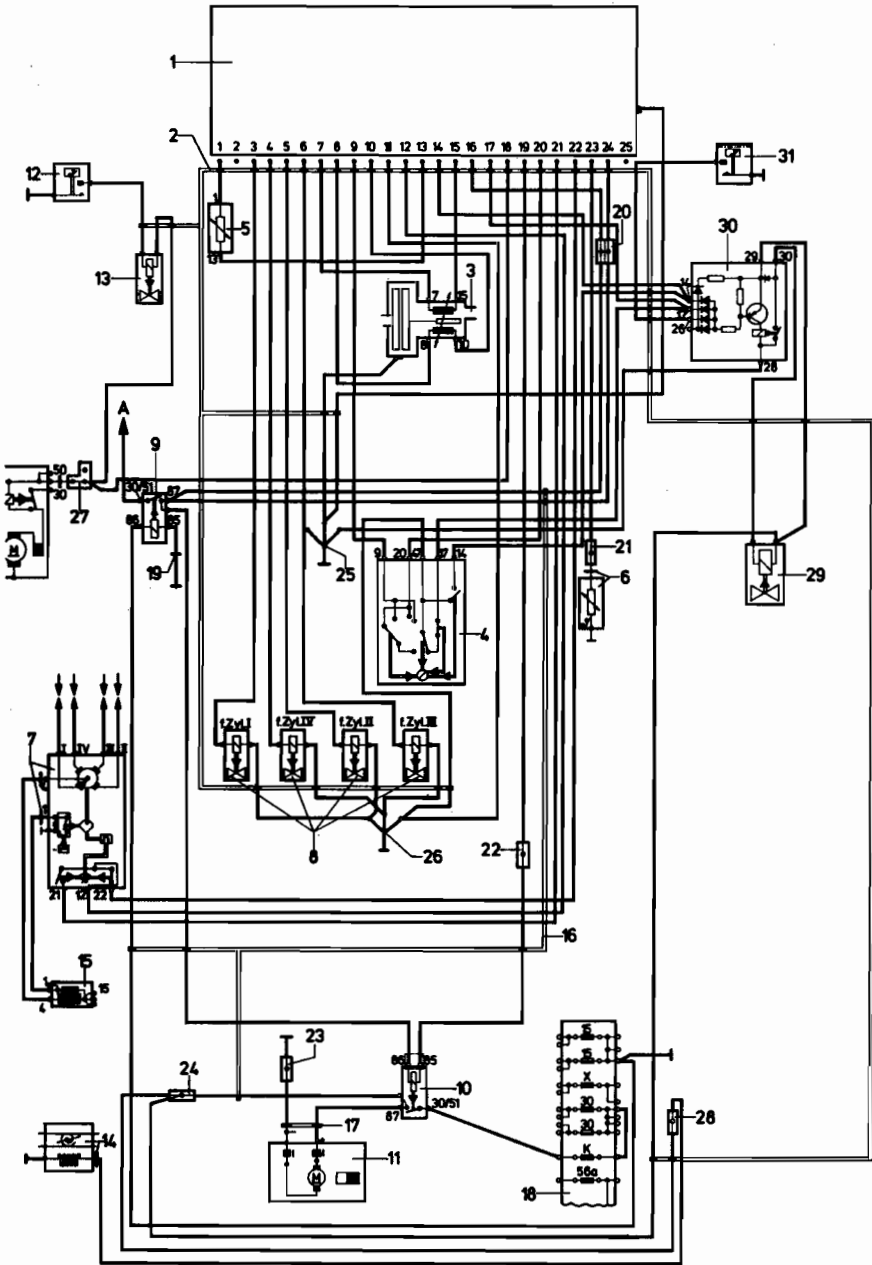

- 1 - Control unit
- 2 - Wiring harness - electronics
- 3 - Pressure sensor
- 4 - Throttle valve switch
- 5 - Temperature sensor I in intake air distributor
- 6 - Temperature sensor II on cylinder head
- 7 - Ignition distributor with trigger contacts
- 8 - Injectors
- 9 - Voltage supply relay
- 10 - Fuel pump relay
- 11 - Fuel pump
- 12 - Thermo switch
- 13 - Cold starting valve
- 14 - Auxiliary air regulator
- 15 - Ignition coil
- 16 - Wiring of main harness
- 17 - Wiring harness - fuel pump
- 18 - Fuse box
- 19 - Wiring for voltage supply relay
- 20 - Wire connector - double
- 21 -
- 22 - } Wire connector - single
- 23 -
- 24 -
- 25 - Ground connection
- 26 - Ground connection, engine housing
- 27 - Wire connector - multiple
- 28 - Wire connector - single
- 29 - Valve for exhaust gas recirculation
- 30 - Relay for exhaust gas recirculation
- 31 - Thermo switch


A - To battery positive (+) terminal

Wiring diagram




Wiring
diagram

12

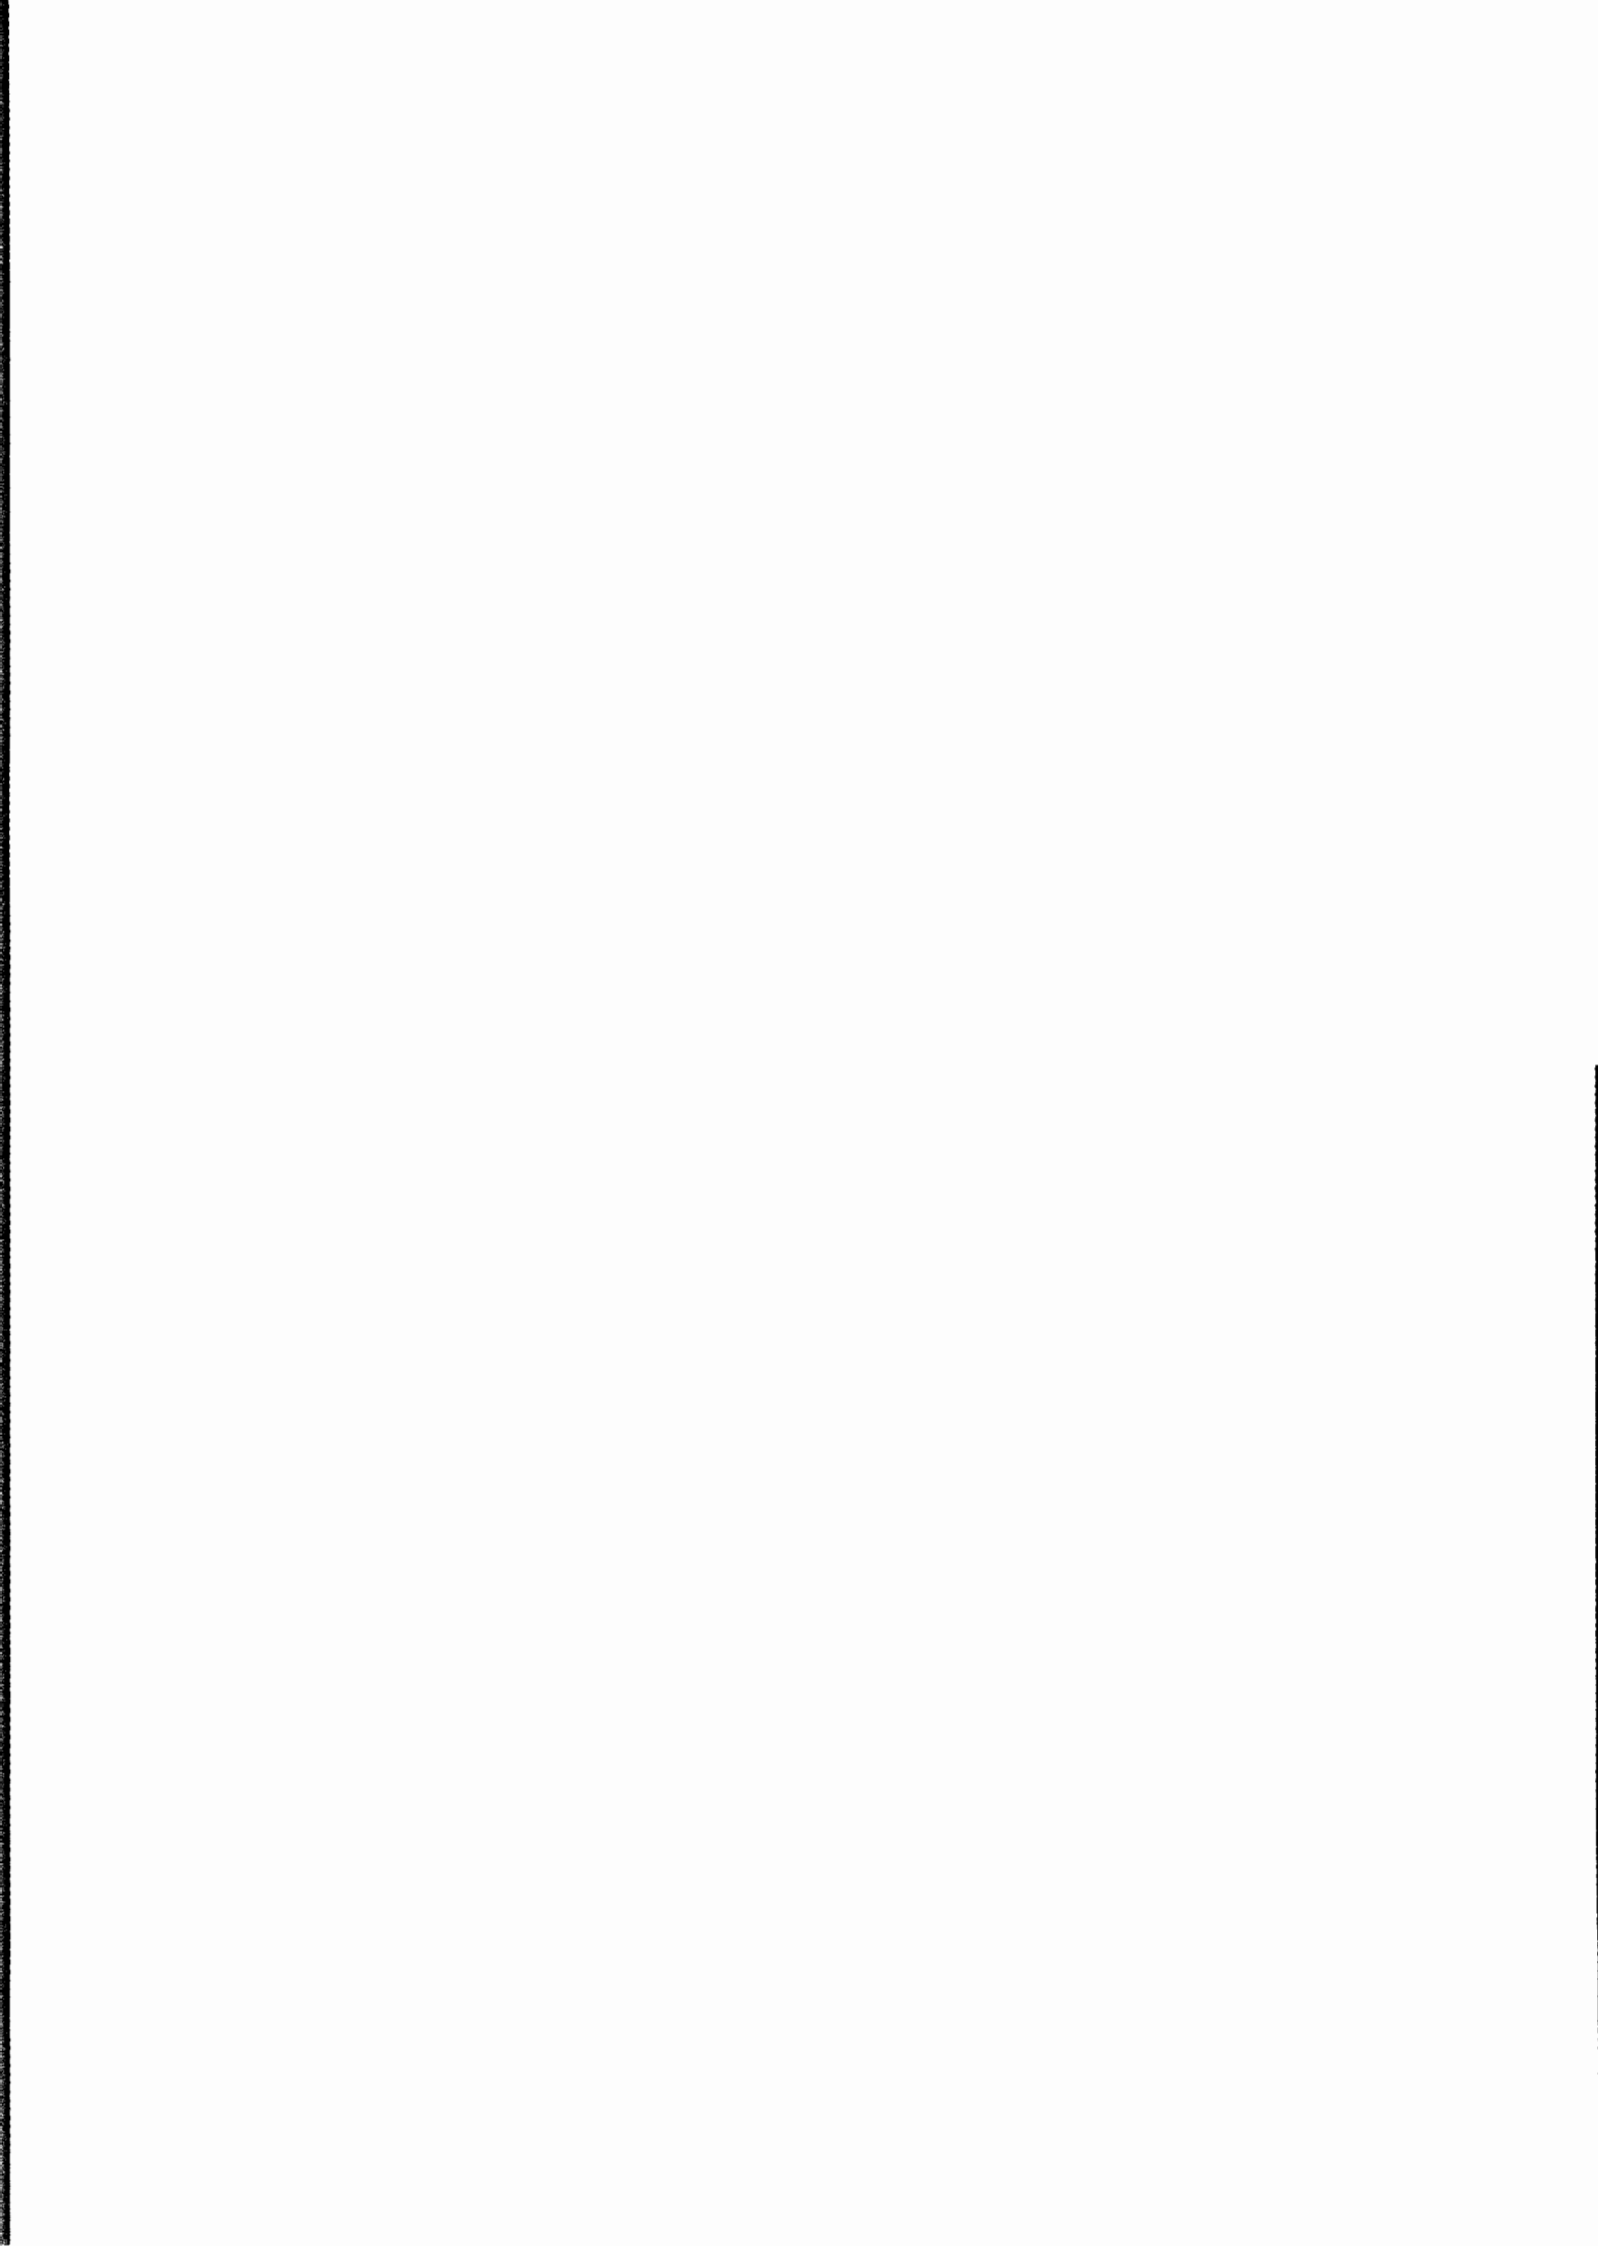



Caution
 Before starting to work on any part of electrical system disconnect battery ground strap

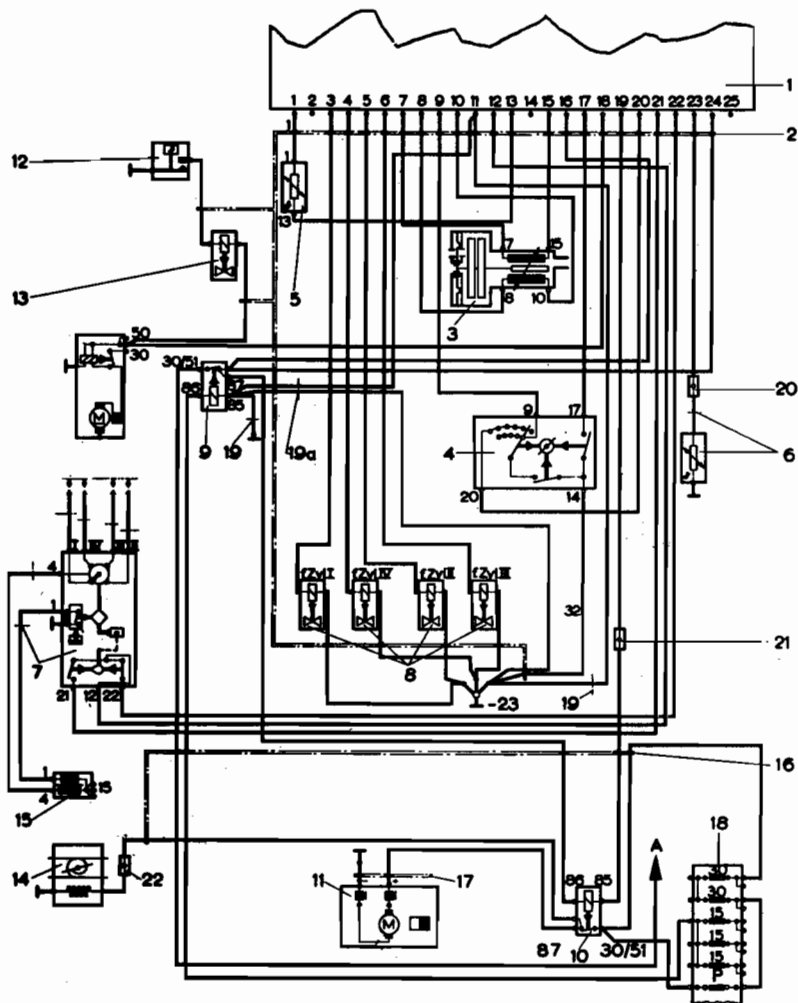

- 1 - Control unit
 - 2 - Wiring harness - electronics
 - 3 - Pressure sensor
 - 4 - Throttle valve switch with acceleration enrichment
 - 5 - Temperature sensor I on intake air distributor
 - 6 - Temperature sensor II on cylinder head
 - 7 - Ignition distributor with impulse trigger contacts
 - 8 - Injectors
 - 9 - Voltage supply relay
 - 10 - Fuel pump relay
 - 11 - Fuel pump
 - 12 - Thermo switch for cold starting device
 - 13 - Cold starting valve (on intake air distributor)
 - 14 - Auxiliary air valve
 - 15 - Ignition coil
 - 16 - Wiring of main harness
 - 17 - Wiring harness - fuel pump
 - 18 - Fuse box
 - 19 - Ground connection, Sedan
 - 19a - Ground connection, Wagon
 - 20 -
 - 21 - } Wire connector - single
 - 22 -
 - 23 - Ground connection on the engine housing
- A - to battery positive (+) terminal

Wiring diagram




Wiring
diagram





Type 4 from August 1971
 (see additional diagram on next page)

Caution
 Before starting to work on
 any part of electrical system
 disconnect battery ground strap

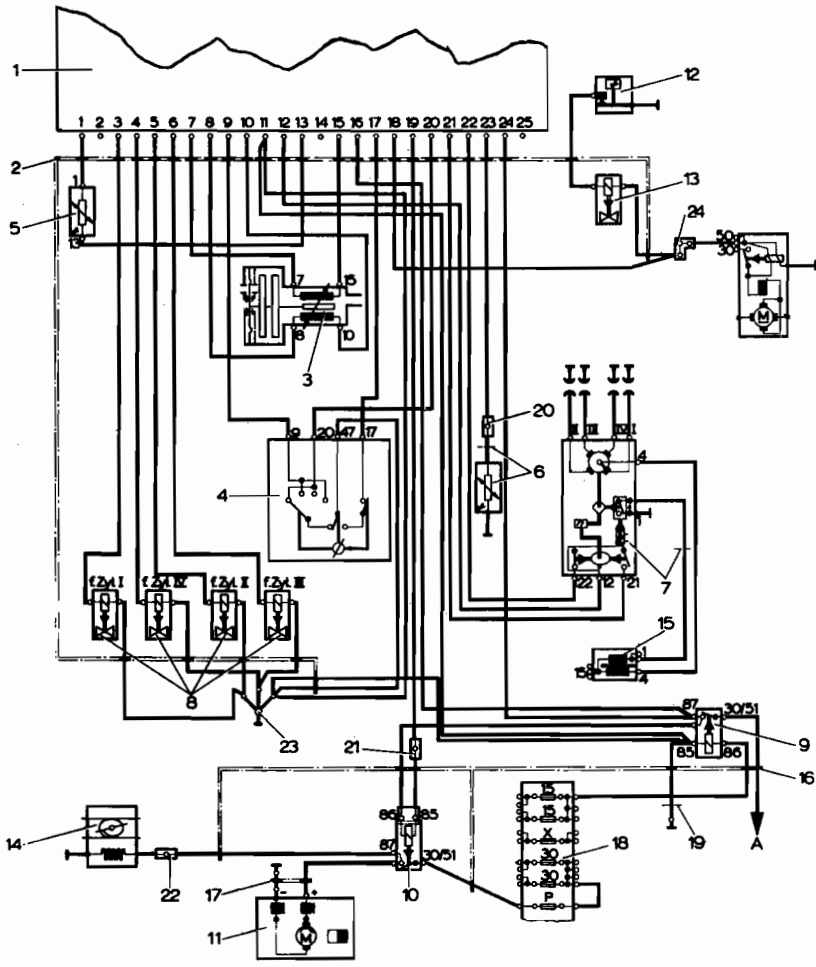



- 1 - Control unit
- 2 - Wiring harness - electronics
- 3 - Pressure sensor
- 4 - Throttle valve switch
- 5 - Temperature sensor I in intake air distributor
- 6 - Temperature sensor II on cylinder head
- 7 - Ignition distributor with trigger contacts
- 8 - Injectors
- 9 - Voltage supply relay
- 10 - Fuel pump relay
- 11 - Fuel pump
- 12 - Thermo switch
- 13 - Cold starting valve
- 14 - Auxiliary air regulator
- 15 - Ignition coil
- 16 - Wires of the main wiring harness
- 17 - Wiring harness - fuel pump
- 18 - Fuse box
- 19 - Wiring harness - voltage supply relay
- 20 -
- 21 - } Wire connector - single
- 22 - }
- 23 - Ground connection
- 24 - Wire distributor
- A - to battery positive (+) terminal

Wiring
 diagram




**Wiring
diagram**

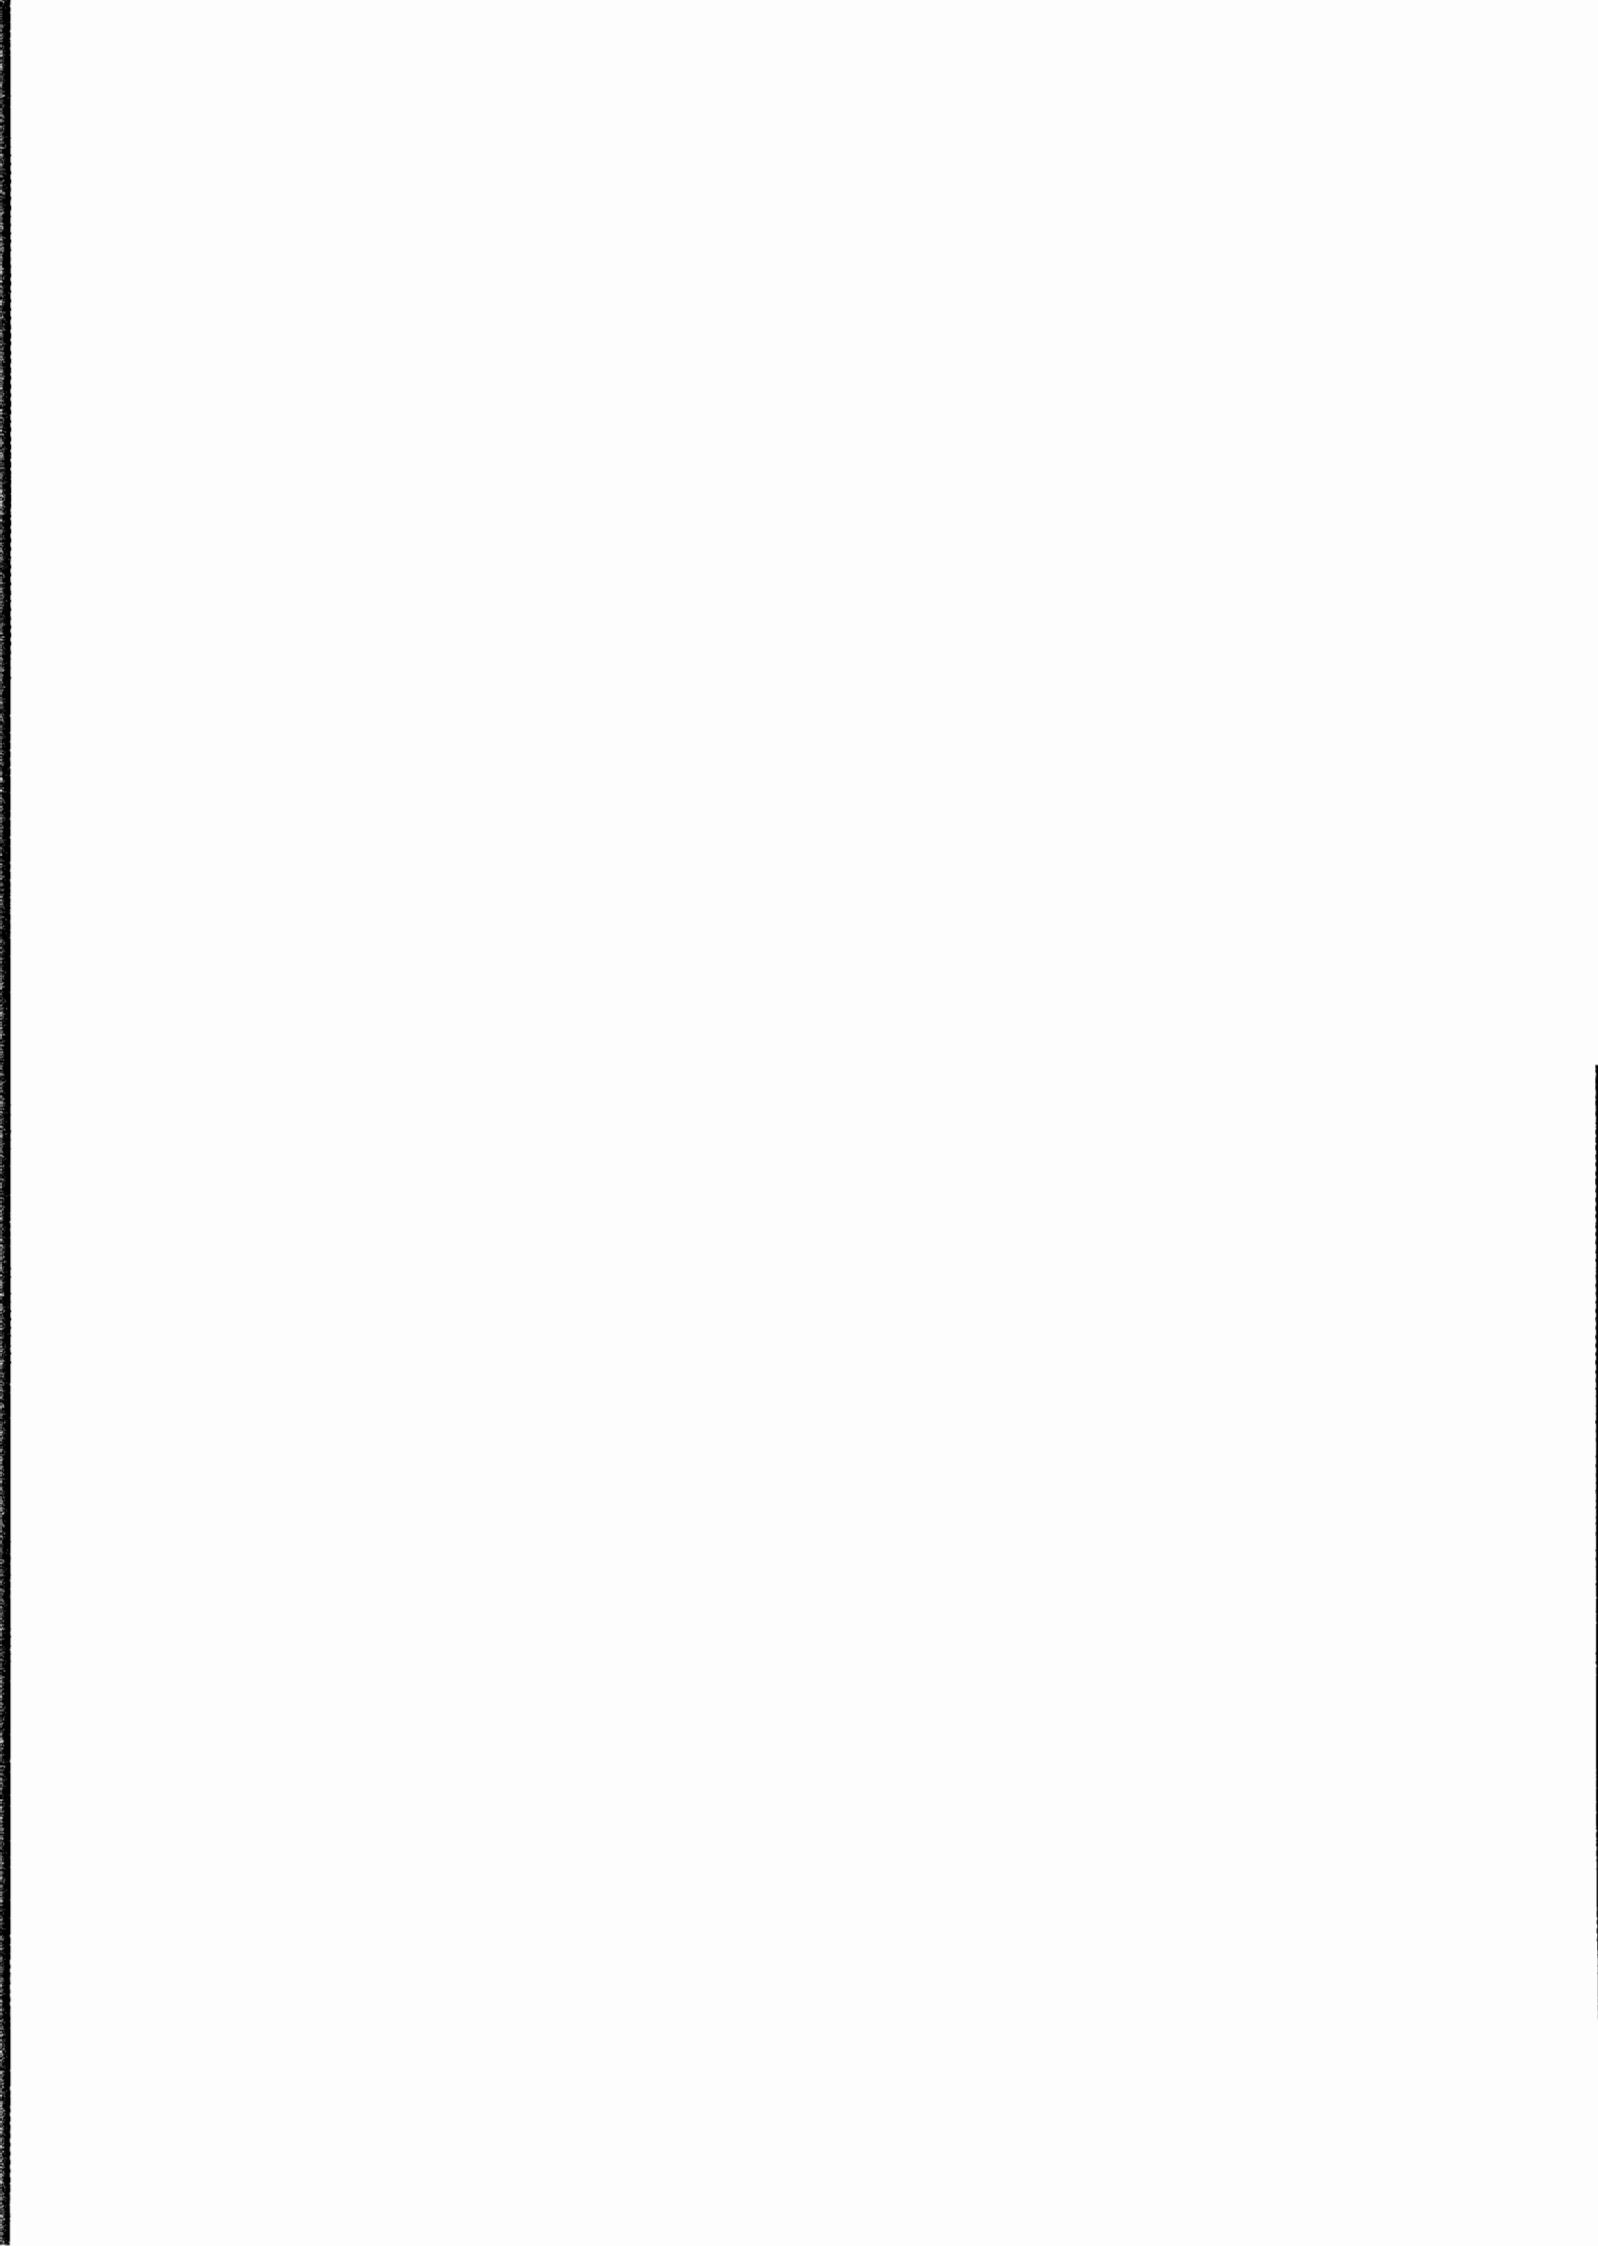

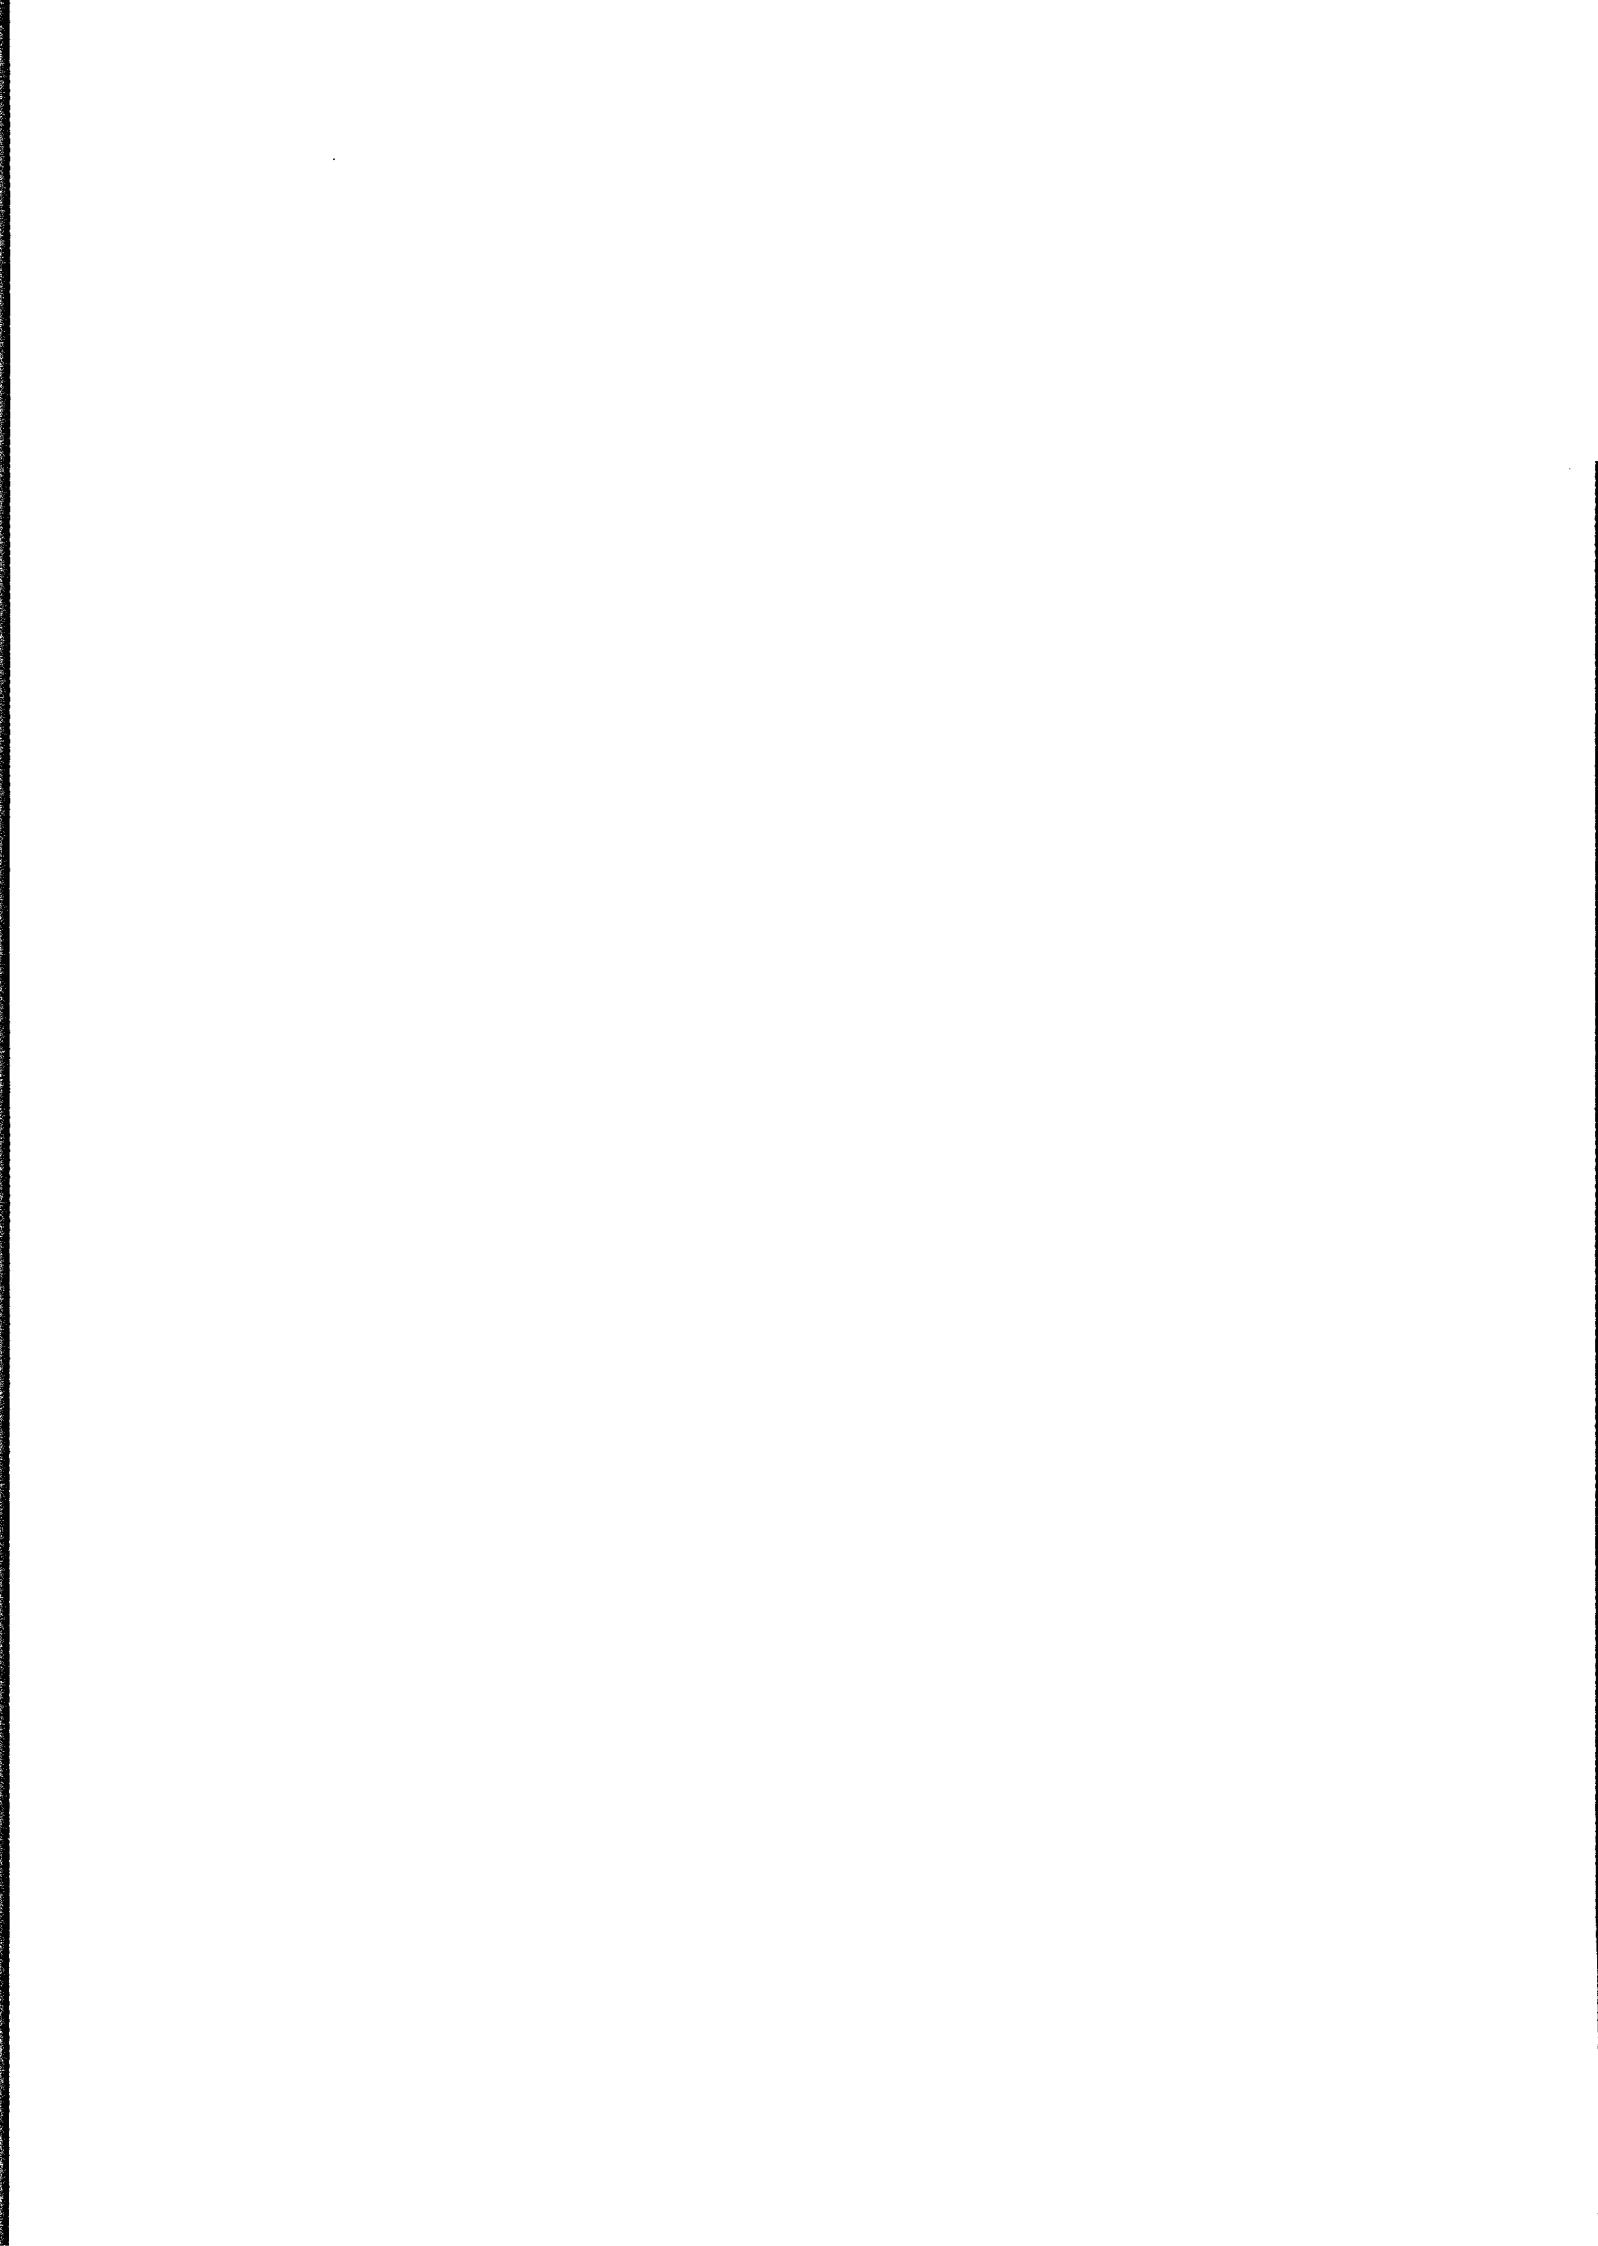

Type 4 from August 1971 (additional wiring diagram)
 (see also diagram on preceding page)

Caution
 Before starting to work on
 any part of electrical system
 disconnect battery ground strap

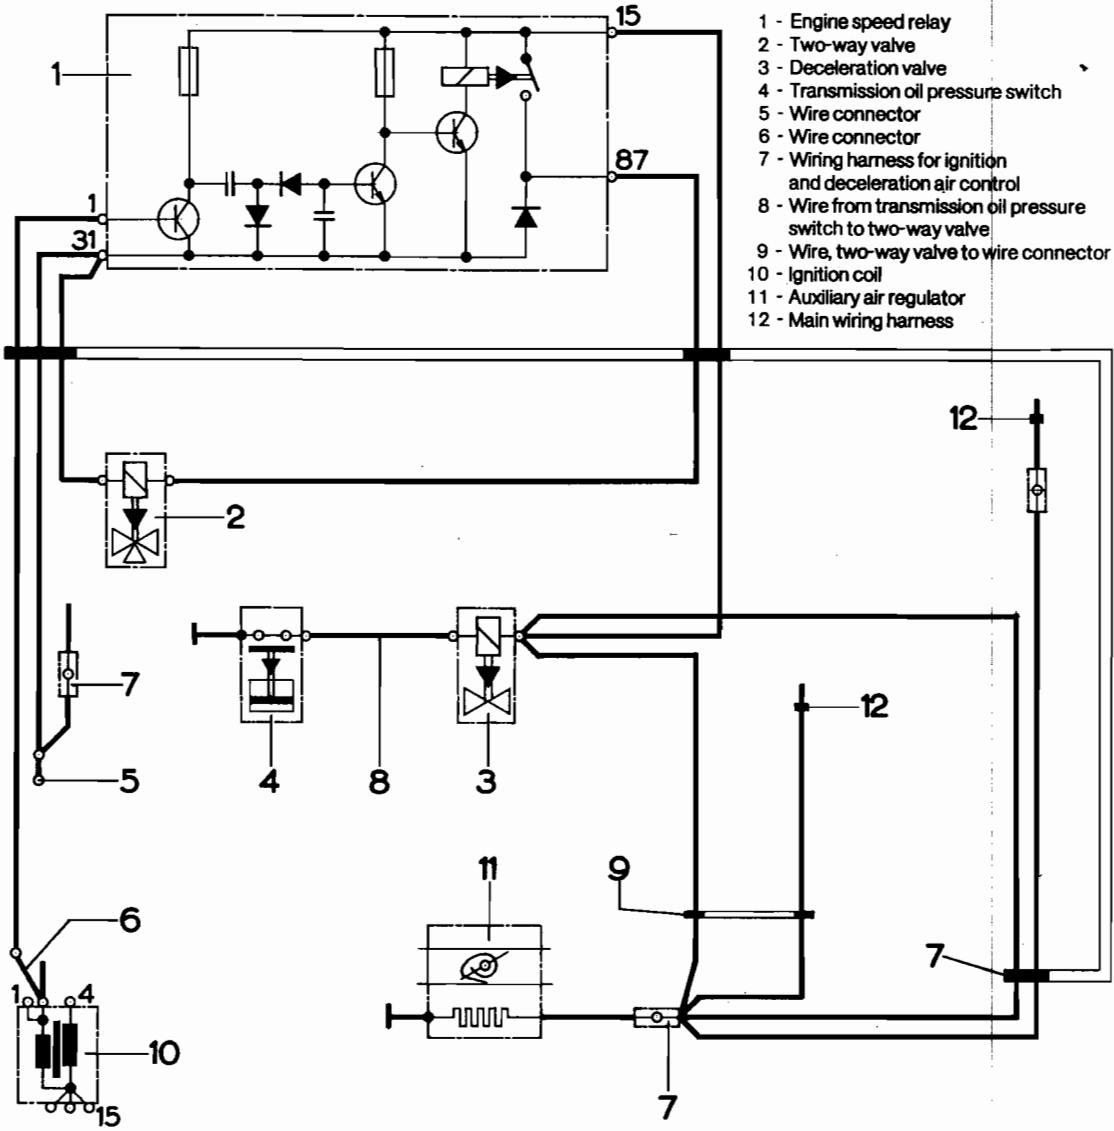

- 1 - Engine speed relay
- 2 - Two-way valve
- 3 - Deceleration valve
- 4 - Transmission oil pressure switch
- 5 - Wire connector
- 6 - Wire connector
- 7 - Wiring harness for ignition and deceleration air control
- 8 - Wire from transmission oil pressure switch to two-way valve
- 9 - Wire, two-way valve to wire connector
- 10 - Ignition coil
- 11 - Auxiliary air regulator
- 12 - Main wiring harness

Wiring diagram



Wiring
diagram

